Publication No. 981902
September 1996
Supersedes September 1992

PARTS LIST
for the
Kodak M35-M and M35A-M *X-OMAT* PROCESSORS

© Eastman Kodak Company

PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

This publication is part of a series of instruction books that provides technical support information on the *Kodak* M35-M and M35A-M *X-Omat* PROCESSORS. If you need an additional or replacement publication, order it through your Eastman Kodak Representative using the Publication Part Numbers below.

Figure 0–1 **Related Publications for the M35-M and M35A-M Processors**

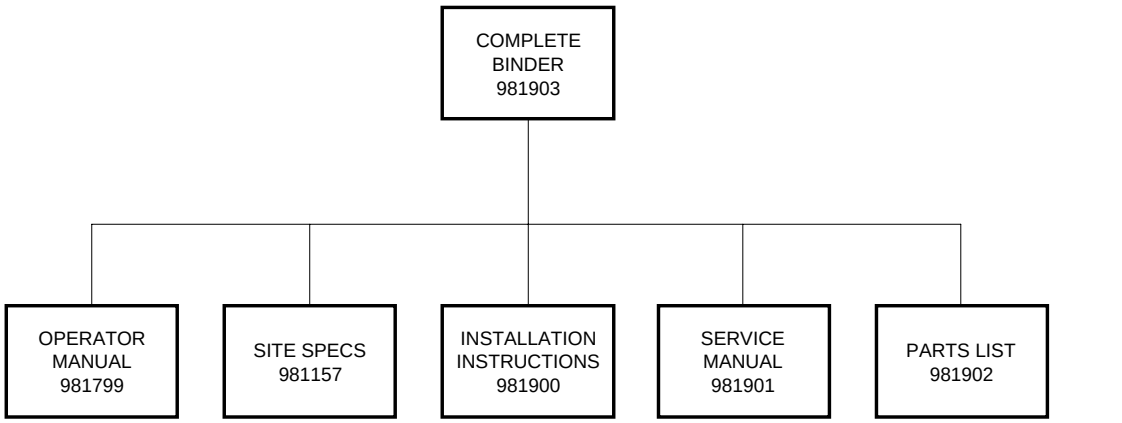

Table of Contents

Description	Page
Covers, Panels, and Subassemblies	1-1
Feed End	1-2
Receiving End	1-4
Racks and Crossovers - Quick Reference	2-1
Racks and Crossovers	3-1
Detector Crossover - Drive Side	3-2
Detector Crossover - Nondrive Side	3-4
Developer/Fixer Crossover - Drive Side	3-6
Developer/Fixer Crossover - Nondrive Side	3-8
Fixer/Wash Crossover - Drive Side	3-10
Fixer/Wash Crossover - Nondrive Side	3-12
Developer Rack - Top Rollers	3-14
Fixer Rack - Top Exit Rollers	3-16
Wash Rack - Top Exit Rollers	3-18
Developer and Wash Racks - Other Rollers	3-20

Fixer Rack - Other Rollers . . . 3-22
Developer Turnaround Assembly . . . 3-24
Fixer and Wash Turnaround Assemblies . . . 3-26
Dryer Rack - Frame . . . 3-28
Dryer Rack - Rollers . . . 3-30
Dryer Rack - Miscellaneous Parts . . . 3-32
Main Drive Assembly . . . 4-1
Main Drive Shaft and Motor . . . 4-2
Blower Assembly . . . 5-1
Blower Assembly . . . 5-2
Plumbing . . . 6-1
Developer Plumbing Circulation Diagram . . . 6-2
Fixer and Wash Plumbing Circulation Diagram . . . 6-4
Developer Thermowell Assembly . . . 6-6
Heat Exchangers . . . 6-7
Recirculation Pump . . . 6-9
Replenishment Pump . . . 6-11
Weirs . . . 6-13
Electrical . . . 7-1
Switches, Safelight Receptacle, and CB3 . . . 7-2
Electrical Box . . . 7-4
Miscellaneous . . . 8-1
Miscellaneous Parts . . . 8-2
Accessories . . . 8-4
120 Power Cord, Wall Receptacle , and Lighttight Feed Tray . . . 8-6
Replenishment Tank Kits . . . 8-7
Seismic Bracket . . . 8-8
Numerical Parts Index . . . 9-1
Alphabetical Parts Index . . . 10-1
Publication History . . . 11-1

Section 1: Covers, Panels, and Subassemblies

Figure 1–1 Feed End

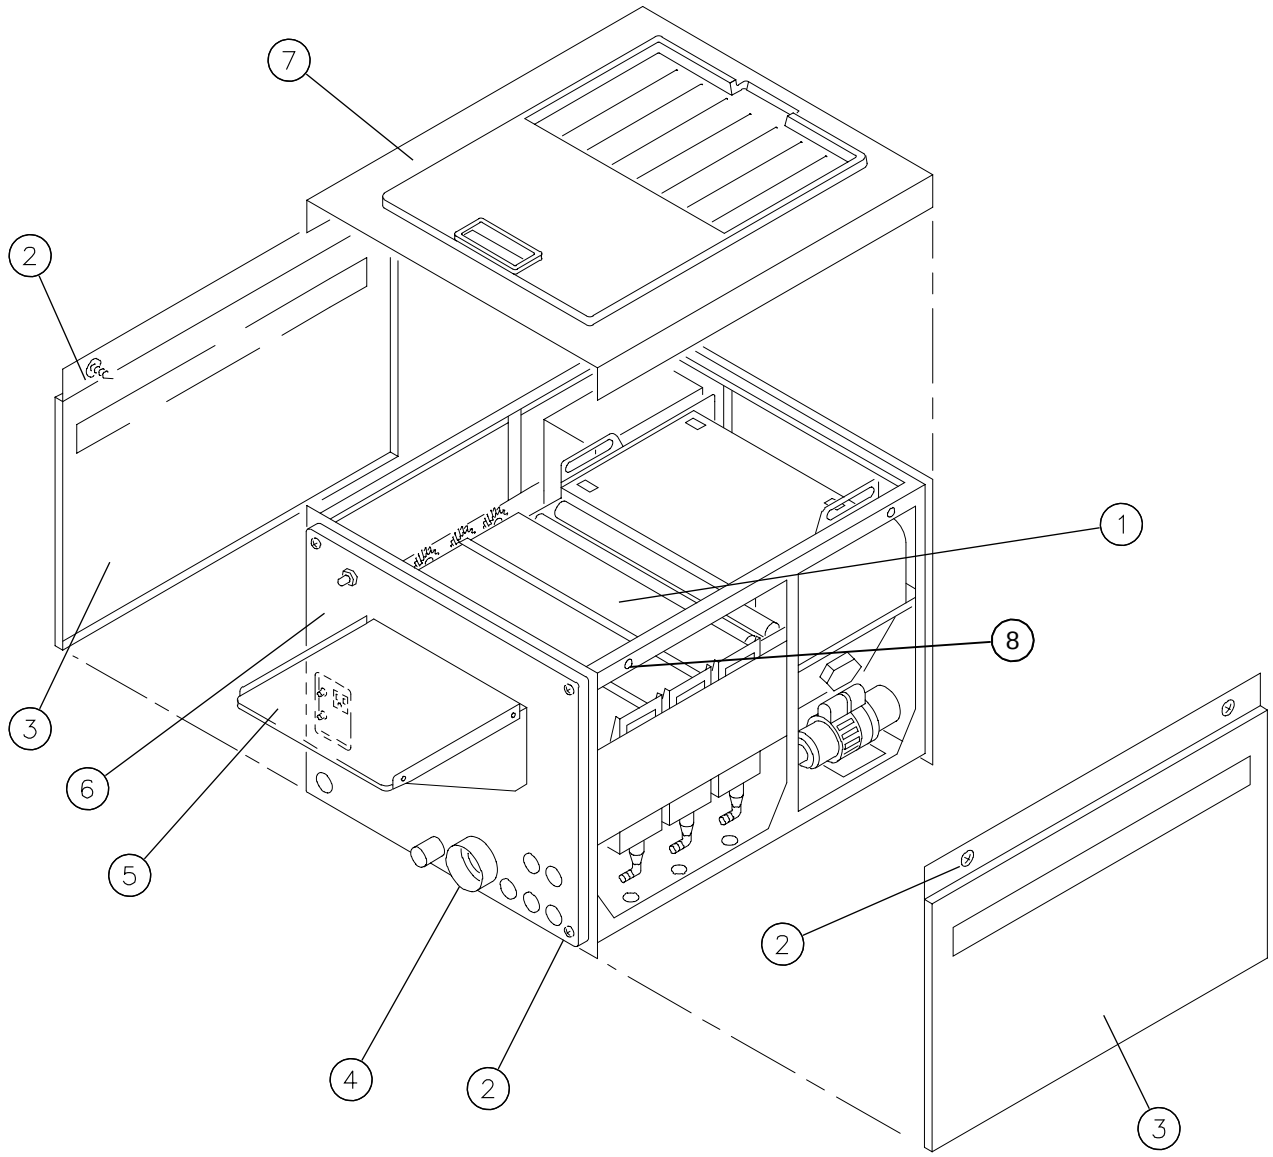

H112_0022ECB
H112_0022EC

Figure 1–1

Item	Part No.	Description	Qty.	Notes
1	287680	Cover - Evaporation	2	
2	7B8229	Screw - Captive, and washer	8	
	499753	Retainer	8	
3	914263	Side Panel	2	
4	468535	Adapter - Exhaust	1	
	544194	Screw	2	
	852620	Nut	2	
	165627	Washer	2	
	853096	Washer - Lock	2	
5	1C4506	Feed Shelf Assembly	1	##Includes the Feed Shelf and the Protector. ##
	1C4507	Protector	1	
	852805	Screw	4	##Not shown ##
	853086	Washer - Lock	4	##Not shown ##
	852799	Washer	4	##Not shown ##
6	990421	Panel - Feed End	1	
7	914261	Cover Assembly	1	##Includes the following items. ##
	963312	Magnet	2	
	484688	Handle	1	
	485291	Handle - Support	1	
	852682	Screw	2	
	853100	Washer - Lock	2	
	470363	Label	1	
8	261181	Clip - Retaining	4	

Figure 1–2 Receiving End

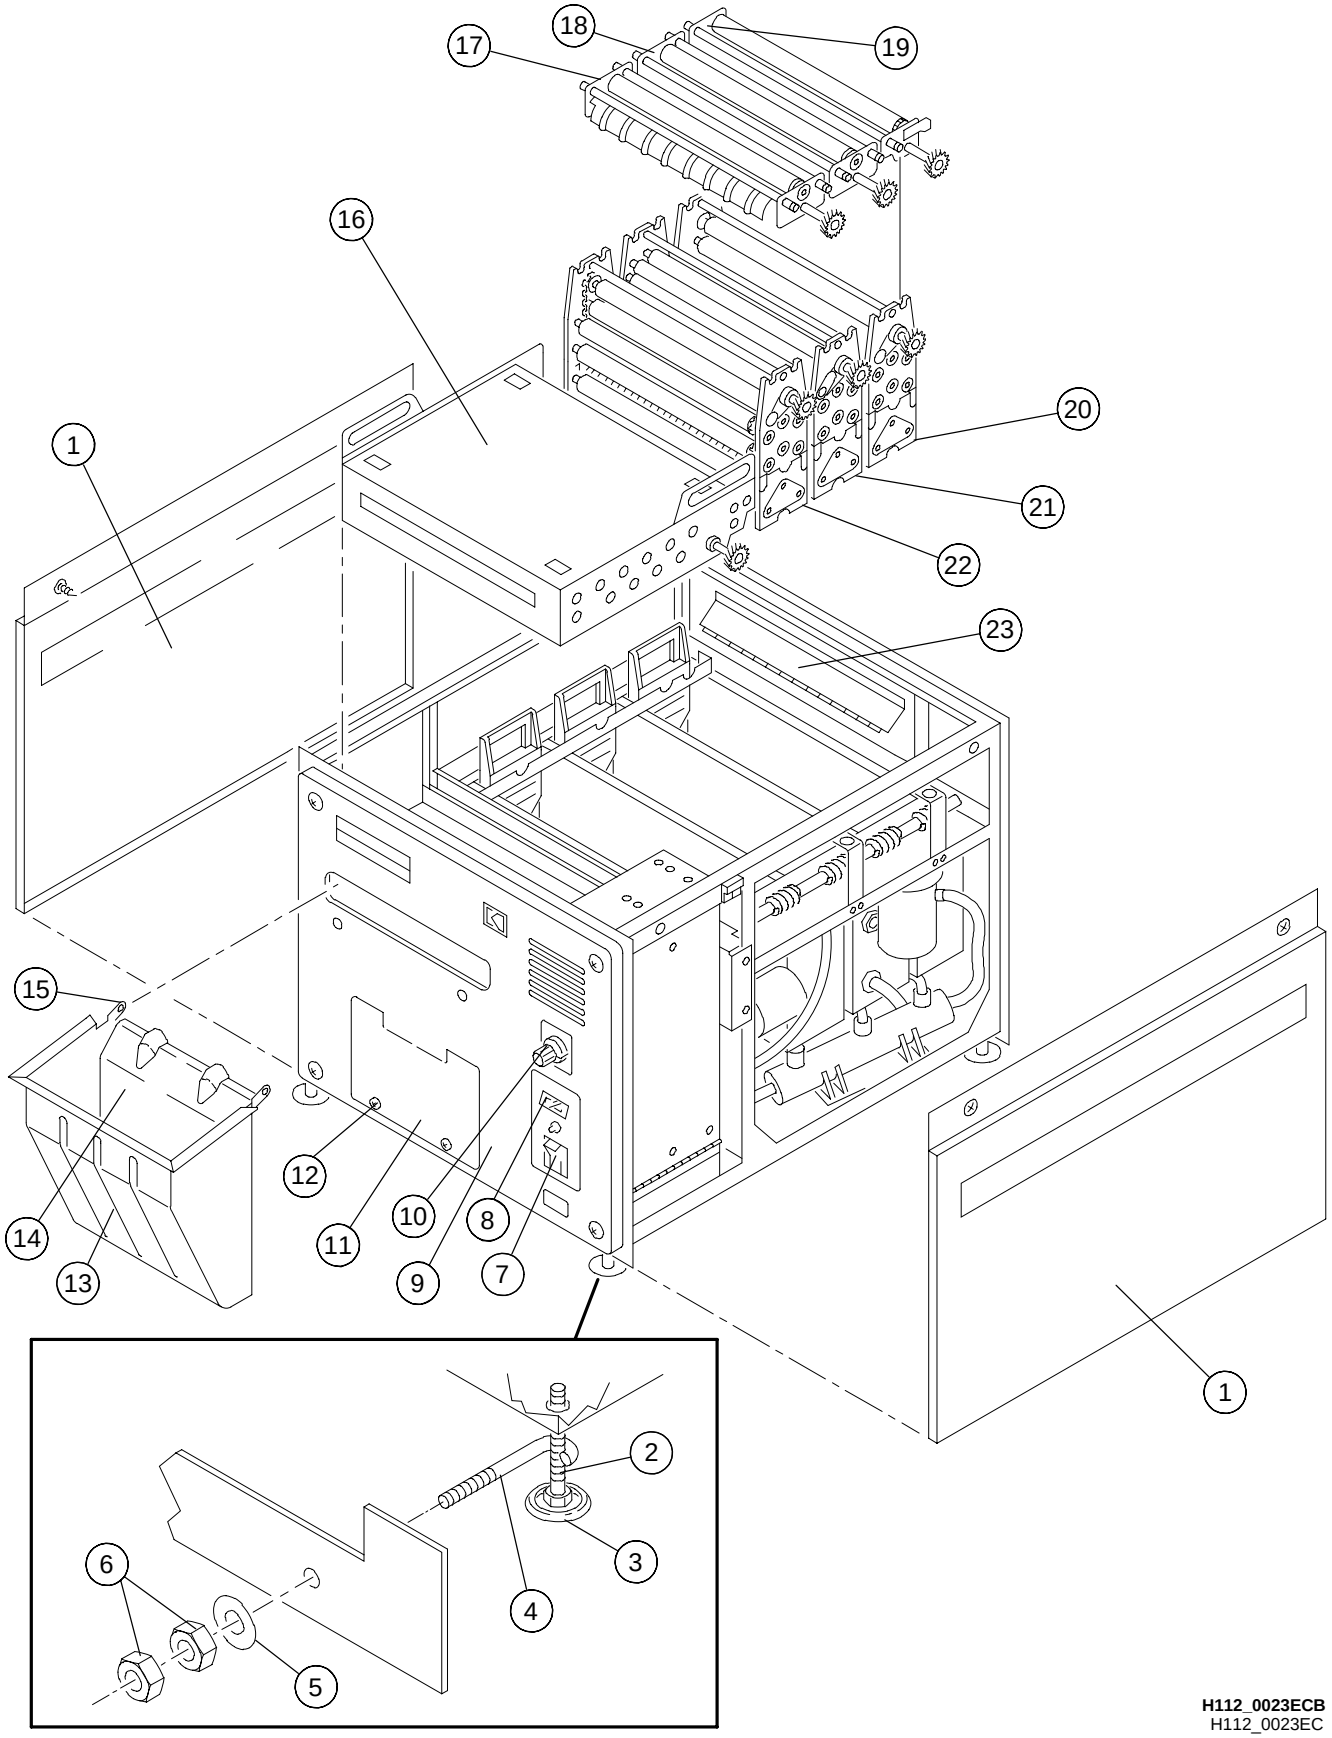

Figure 1–2

Item	Part No.	Description	Qty.	Notes
1	914263	Side Panel	2	
2	459229	Screw - Leveling	4	
3	459548	Plate - Floor	4	
4	489726	Bolt - Hook	2	
5	564694	Washer	2	
6	852623	Nut - Hook	4	
7	914441	Circuit Breaker - CB1	1	
8	748516	Thermometer - Digital	1	##Also called the Digital Temperature Display. Includes the following 3 items. ##
	968818	Bezel	1	
	968819	Mask	1	
	968823	EMI Shield	1	
9	914260	Exit Panel	1	
	719490	Kodak Corporate Symbol	1	
10	834692	Knob - Temperature Control, with pointer	1	
	595860	Knob - Locking	1	
	779524	Potentiometer Assembly - Dryer Temperature	1	
11	333975	Cover - Pump Access	1	
12	261182	Screw - Captive, and washer	2	
	499753	Retainer	2	
13	261183	Bin - Receiving	1	
14	261185	Deflector	1	
15	486742	Fastener - Bin	2	
16	333796	Dryer Rack Assembly	1	
17	261276	Fixer/Wash Crossover Assembly	1	
18	333795	Developer/Fixer Crossover Assembly	1	
19	5B6163	Detector Crossover Assembly	1	
20	1C7315	Developer Rack Assembly	1	
21	748165	Fixer Rack Assembly	1	
22	261277	Wash Rack Assembly	1	
23	1C4504	Strip - Light Lock	1	
	852682	Screw	3	
	853100	Washer - Lock	3	
	852611	Washer	3	
	240226	Power Cord Assembly	1	##For the M35A-M Processor (120 volt), not shown ##

Section 2: Racks and Crossovers - Quick Reference

Note

This Section summarizes the major parts in each Roller Assembly.

See Section 3: Racks and Crossovers and Section 5: Dryer for the remaining parts.

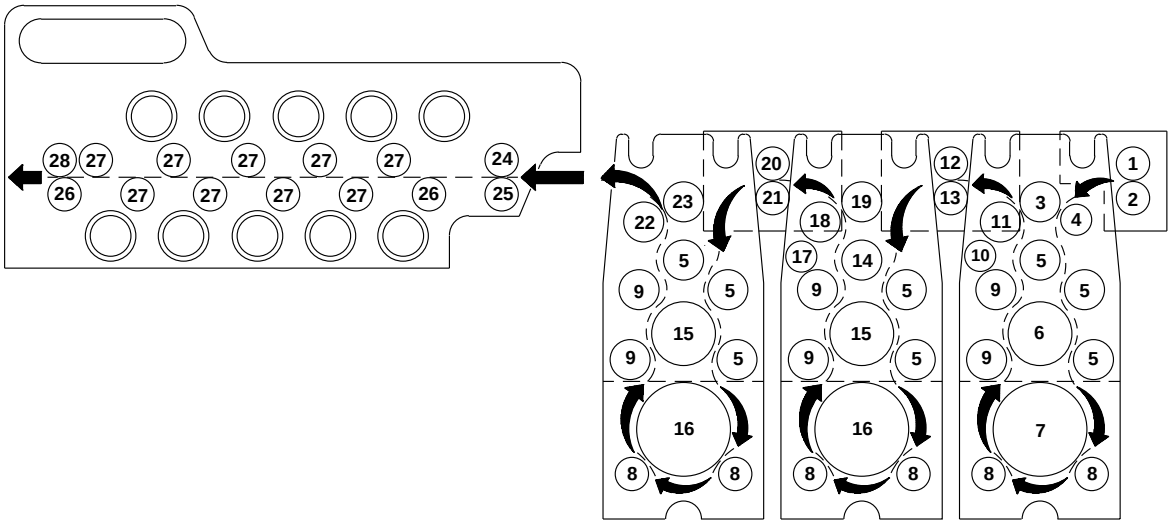

H112_0221BC

Note

The numbers in the above figure represent the positions of the Rollers in the Racks and Crossovers. See the following table for parts between the Sideplates.

Table 2–1 Racks and Crossovers - Quick Reference Table

Pos. No.	Part No.	Description
1	246883	Roller, black rubber, grooved
	650703	Bearing
	287037	Shaft
2	246882	Roller, black rubber, grooved
	650707	Bearing
	287039	Shaft
3	1C7636	Roller, stainless steel
	287027	Shaft
	459355	Spacer
	463100	Washer
	454354	Key
	458240	Chain
	458285	Sprocket
	650710	Bearing

Continued in the next column.

Pos. No.	Part No.	Description
4	911804	Roller, tan phenolic
	474777	Stud
5	1C7555	Roller, black plastic
	474777	Stud
6	8B6581	Roller, black plastic
	474777	Stud
7	1C7640	Roller, black rubber
	650702	Bearing
	287003	Shaft
	5B6775	Spacer
8	1C7558	Roller, black plastic
	287003	Shaft
9	1C7556	Roller, black plastic
	474777	Stud

Table continued on the next page.

Table 2–2 Racks and Crossovers - Quick Reference Table

Pos. No.	Part No.	Description
10	287032	Roller, black rubber
	473220	Bearing
11	1C7633	Roller, black rubber
	287003	Shaft
	459347	Collar
	852889	Setscrew
12	485406	Roller, white silicone
	490092	Bearing
13	240747	Roller, white silicone
	280060	Bearing
14	1C7557	Roller, black plastic, knurled
	474777	Stud
	287085	Shaft
15	1C7554	Roller, black plastic
	474777	Stud
	463100	Washer
16	5B6077	Roller, tan phenolic
	650702	Bearing
	287003	Shaft
17	287032	Roller, black rubber
	473220	Bearing
18	1C7636	Roller, stainless steel
	287003	Shaft
	459347	Collar
	852889	Setscrew
19	287028	Roller, black rubber
	650710	Bearing
	287027	Shaft
	459355	Spacer
	477092	Spacer
	458240	Chain
	458285	Sprocket
	454354	Key
	463100	Washer
20	748147	Roller, tan phenolic
	650701	Bearing
	287037	Shaft
21	287048	Roller, black rubber
	650703	Bearing
	287047	Shaft
22	246918	Roller, white silicone
	650701	Bearing
	474100	Spacer
	175381	Pin
	477093	Spacer
23	246917	Roller, white silicone
	474100	Spacer
	479820	Spring
	463100	Washer
	458240	Chain
	454285	Sprocket
	454354	Key
	597096	Split Spacer
	175381	Pin
	463950	O-Ring
	458384	Gear
	650702	Bearing
24	287083	Roller, tan phenolic
	287079	Shaft
	482274	Spacer
	571241	Bearing
	543993	Bearing
25	287656	Roller, tan phenolic
	287085	Shaft
	543884	Pin
	183851	O-Ring
	571241	Bearing
	543993	Bearing
26	287081	Roller, tan phenolic
	287088	Shaft
	571241	Bearing
	543993	Bearing
	183851	O-Ring
	543884	Pin
27	287067	Roller, tan phenolic
	489727	Stud
28	287078	Roller, black rubber
	287079	Shaft
	482277	Spacer
	571241	Bearing
	543993	Bearing

Continued in the next column.

Section 3: Racks and Crossovers

Figure 3–1 Detector Crossover - Drive Side

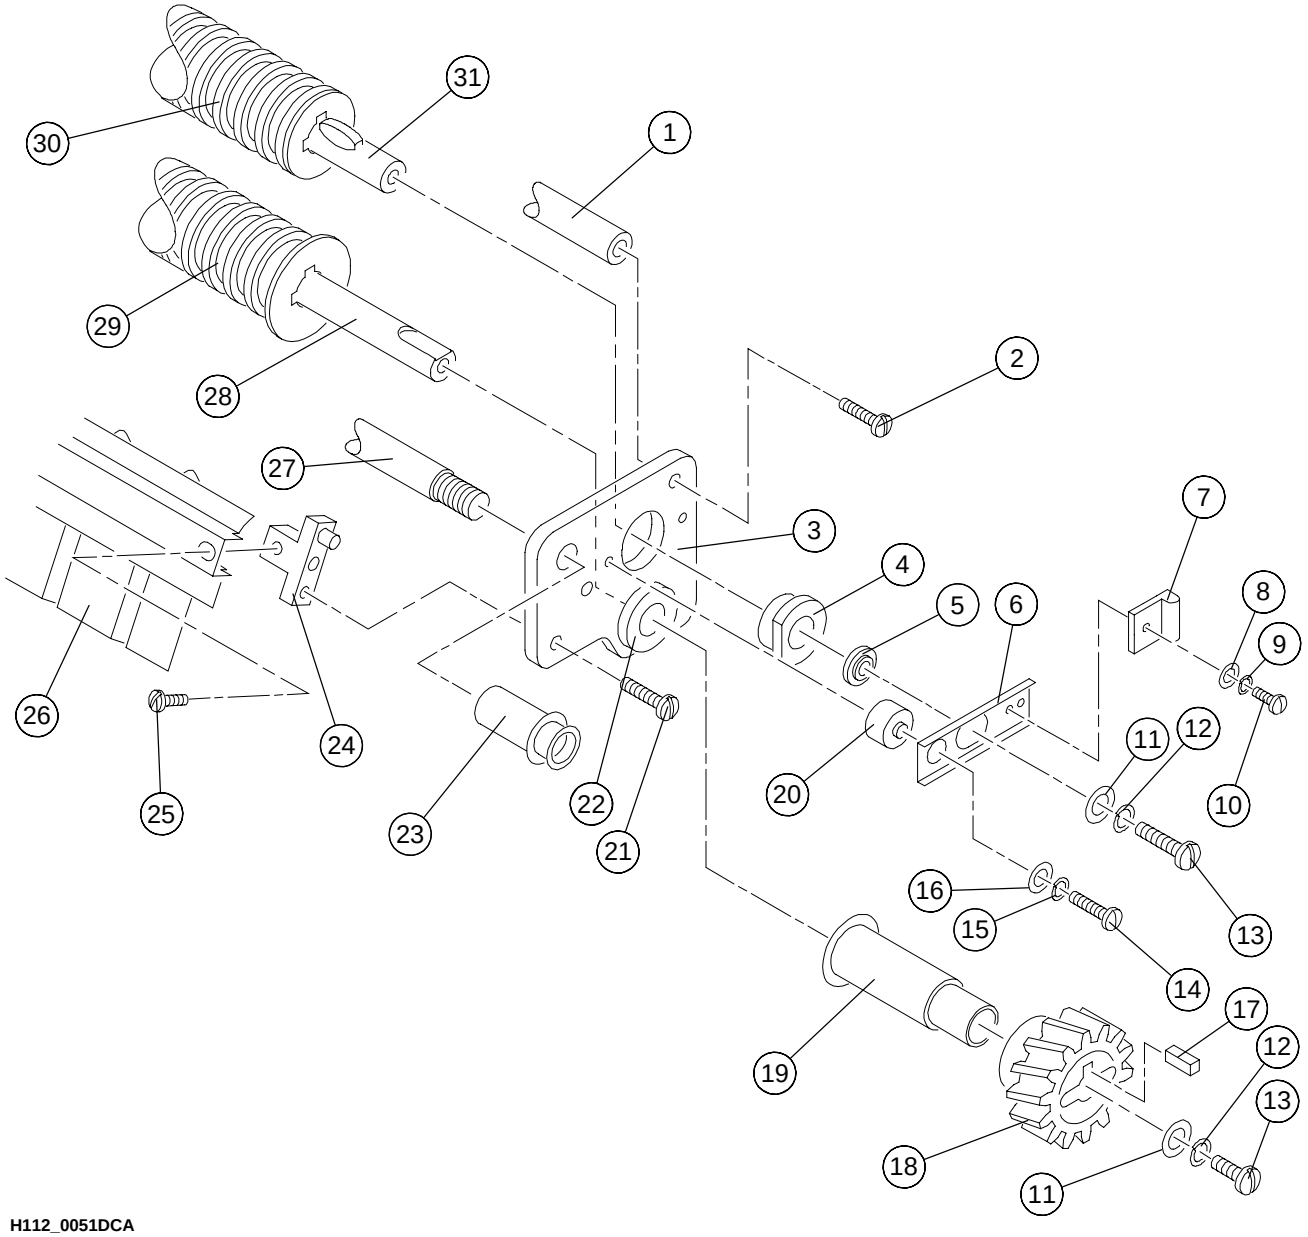

H112_0051DCA
H112_0051DA

Figure 3–1

Item	Part No.	Description	Qty.
	5B6163	Detector Crossover Assembly	1
1	5B6150	Rod - Tie	1
2	852807	Screw	2
3	246879	Sideplate - Detector Crossover	2
4	650703	Bearing	2
5	5B6527	Bearing - Rocker	2
6	474180	Support	2
7	650876	Actuator - Magnet	2
8	575822	Washer	2
9	187283	Washer - Lock	2
10	575821	Screw	2
11	852611	Washer	4
12	853087	Washer - Lock	4
13	852682	Screw	4
14	544194	Screw	2
15	853096	Washer - Lock	2
16	165627	Washer	2
17	452044	Key	1
18	550781	Gear - Drive, crossover	1
19	458174	Spacer	1
20	489997	Standoff	2
21	5B6316	Screw	2
22	650707	Bearing	2
23	472756	Nut - Tie Rod, nylon	1
24	474596	Bracket - Guide Shoe	2
25	852941	Screw	2
26	287041	Shoe - Guide	1
27	287036	Rod - Tie	1
28	287039	Shaft - Drive	1
29	246882	Roller - Detector, drive	1
30	246883	Roller - Detector, driven	1
31	287037	Shaft	1

Figure 3–2 Detector Crossover - Nondrive Side

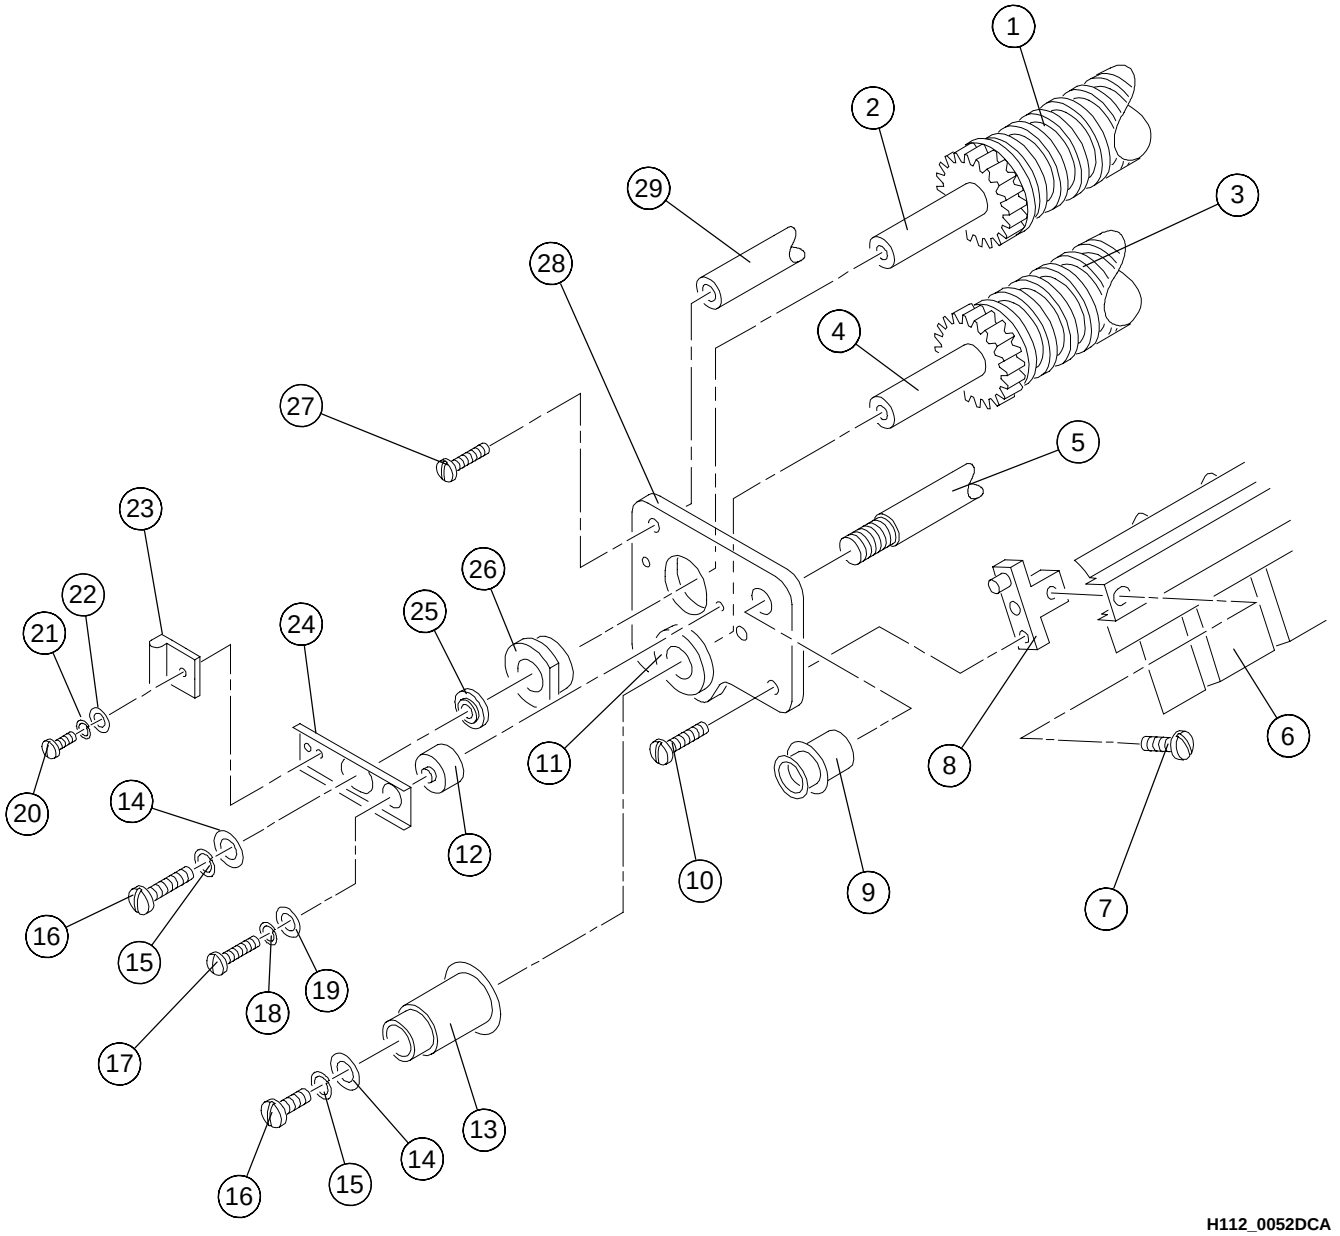

Figure 3–2

Item	Part No.	Description	Qty.
	5B6163	Detector Crossover Assembly	1
1	246883	Roller - Detector, driven	1
2	287037	Shaft	1
3	246882	Roller - Detector, drive	1
4	287039	Shaft - Drive	1
5	287036	Rod - Tie	1
6	287041	Shoe - Guide	1
7	852941	Screw	2
8	474596	Bracket - Guide Shoe	2
9	472755	Nut - Tie Rod, nylon	1
10	5B6316	Screw	2
11	650707	Bearing	2
12	489997	Standoff	2
13	458236	Spacer	1
14	852611	Washer	4
15	853087	Washer - Lock	4
16	852682	Screw	4
17	544194	Screw	2
18	853096	Washer - Lock	2
19	165627	Washer	2
20	575821	Screw	2
21	187283	Washer - Lock	2
22	575822	Washer	2
23	650876	Actuator - Magnet	2
24	474180	Support	2
25	5B6527	Bearing - Rocker	2
26	650703	Bearing	2
27	852807	Screw	2
28	246879	Sideplate - Detector Crossover	2
29	5B6150	Rod - Tie	1

Figure 3–3 Developer/Fixer Crossover - Drive Side

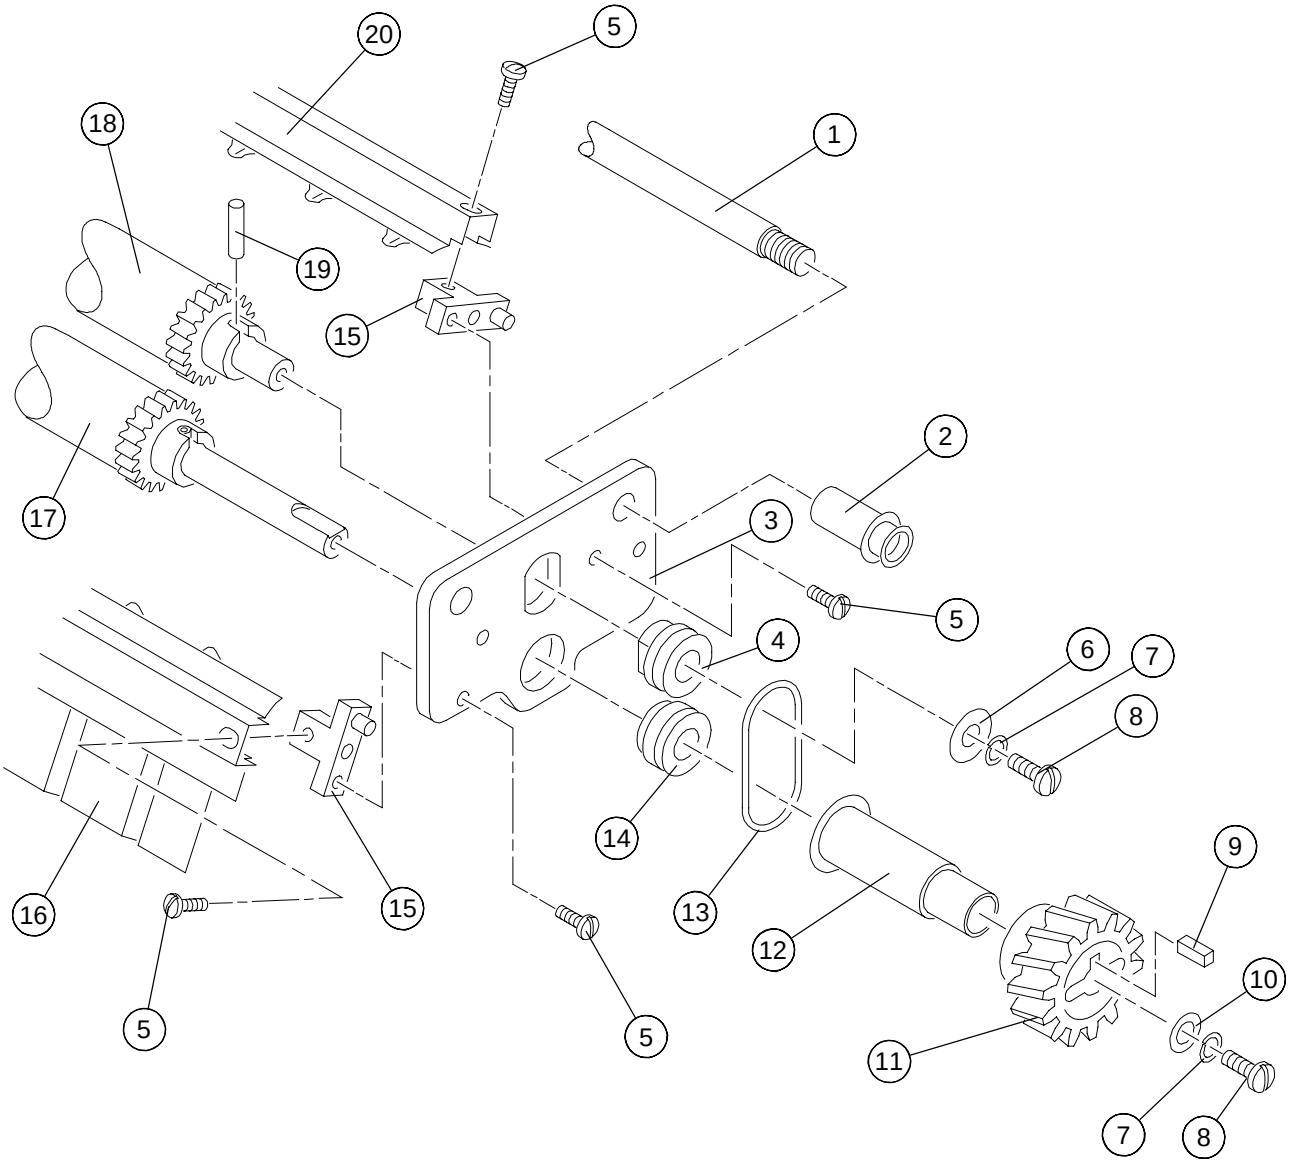

H112_0057DCA
H112_0057DA

Figure 3–3

Item	Part No.	Description	Qty.	Notes
	333795	Developer/Fixer Crossover Assembly	1	
1	287036	Rod - Tie	2	
2	472756	Nut - Tie Rod, nylon	2	##On drive side ##
3	477005	Sideplate	2	
4	490092	Bearing	2	
5	5B6316	Screw	4	
6	459946	Washer - Identification	1	
7	853087	Washer - Lock	2	
8	852682	Screw	2	
9	452044	Key	1	
10	852611	Washer	2	
11	550781	Gear - Drive, crossover	1	
12	240065	Spacer	1	
13	459344	Spring	2	
14	240060	Bearing	2	
15	474596	Bracket - Guide Shoe	4	
16	287049	Shoe - Guide	1	
17	240747	Roller	1	##Drive Roller ##
18	485406	Roller	1	##Driven Roller; includes a Pin. ##
19	544081	Pin	1	##3/32 x 5/8 in. ##
20	287045	Shoe - Guide	1	

Figure 3–4 Developer/Fixer Crossover - Nondrive Side

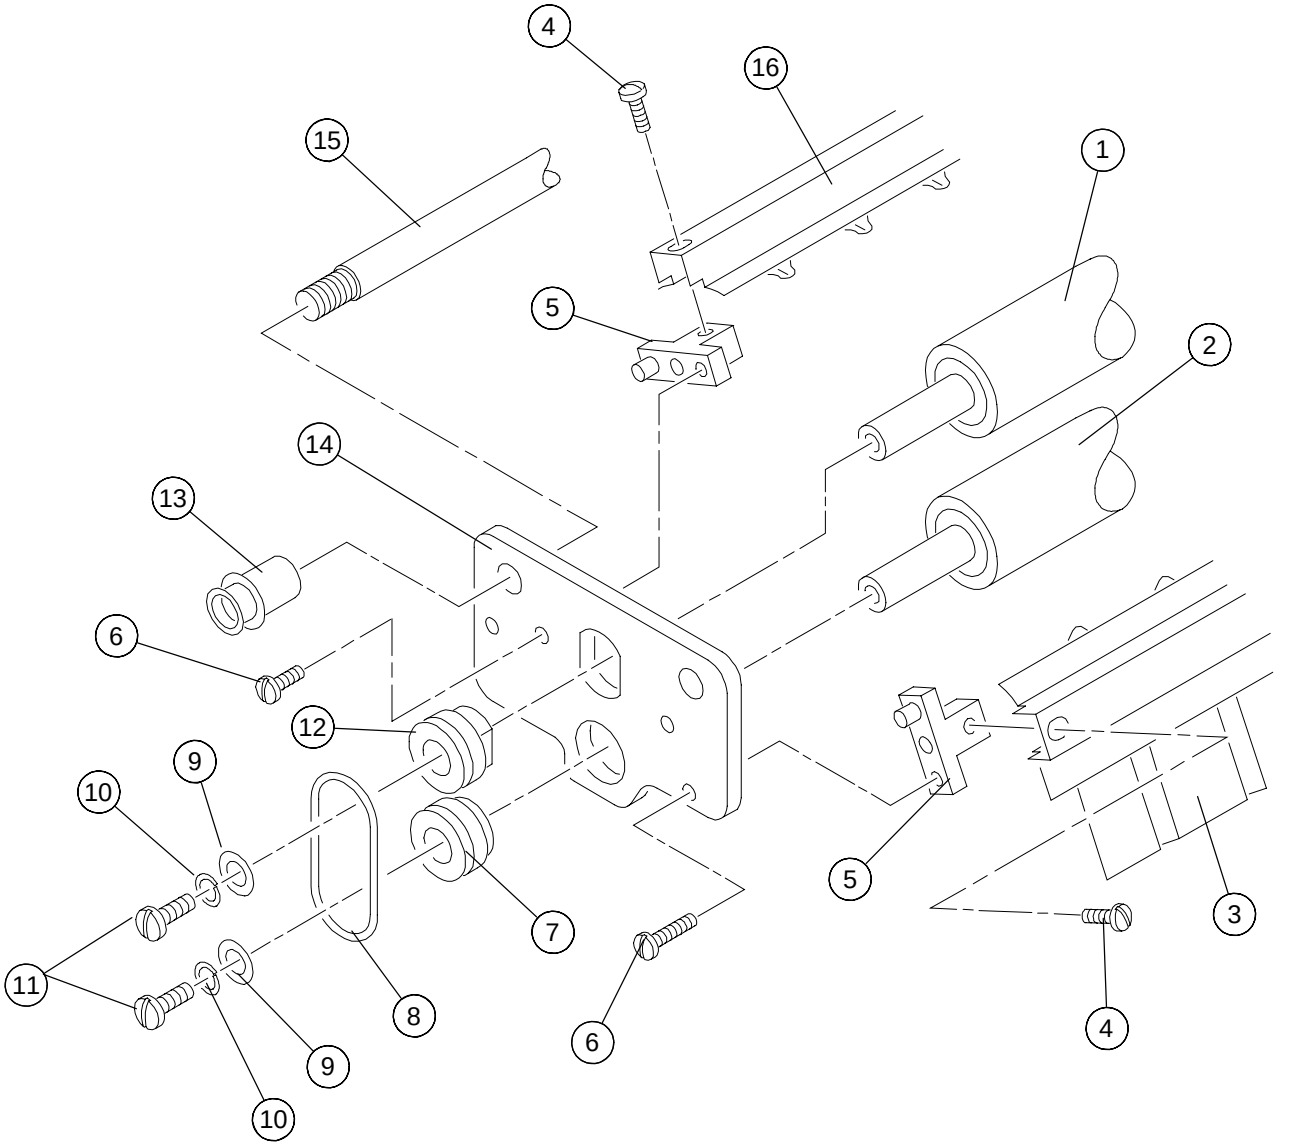

H112_0058DCA
H112_0058DA

Figure 3–4

Item	Part No.	Description	Qty.	Notes
	333795	Developer/Fixer Crossover Assembly	1	
1	485406	Roller	1	##Driven Roller ##
2	240747	Roller	1	##Drive Roller ##
3	287049	Shoe - Guide	1	
4	852941	Screw	4	
5	474596	Bracket - Guide Shoe	4	
6	5B6316	Screw	4	
7	240060	Bearing	2	
8	459344	Spring	2	
9	852611	Washer	3	
10	853087	Washer - Lock	4	
11	852972	Screw	4	
12	490092	Bearing	2	
13	472755	Nut - Tie Rod, nylon	2	##On Nondrive side ##
14	477005	Sideplate	2	
15	287036	Rod - Tie	2	
16	287045	Shoe - Guide	1	

Figure 3–5 Fixer/Wash Crossover - Drive Side

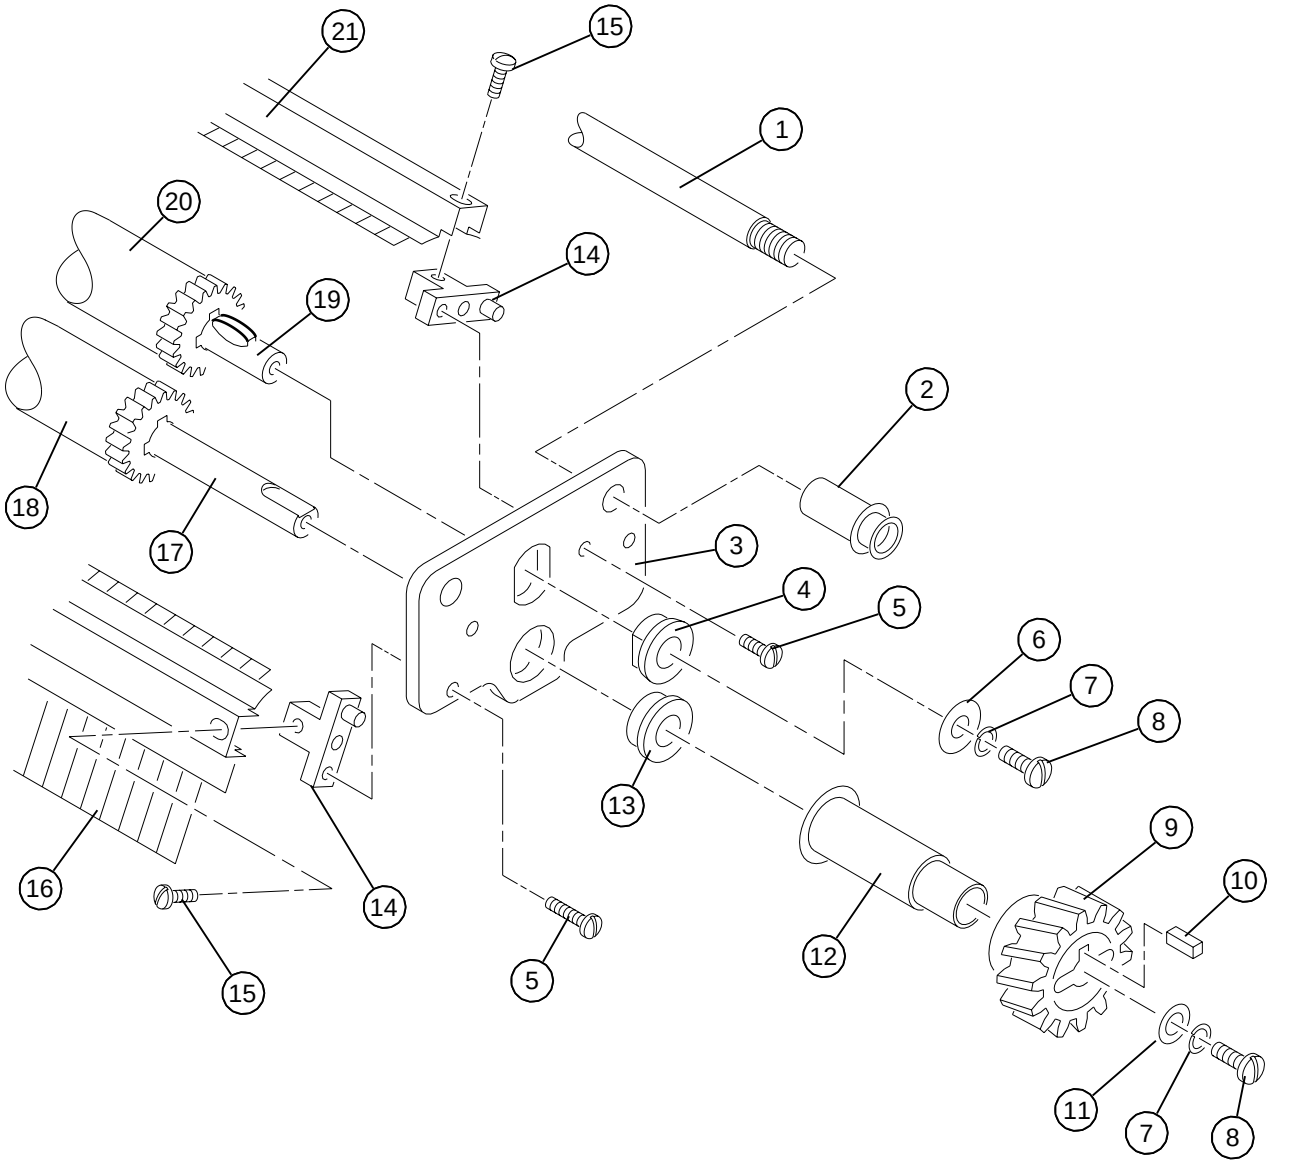

H112_0195DCA
H112_0195DA

Figure 3–5

Item	Part No.	Description	Qty.	Notes
	261276	Fixer/Wash Crossover Assembly	1	
1	287036	Rod - Tie	2	
2	472756	Nut - Tie Rod, nylon	2	##On drive side ##
3	477005	Sideplate	2	
4	650701	Bearing	2	
5	5B6316	Screw	4	
6	459947	Washer - Identification	1	
7	853087	Washer - Lock	4	
8	852682	Screw	4	
9	550781	Gear - Drive, crossover	1	
10	452044	Key	1	
11	852611	Washer	3	
12	458174	Spacer	1	
13	650703	Bearing	2	
14	474596	Bracket - Guide Shoe	4	
15	852941	Screw	4	
16	990308	Shoe - Guide	1	
17	287047	Shaft	1	
18	287048	Roller	1	##Drive Roller ##
19	287037	Shaft	1	
20	748147	Roller	1	##Driven Roller ##
21	990305	Shoe - Guide	1	

Figure 3–6 Fixer/Wash Crossover - Nondrive Side

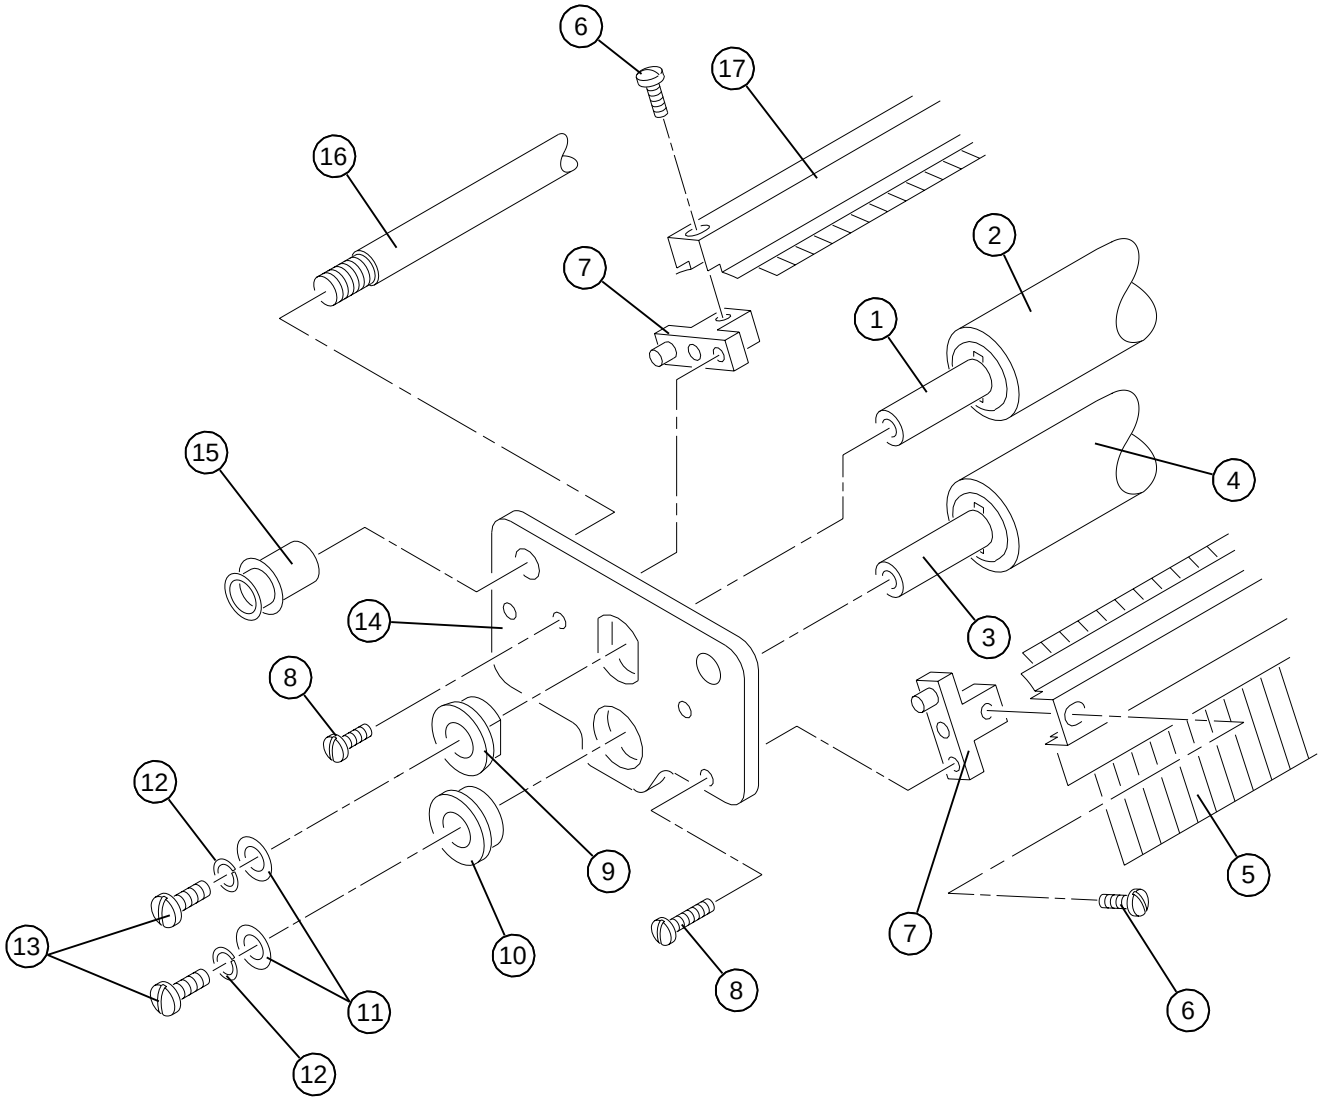

H112_0196DCA
H112_0196DA

Figure 3–6

Item	Part No.	Description	Qty.	Notes
	261276	Fixer/Wash Crossover Assembly	1	
1	287037	Shaft	1	
2	748147	Roller	1	##Driven Roller ##
3	287047	Shaft	1	
4	287048	Roller	1	##Drive Roller ##
5	990308	Shoe - Guide	1	
6	852941	Screw	4	
7	474596	Bracket - Guide Shoe	4	
8	5B6316	Screw	4	
9	650701	Bearing	2	
10	650703	Bearing	2	
11	852611	Washer	3	
12	853087	Washer - Lock	4	
13	852972	Screw	4	
14	477005	Sideplate	2	
15	472755	Nut - Tie Rod, nylon	2	##On Nondrive side only ##
16	287036	Rod - Tie	2	
17	990305	Shoe - Guide	1	

Figure 3–7 Developer Rack - Top Rollers

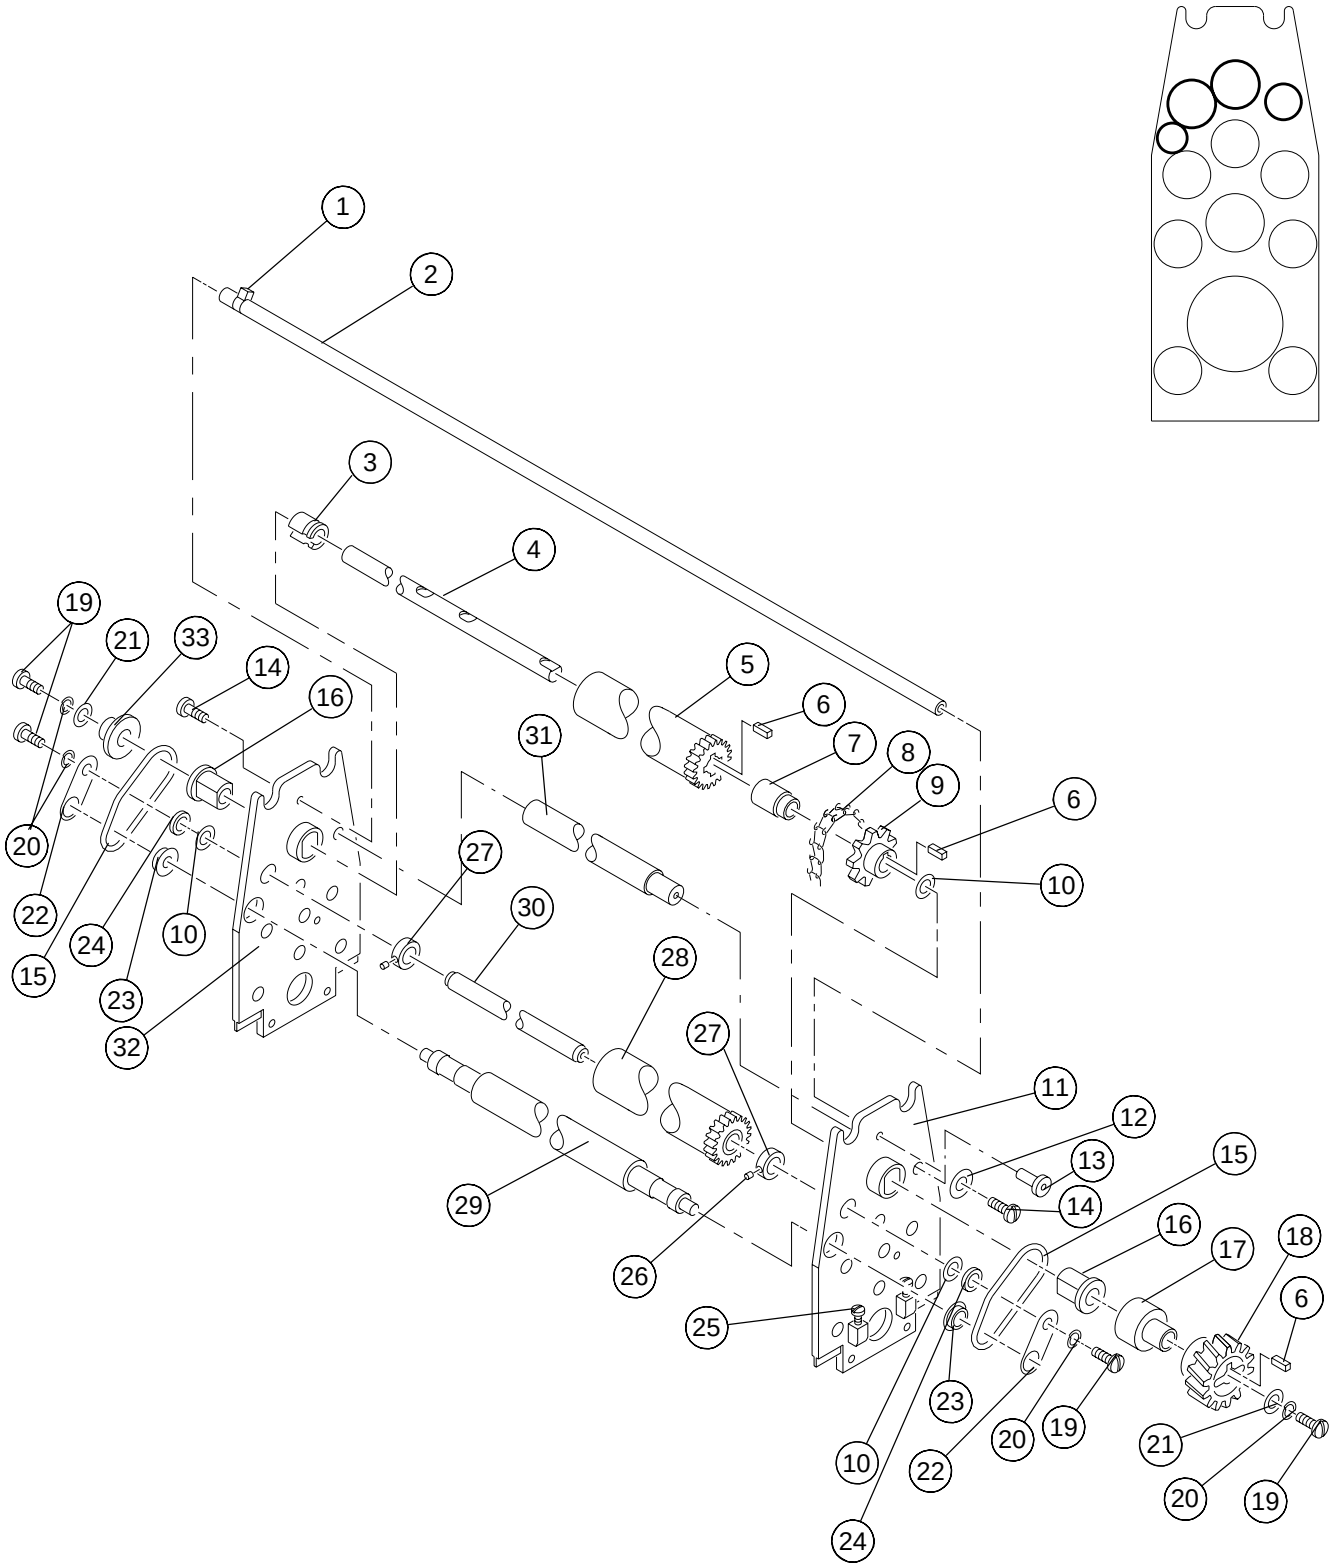

H112_0158ECA
H112_0158EA

Figure 3–7

Item	Part No.	Description	Qty.	Notes
	1C7315	Developer Rack Assembly	1	
1	240058	Tie - Red	1	##Developer Rack.##
2	287002	Rod - Tie	1	
3	477092	Spacer	1	
4	287027	Shaft	1	
5	1C7636	Roller	1	##G Roller.##
6	454354	Key	2	
7	459355	Spacer	1	
8	458240	Chain	1	
9	454285	Sprocket	1	
10	463100	Washer - Thrust	3	
11	911809	Sideplate - Drive	1	
12	459943	Washer - Identification	1	##Developer.##
13	474777	Stud	2	
14	852807	Screw	2	
15	467843	Spring	2	
16	650710	Bearing	2	
17	534791	Spacer	1	
18	550774	Gear - Drive	1	
19	852972	Screw	4	
20	853087	Washer - Lock	4	
21	852611	Washer	2	
22	473221	Plate - Keeper	2	
23	473220	Bushing	2	
24	463004	Spacer	2	
25	183624	Screw	4	
26	852889	Setscrew	2	
27	459347	Collar	2	
28	1C7633	Roller	1	##F Roller; includes 2 Bearings, Part No. 650710. ##
29	287032	Roller	1	##Rewet Roller.##
30	287003	Shaft	1	
31	911804	Roller	1	##Idler Roller.##
32	911845	Sideplate - Nondrive	1	
33	458205	Spacer	1	
	8B7305	Turnaround Adjustment Tool	1	Not shown.
	1C7120	Smooth Guide Shoe Kit - M35	1	Not shown. Includes 3 Guide Shoes 5B6445.

Figure 3–8 Fixer Rack - Top Exit Rollers

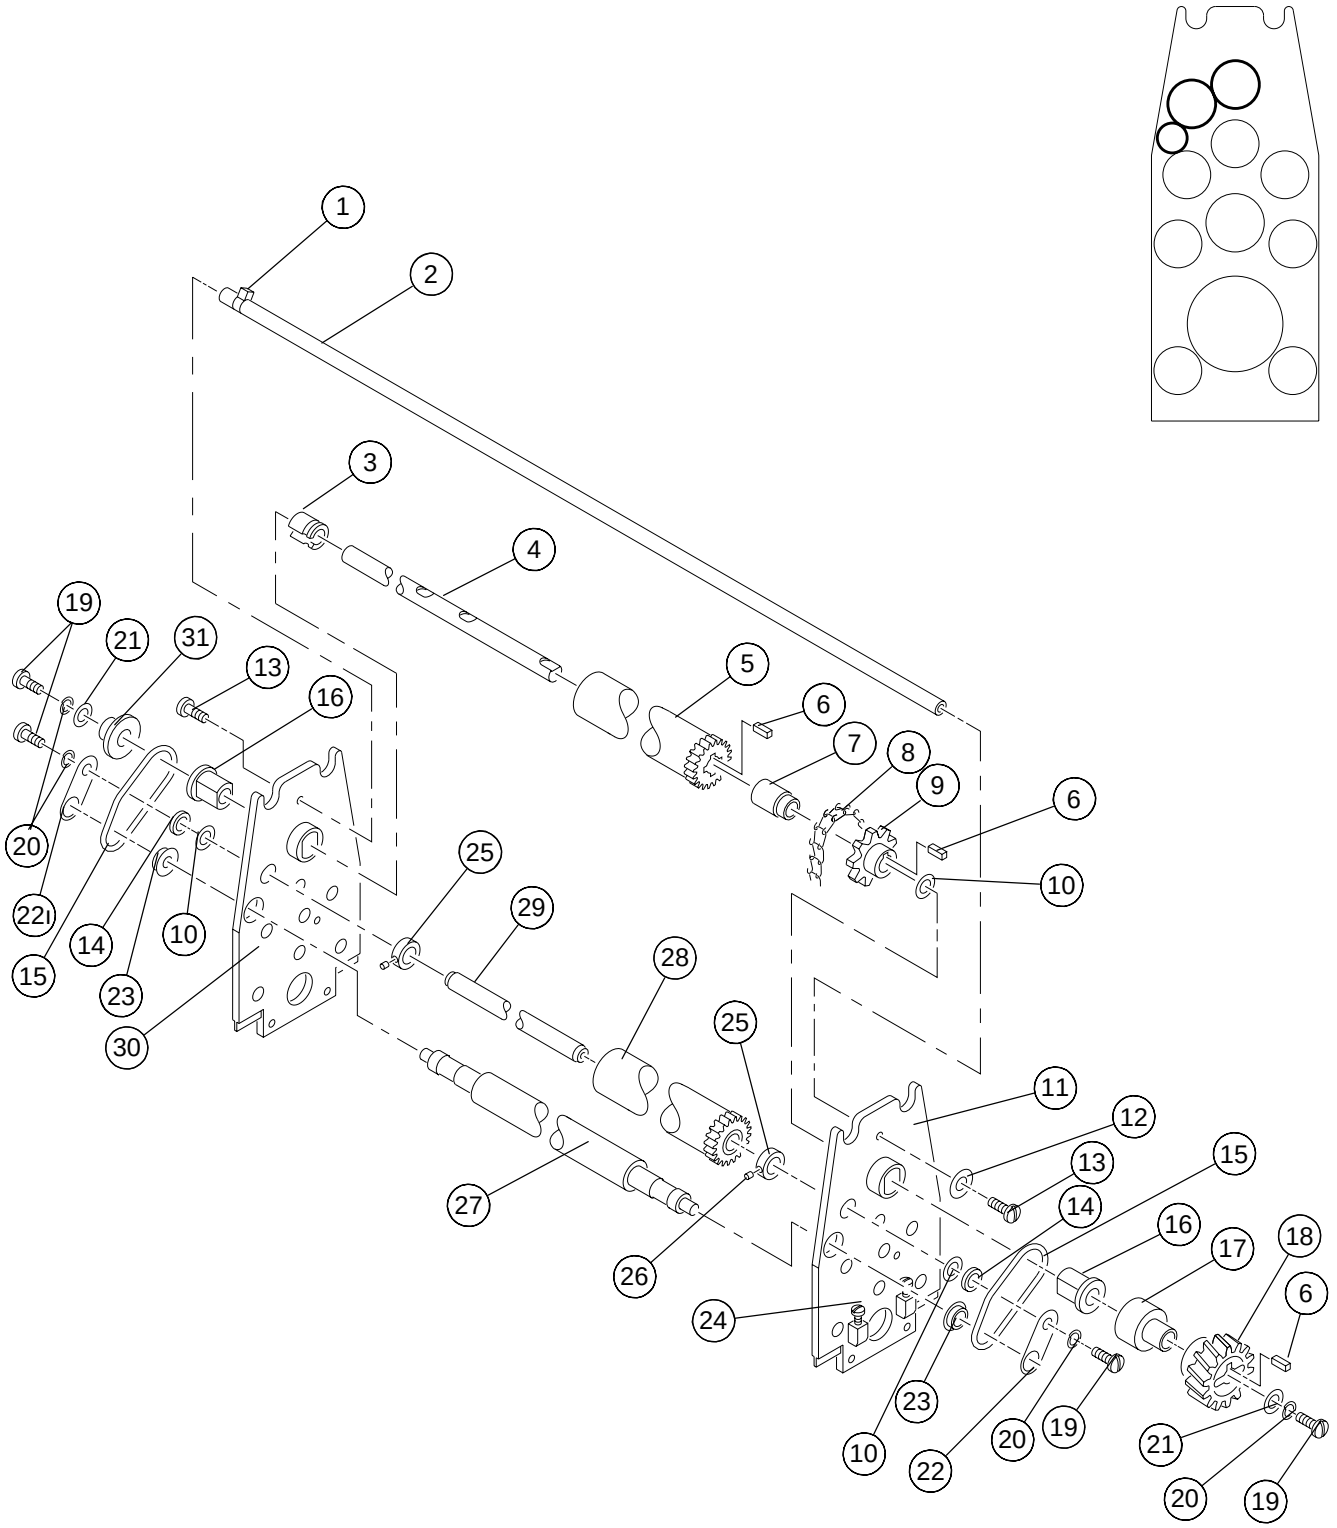

H112_0059ECA
H112_0059EA

Figure 3–8

Item	Part No.	Description	Qty.	Notes
	748165	Fixer Rack Assembly	1	
1	240059	Tie - Blue	1	##Fixer Rack.##
2	287002	Rod - Tie	1	
3	477092	Spacer	1	
4	287027	Shaft	1	
5	287028	Roller	1	##G Roller.##
6	454354	Key	2	
7	459355	Spacer	1	
8	458240	Chain	1	
9	454285	Sprocket	1	
10	463100	Washer - Thrust	3	
11	911809	Sideplate - Drive	1	
12	459944	Washer - Identification	1	##Fixer.##
13	852807	Screw	2	
14	463004	Spacer	2	
15	467843	Spring	2	
16	650710	Bearing	2	
17	534791	Spacer	1	
18	550774	Gear - Drive	1	
19	852682	Screw	4	
20	853087	Washer - Lock	4	
21	852611	Washer	2	
22	473221	Plate - Keeper	2	
23	473220	Bushing	2	
24	183624	Screw	4	
25	459347	Collar	2	
26	852889	Setscrew	2	
27	287032	Roller	1	##Rewet Roller.##
28	1C7636	Roller	1	##F Roller; stainless steel. Includes 2 Bearings, Part No. 650710. ##
29	287003	Shaft	1	
30	911845	Sideplate - Nondrive	1	
31	458205	Spacer	1	

Figure 3–9 Wash Rack - Top Exit Rollers

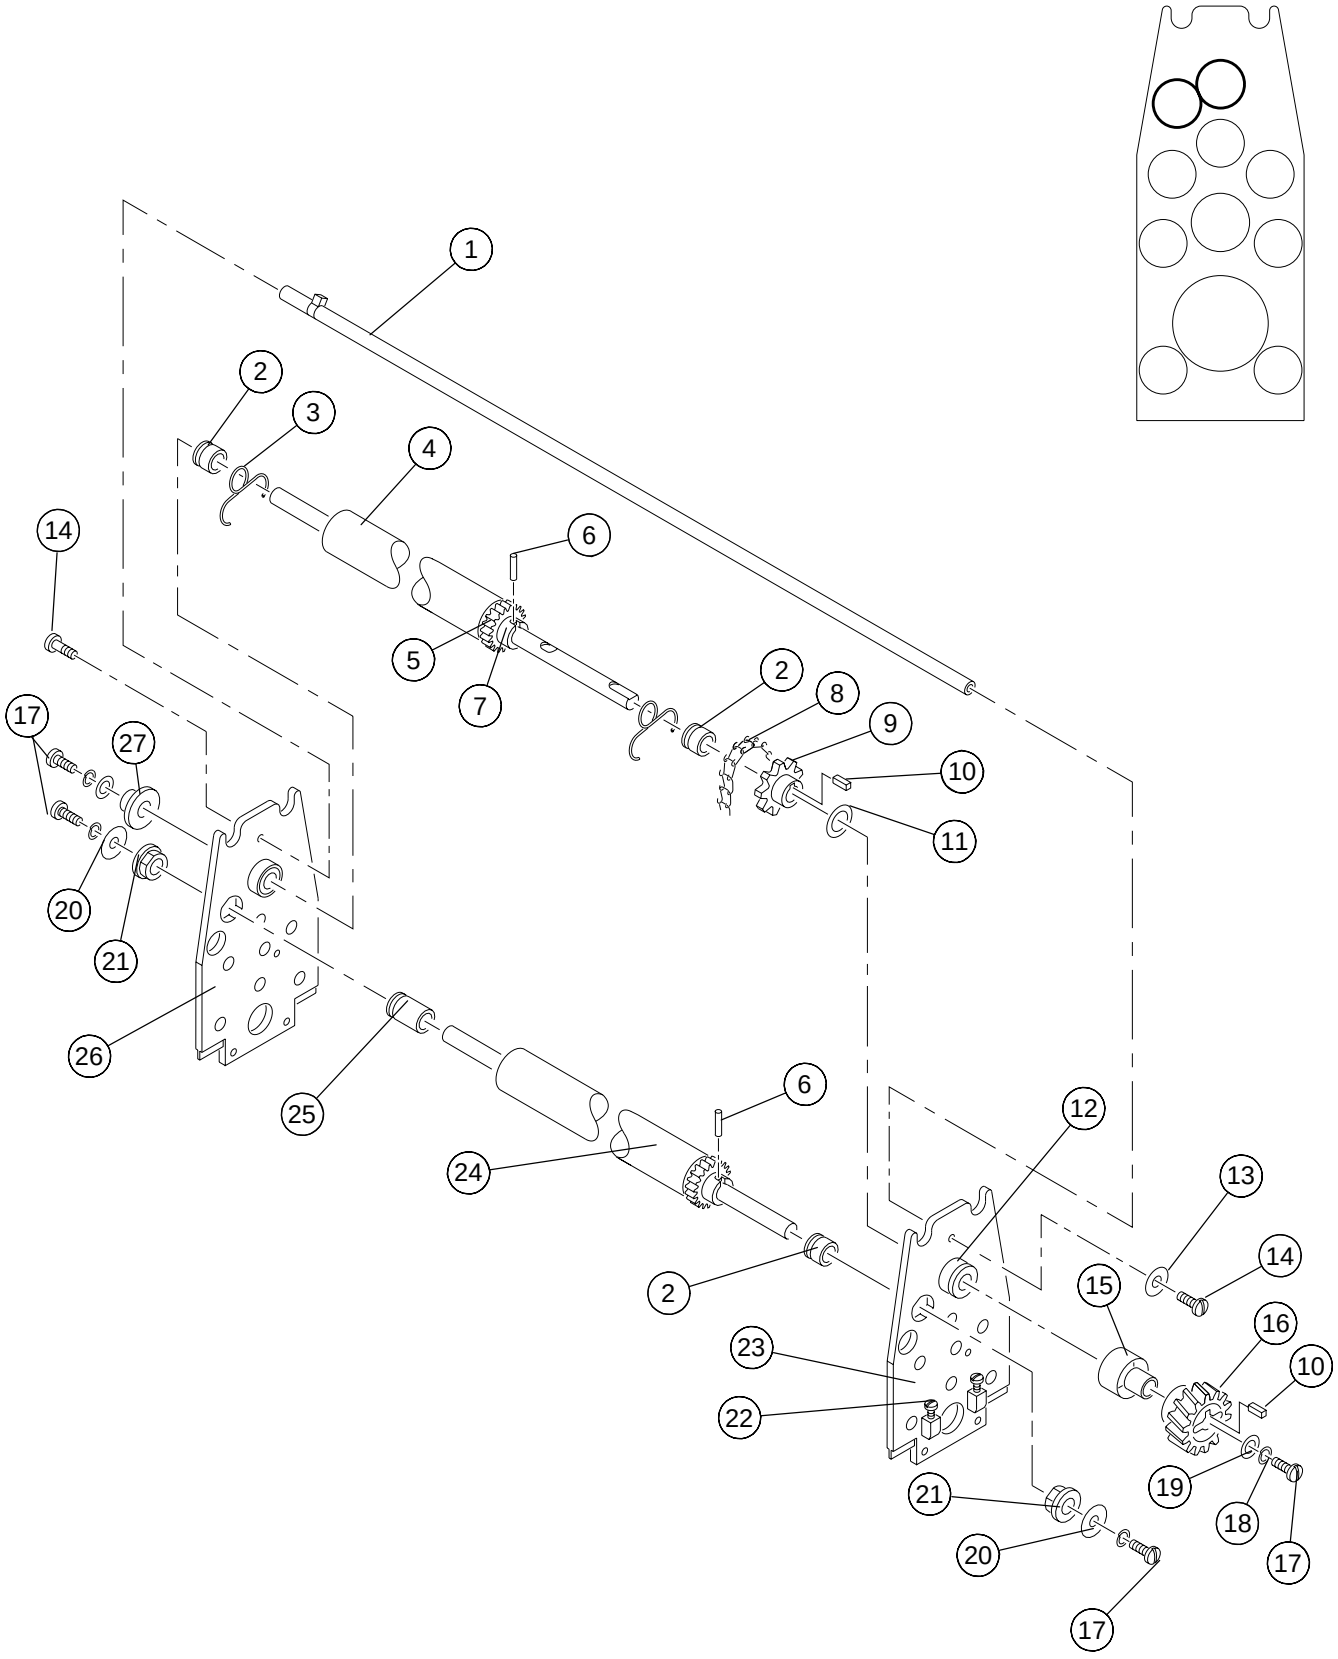

H112_0048ECA
H112_0048EA

Figure 3–9

Item	Part No.	Description	Qty.	Notes
	261277	Wash Rack Assembly	1	
1	287002	Rod - Tie	1	
2	474100	Spacer	2	
3	479820	Spring	2	
4	246917	Roller	1	##G Roller; includes items 5 - 7. ##
5	458384	Gear	1	
	463950	O-Ring	1	##Not shown.##
6	175381	Pin	1	
7	597096	Spacer - Split	2	
8	458240	Chain	1	
9	454285	Sprocket	1	
10	454354	Key	2	
11	463100	Washer - Thrust	1	
12	650702	Bearing	2	
13	459945	Washer - Identification	1	
14	852807	Screw	2	
15	473538	Spacer	1	
16	550774	Gear - Drive	1	
17	852972	Screw	4	
18	853087	Washer - Lock	2	
19	852611	Washer	4	
20	459343	Washer	2	
21	650701	Bearing	2	
22	183624	Screw	4	
23	286912	Sideplate - Drive	1	
24	246918	Roller	1	##F Roller.##
25	477093	Spacer	1	
26	286910	Sideplate - Nondrive	1	
27	458205	Spacer	1	##Not shown.##

Figure 3–10 Developer and Wash Racks - Other Rollers

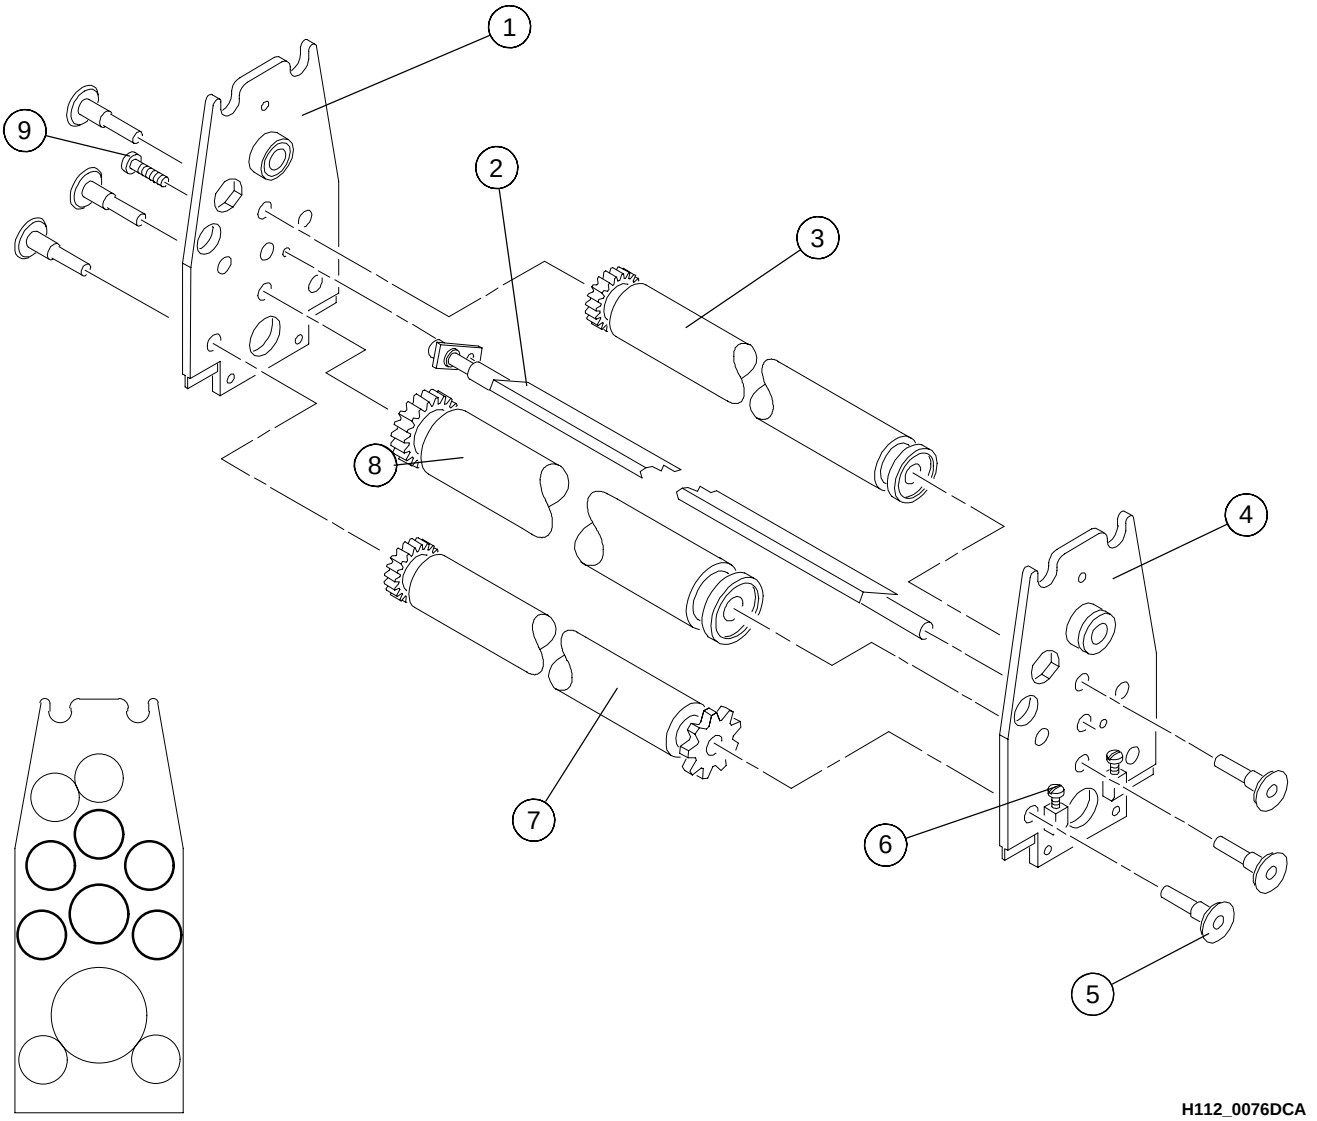

H112_0076DCA
H112_0076DA

Figure 3–10

Item	Part No.	Description	Qty.	Notes
	1C7315	Developer Rack Assembly	1	
	261277	Wash Rack Assembly	1	
1	911845	Sideplate - Nondrive	1	##Developer Rack.##
	286910	Sideplate - Nondrive	1	##Wash Rack.##
2	287018	Guide Rod Assembly	1	
3	1C7555	Roller	3	##C Roller; 3 for each Rack.##
4	911809	Sideplate - Drive	1	##Developer Rack.##
	286912	Sideplate - Drive	1	##Wash Rack.##
5	474777	Stud	12	
6	183624	Screw	4	
7	1C7556	Roller	2	##E Roller.##
8	1C7554	Roller	1	##D Roller; Wash Rack.##
	463100	Washer - Thrust	1	Wash Rack only. Not shown.
	8B6581	Roller	1	##D Roller; Developer Rack.##
9	852972	Screw	1	

Figure 3–11 Fixer Rack - Other Rollers

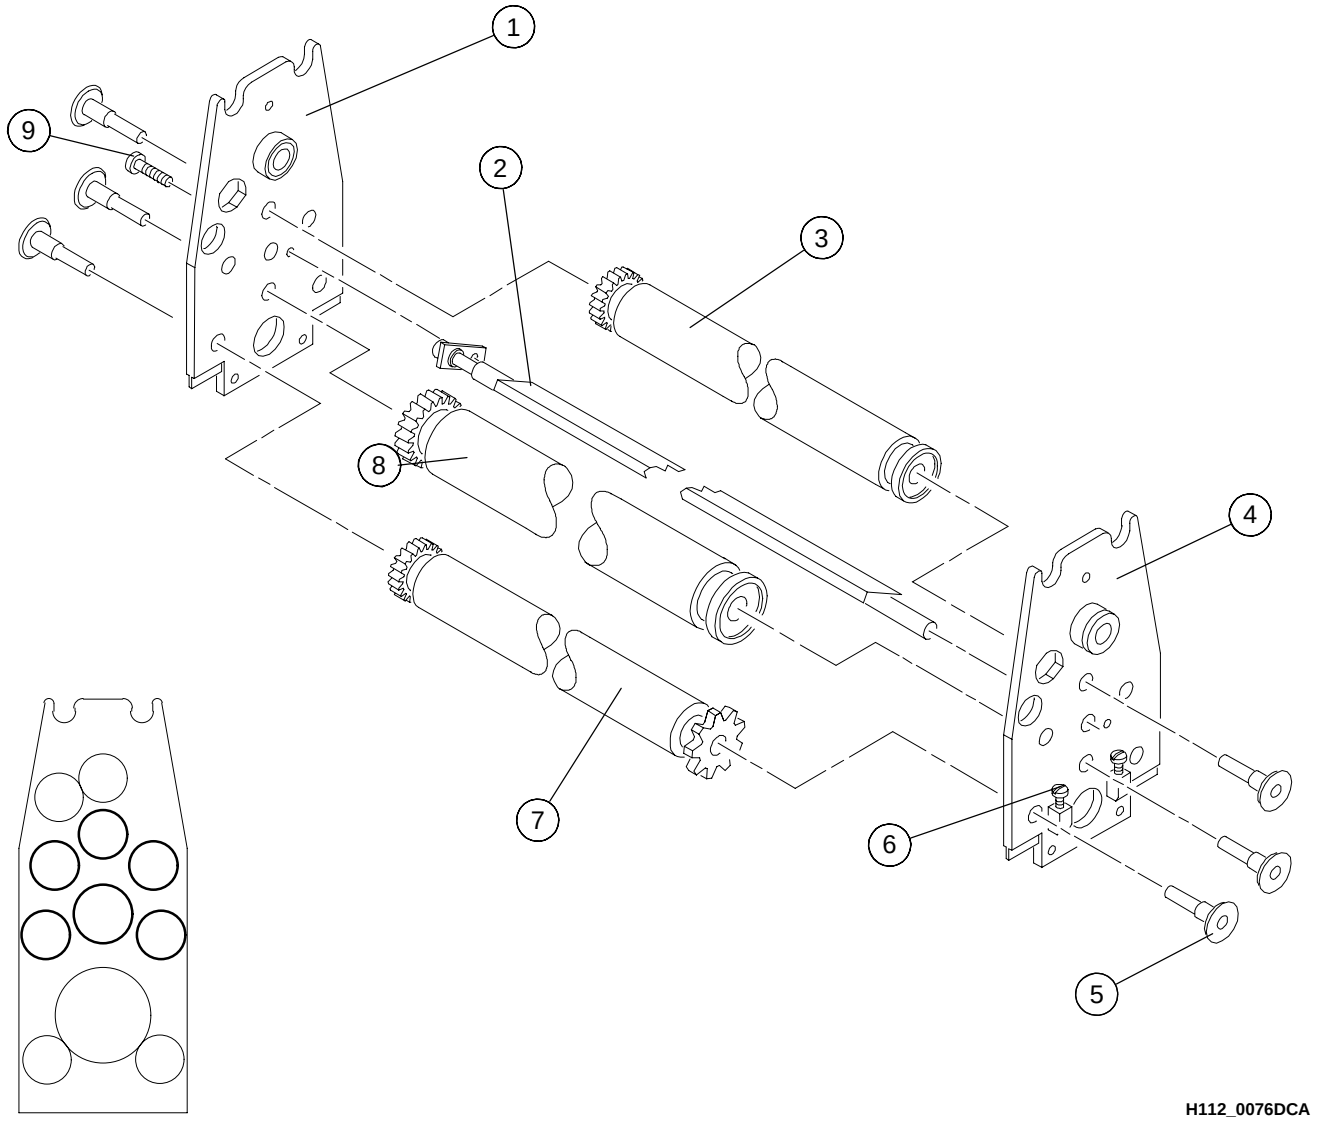

H112_0076DCA
H112_0076DA

Figure 3–11

Item	Part No.	Description	Qty.	Notes
	748165	Fixer Rack Assembly	1	
1	911845	Sideplate - Nondrive	1	
2	287018	Guide Rod Assembly	1	
3	1C7555	Roller	2	##C Roller.##
	1C7557	Roller - Knurled	1	##C Roller.##
	287085	Shaft	1	Not shown.
4	911809	Sideplate - Drive	1	
5	474777	Stud	12	
6	183624	Screw	4	
7	1C7556	Roller	2	##E Roller.##
8	1C7554	Roller	1	##D Roller.##
	463100	Washer - Thrust	1	Not shown.
9	852972	Screw	1	

Figure 3–12 Developer Turnaround Assembly

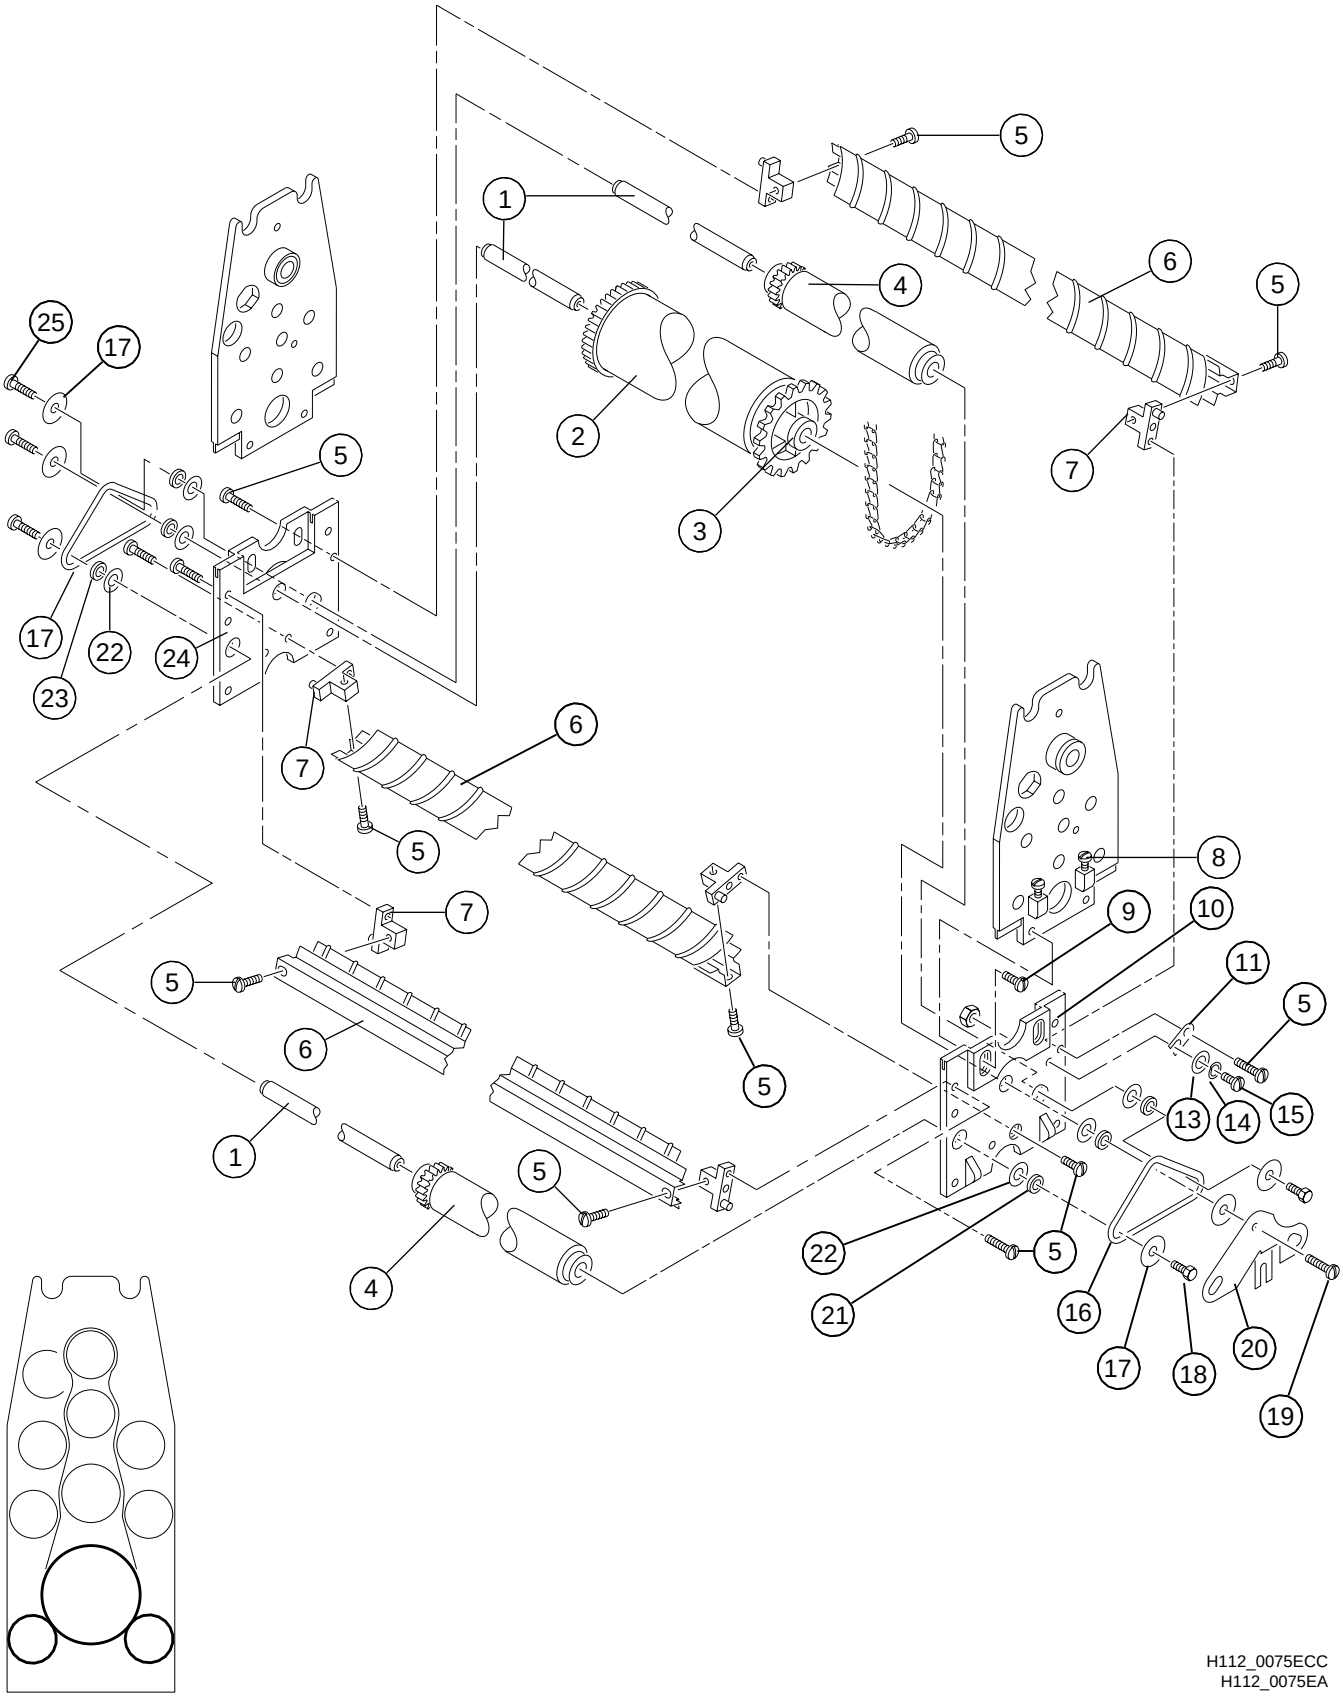

Figure 3–12

Item	Part No.	Description	Qty.	Notes
	914265	Turnaround Assembly - Developer		
1	287003	Shaft	3	
2	1C7640	Roller	1	##B Roller. Includes the 2 Bearings, item 3.##
	5B6775	Spacer	1	Not shown.
3	650702	Bearing	2	
4	1C7558	Roller	2	##A Roller. Includes the 2 Bearings, item 3.##
5	5B6316	Screw	12	
6	1C7635	Shoe - Guide, adjustable	3	
	1C7120	Smooth Guide Shoe Kit - M35	1	Not shown.
7	474596	Bracket - Guide Shoe	6	
8	183624	Screw	4	
9	490096	Screw	4	
10	1C7630	Sideplate - Turnaround, drive side	1	
11	1C7632	Plate - Double Lock Mounting	4	
12	853080	Nut	4	
13	852611	Washer	4	
14	853087	Washer - Lock	4	
15	852972	Screw	2	
16	474645	Spring	2	
17	459343	Washer	6	
18	190596	Screw	2	
19	490097	Screw	1	
20	1C7988	Plate - Locking	1	
21	463004	Spacer	6	
22	463100	Washer - Thrust	6	
23	1C7631	Sideplate - Turnaround, nondrive	1	
24	852682	Screw	3	
	287002	Rod - Tie	2	##Not shown.##
	852807	Screw	4	##Not shown.##
	8B7305	Turnaround Adjustment Tool	2	Not shown.

Figure 3–13 Fixer and Wash Turnaround Assemblies

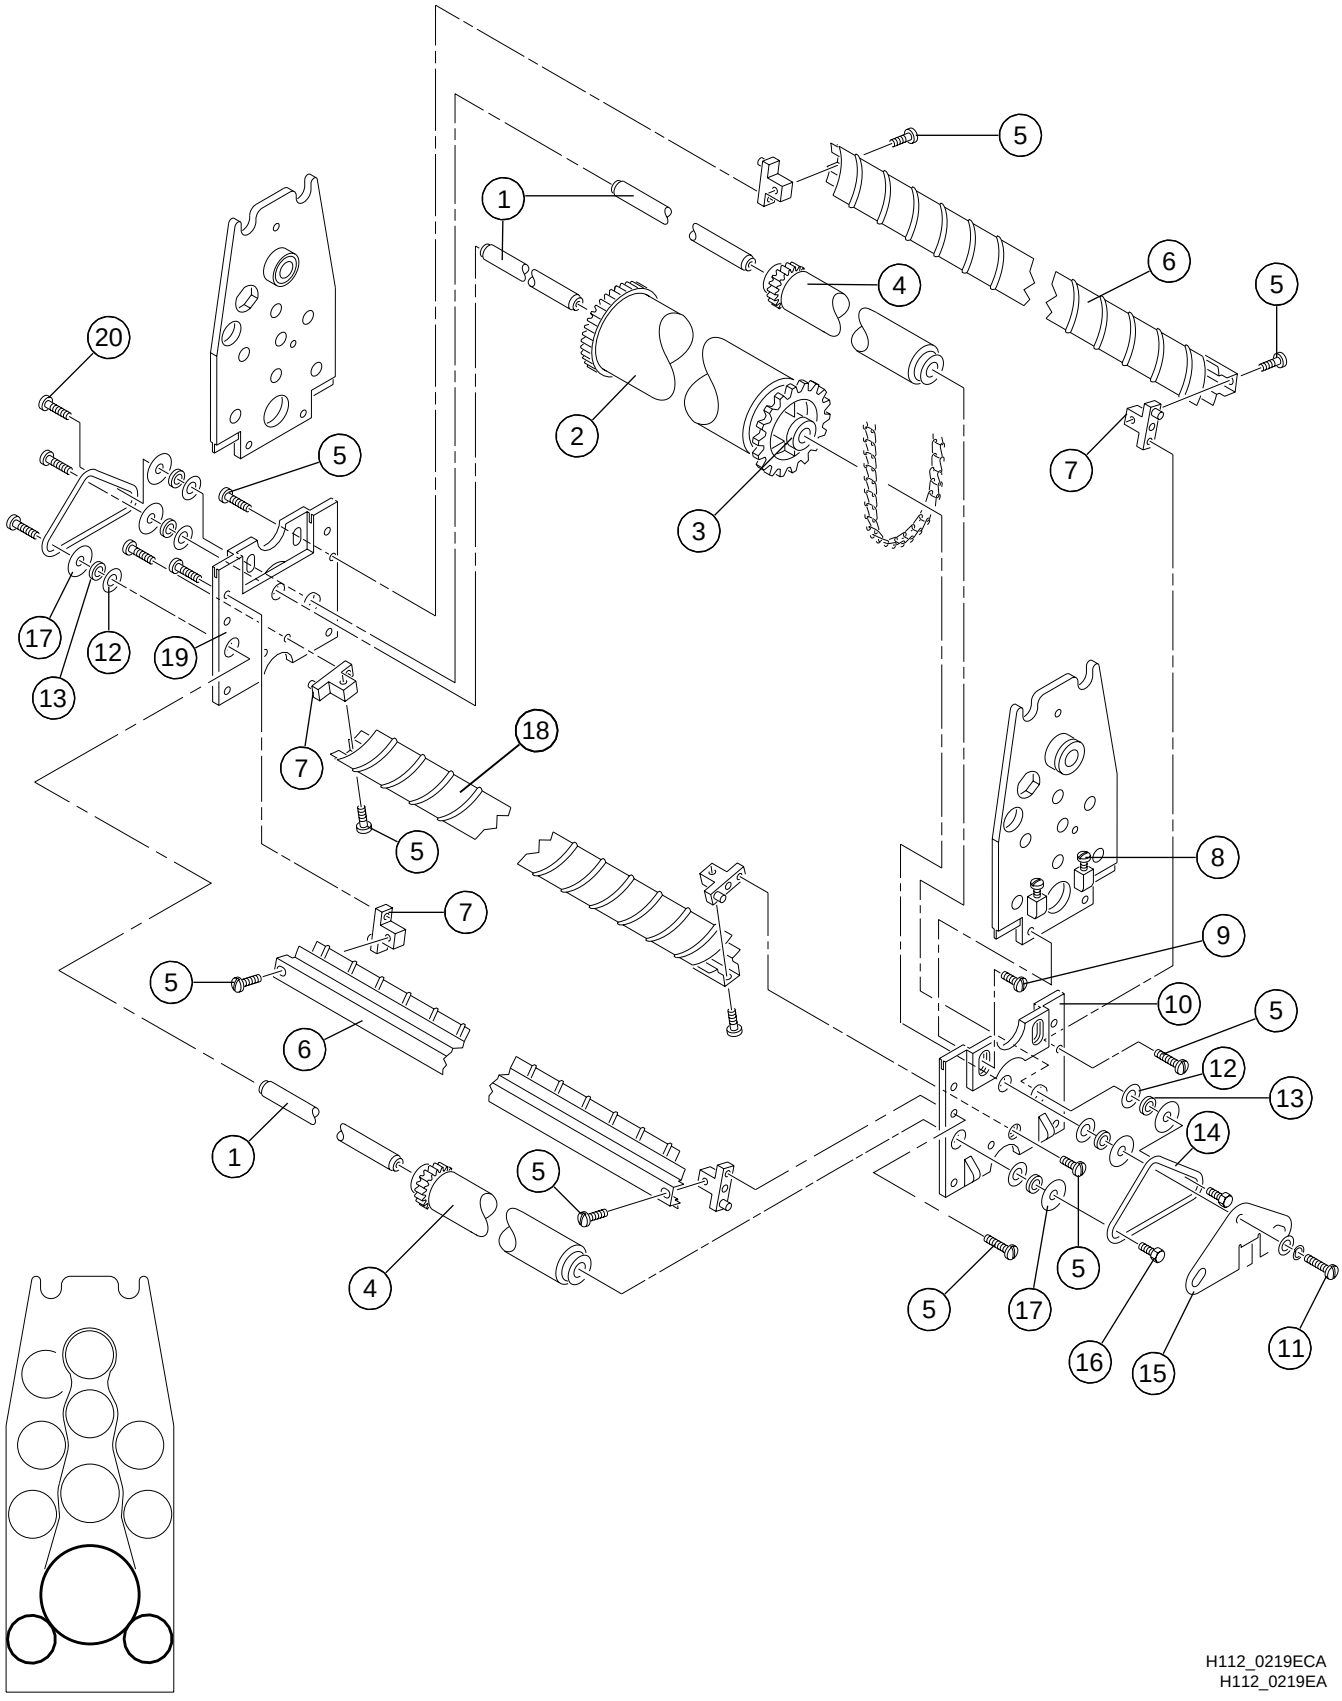

Figure 3–13

Item	Part No.	Description	Qty.	Notes
	748164	Turnaround Assembly - Fixer or Wash		
1	287003	Shaft	3	
2	5B6077	Roller	1	##B Roller. Includes the 2 Bearings, item 3.##
3	650702	Bearing	2	
4	1C7558	Roller	2	##A Roller. Includes the 2 Bearings, item 3. ##
5	5B6316	Screw	12	
6	287006	Shoe - Guide	2	
7	474596	Bracket - Guide Shoe	6	
8	183624	Screw	4	
9	490096	Screw	4	
10	1C7630	Sideplate - Turnaround, drive side	1	
11	490097	Screw	3	
12	463100	Washer - Thrust	6	
13	463004	Spacer	6	
14	474645	Spring	2	
15	1C7988	Plate - Locking	1	
16	190596	Screw	2	
17	459343	Washer	6	
18	1C7635	Shoe - Guide, adjustable	1	
19	1C7631	Sideplate - Turnaround, nondrive	1	
20	852682	Screw	1	
	287002	Rod - Tie	2	##Not shown ##
	852807	Screw	4	##Not shown ##

Figure 3–14 Dryer Rack - Frame

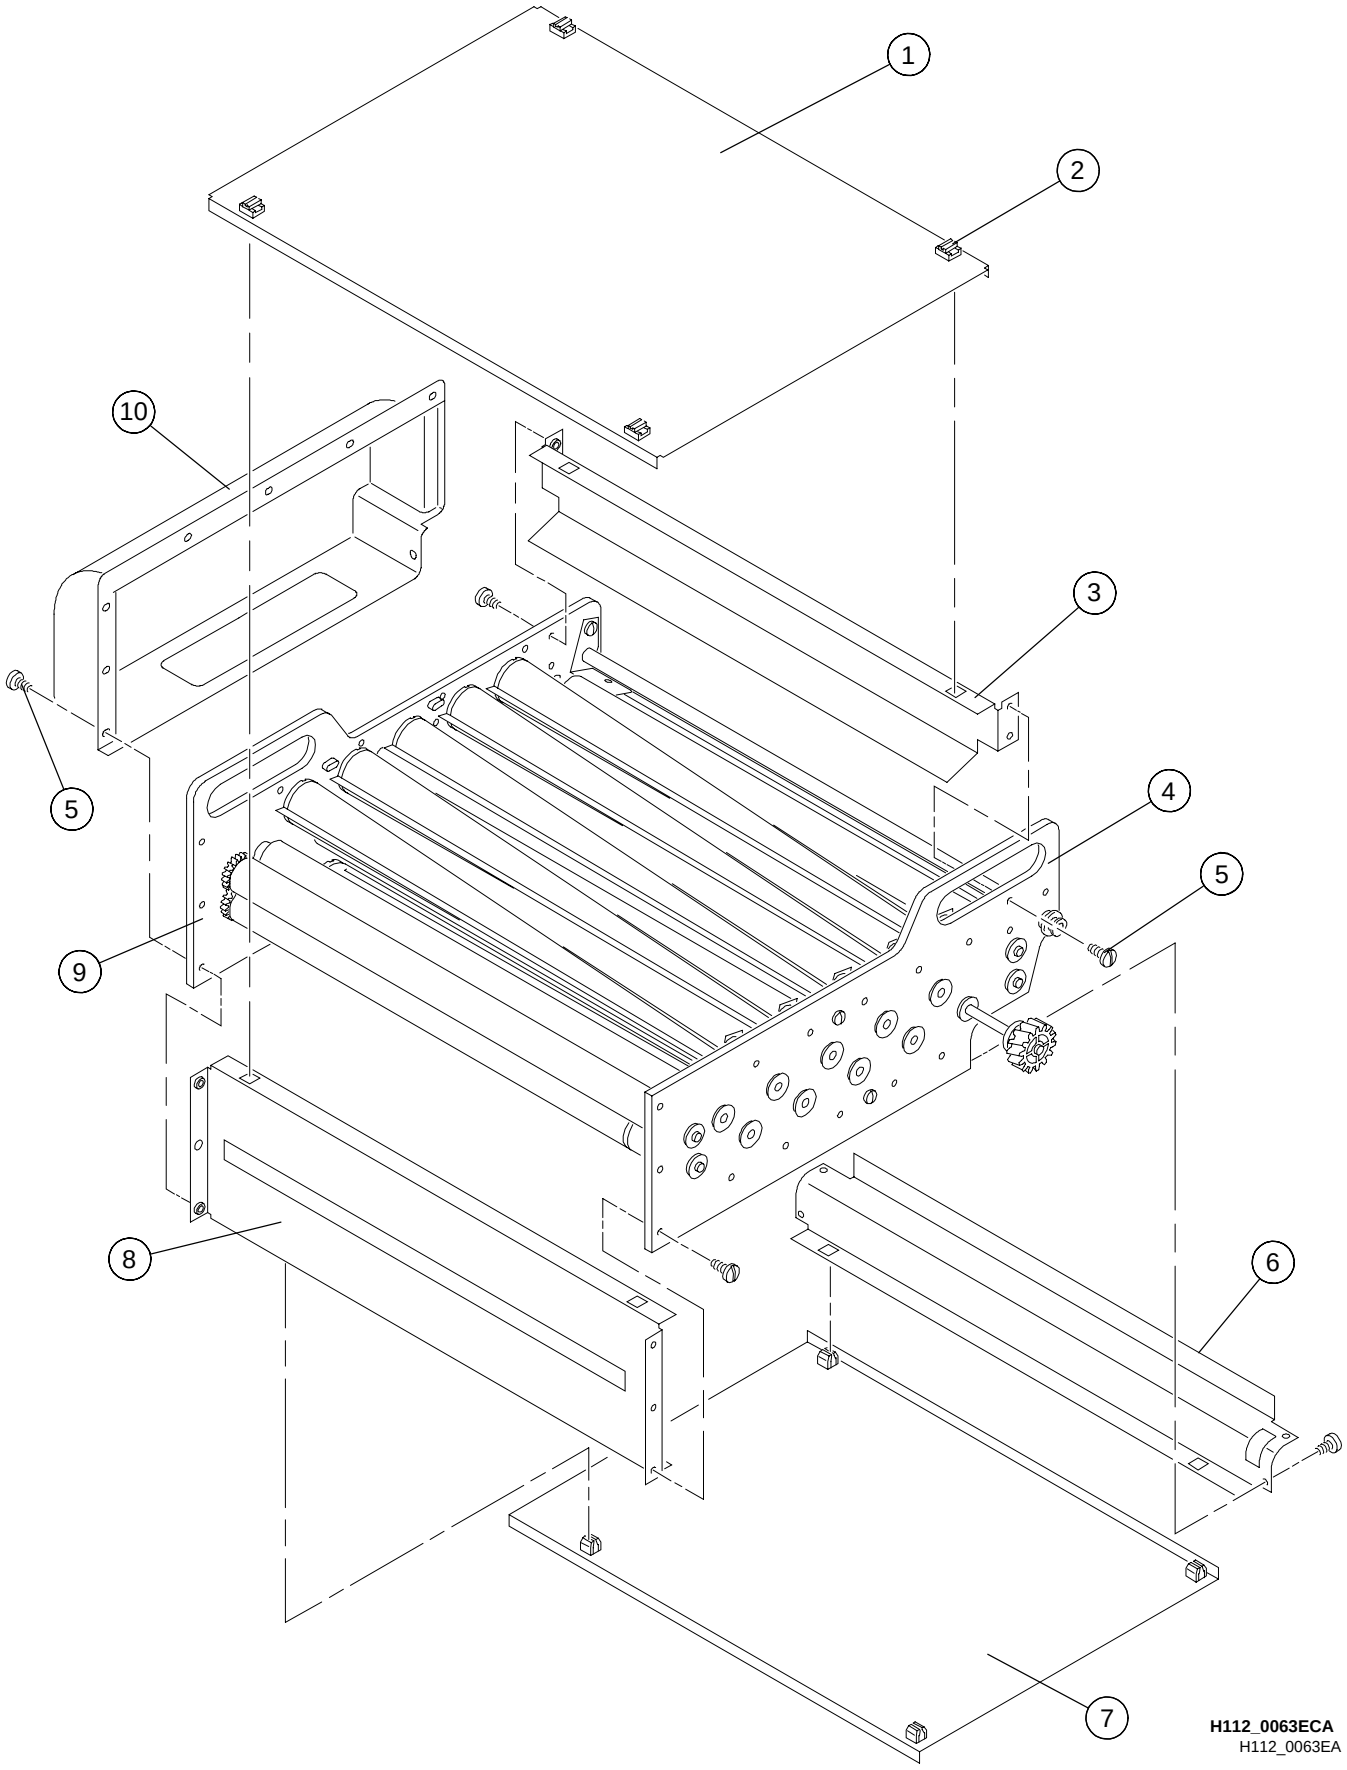

Figure 3–14

Item	Part No.	Description	Qty.
	333796	Dryer Rack Assembly	1
1	287696	Cover - Dryer, top	1
2	480366	Fastener	8
3	287694	Spacer - Sideplate, upper entrance	1
4	490123	Sideplate - Drive Side	1
5	852972	Screw	5
6	287692	Spacer - Sideplate, lower entrance	1
7	287695	Cover - Dryer, bottom	1
8	287691	Spacer - Sideplate, exit	1
9	264432	Sideplate - Nondrive Side	1
10	287697	Plenum	1

Figure 3–15 Dryer Rack - Rollers

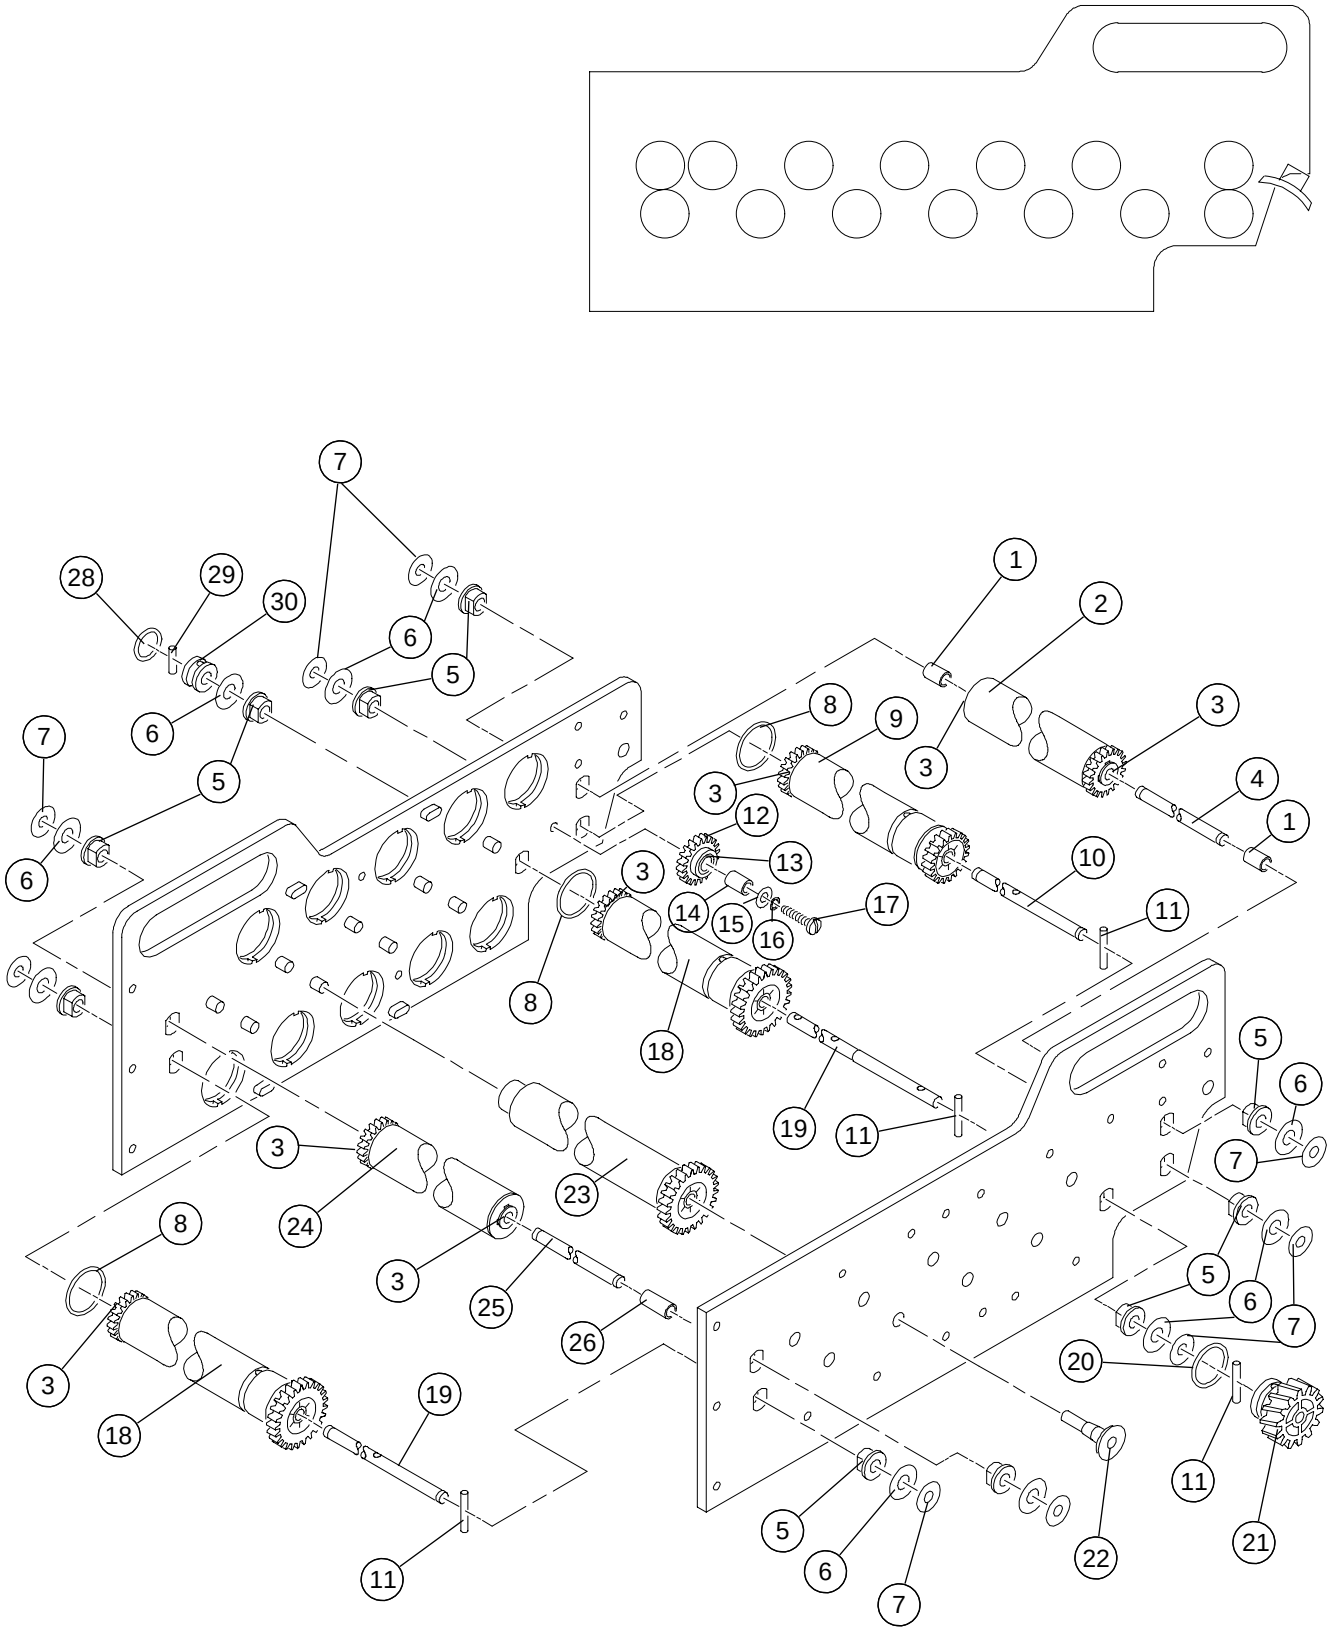

Figure 3–15

Item	Part No.	Description	Qty.	Notes
1	482274	Spacer	2	
2	287083	Roller	1	##Upper Entrance Roller ##
3	571241	Bearing	7	
4	287079	Shaft	1	
5	543993	Bearing	10	
6	482271	Washer	10	
7	482270	Washer	9	
8	183851	O-Ring	1	
9	287656	Roller	1	##Lower Entrance Roller ##
10	287085	Shaft	2	
11	543884	Pin	1	
12	532165	Gear	1	
13	532054	Bearing	1	
14	482272	Spacer	1	
15	852611	Washer	1	
16	853087	Washer - Lock	1	
17	544132	Screw	1	
18	287081	Roller	1	##Main Drive [amp] Lower Exit Rollers ##
19	287088	Shaft	1	
20	473085	O-Ring	1	
21	482275	Gear	1	
22	489727	Stud	9	
23	287067	Roller	9	
24	287078	Roller	1	##Upper Exit Roller ##
25	287079	Shaft	1	
26	482277	Spacer	1	
28	182391	O-Ring	1	
29	543891	Pin	1	
30	482273	Collar	1	

Figure 3–16 Dryer Rack - Miscellaneous Parts

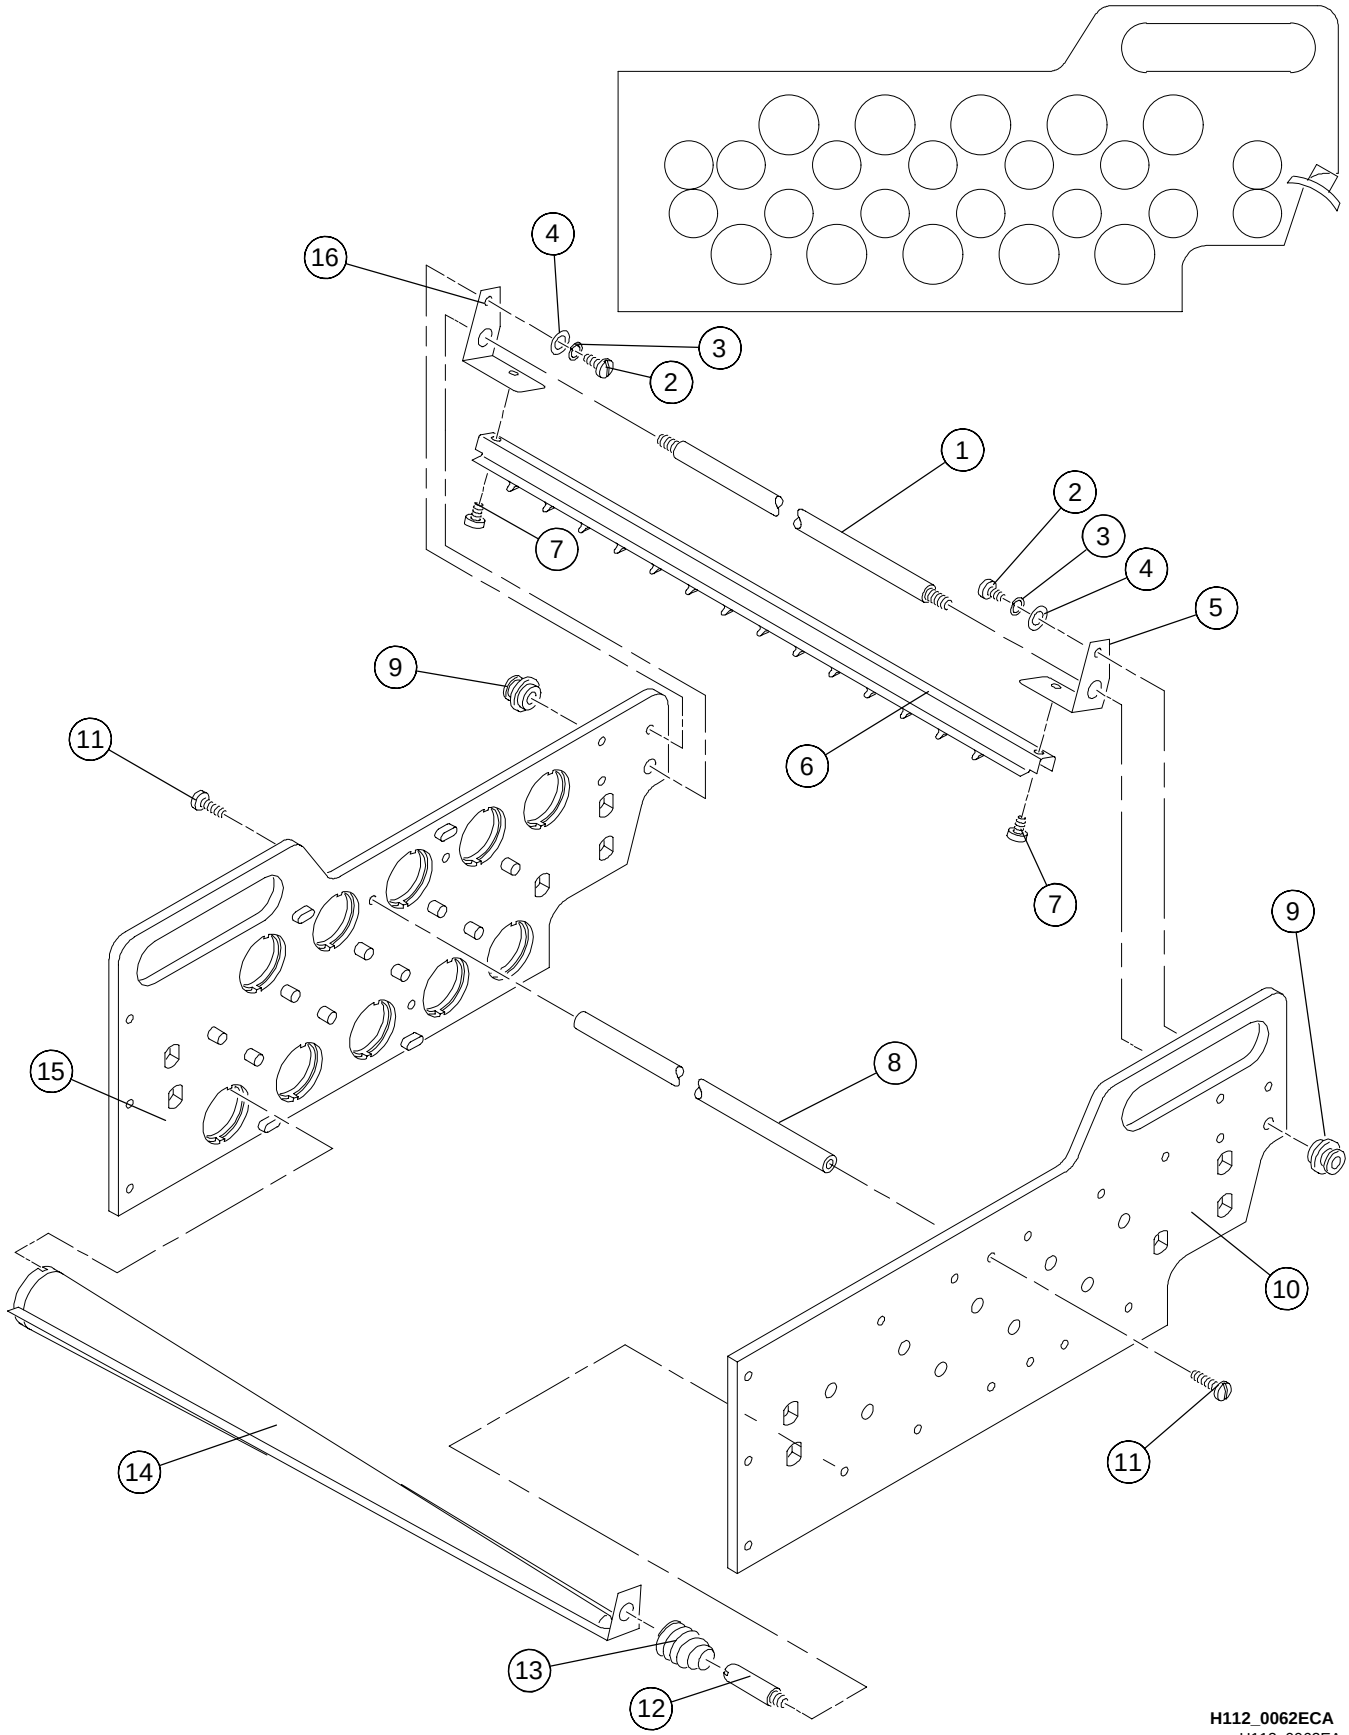

Figure 3–16

Item	Part No.	Description	Qty.
1	287689	Rod - Tie	2
2	852972	Screw	4
3	853087	Washer - Lock	4
4	852611	Washer	4
5	482262	Support	1
6	287045	Shoe - Guide	1
7	166856	Screw	2
	178145	Washer - Lock	2
8	287676	Rod - Tie	2
9	482283	Nut	2
10	490123	Sideplate - Drive Side	1
11	852871	Screw	2
12	459060	Stud - Air Tube	10
13	562609	Spring	10
14	484674	Tube - Air	10
15	264432	Sideplate - Nondrive Side	1
16	495710	Support	1

Section 4: Main Drive Assembly

Figure 4–1 Main Drive Shaft and Motor

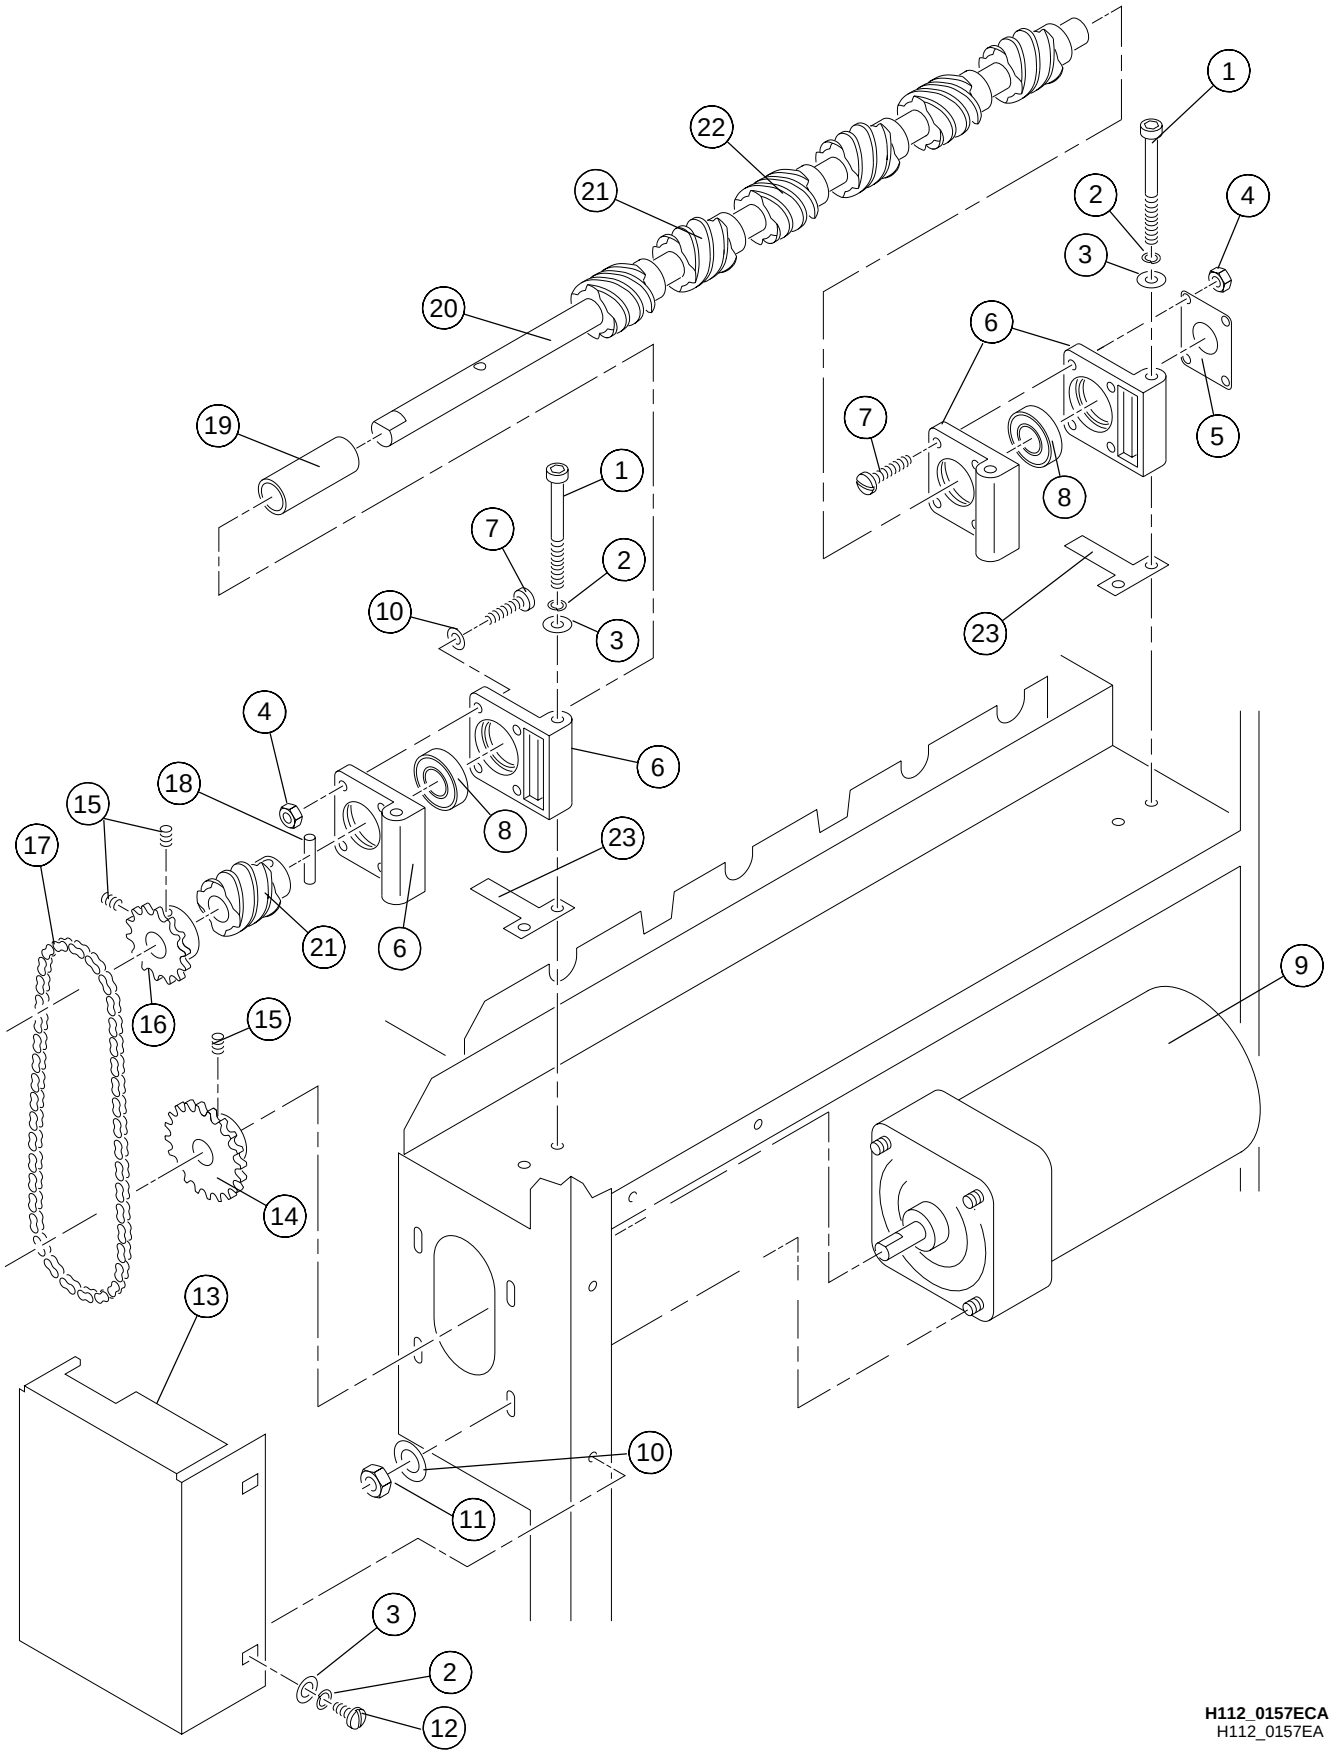

H112_0157ECA
H112_0157EA

Figure 4–1

Item	Part No.	Description	Qty.	Notes
	595425	Support Assembly	1	##Includes items 4 - 8 ##
1	188807	Screw	4	
2	535004	Washer - Lock	4	
3	852799	Washer	4	
4	852621	Nut	8	
5	570450	Plate	1	
6	532071	Support	4	
7	853165	Screw	8	
8	595426	Bearing	2	
9	779519	Drive Motor Assembly	1	##120 and 220 volts ##
10	853011	Washer	4	
11	853136	Nut	4	
12	852683	Screw	2	
13	287728	Guard - Chain	1	
14	246589	Sprocket - 26 Tooth	1	
15	852558	Setscrew	2	
16	466640	Sprocket - 17 Tooth	1	
17	911849	Chain - Drive	1	
18	853000	Pin	7	
19	488169	Spacer	1	
20	482222	Shaft - Drive	1	
21	748955	Gear - Worm, left hand	4	
22	748956	Gear - Worm, right hand	3	
23	650733	Shim	2	Optional

Section 5: Blower Assembly

Figure 5–1 Blower Assembly

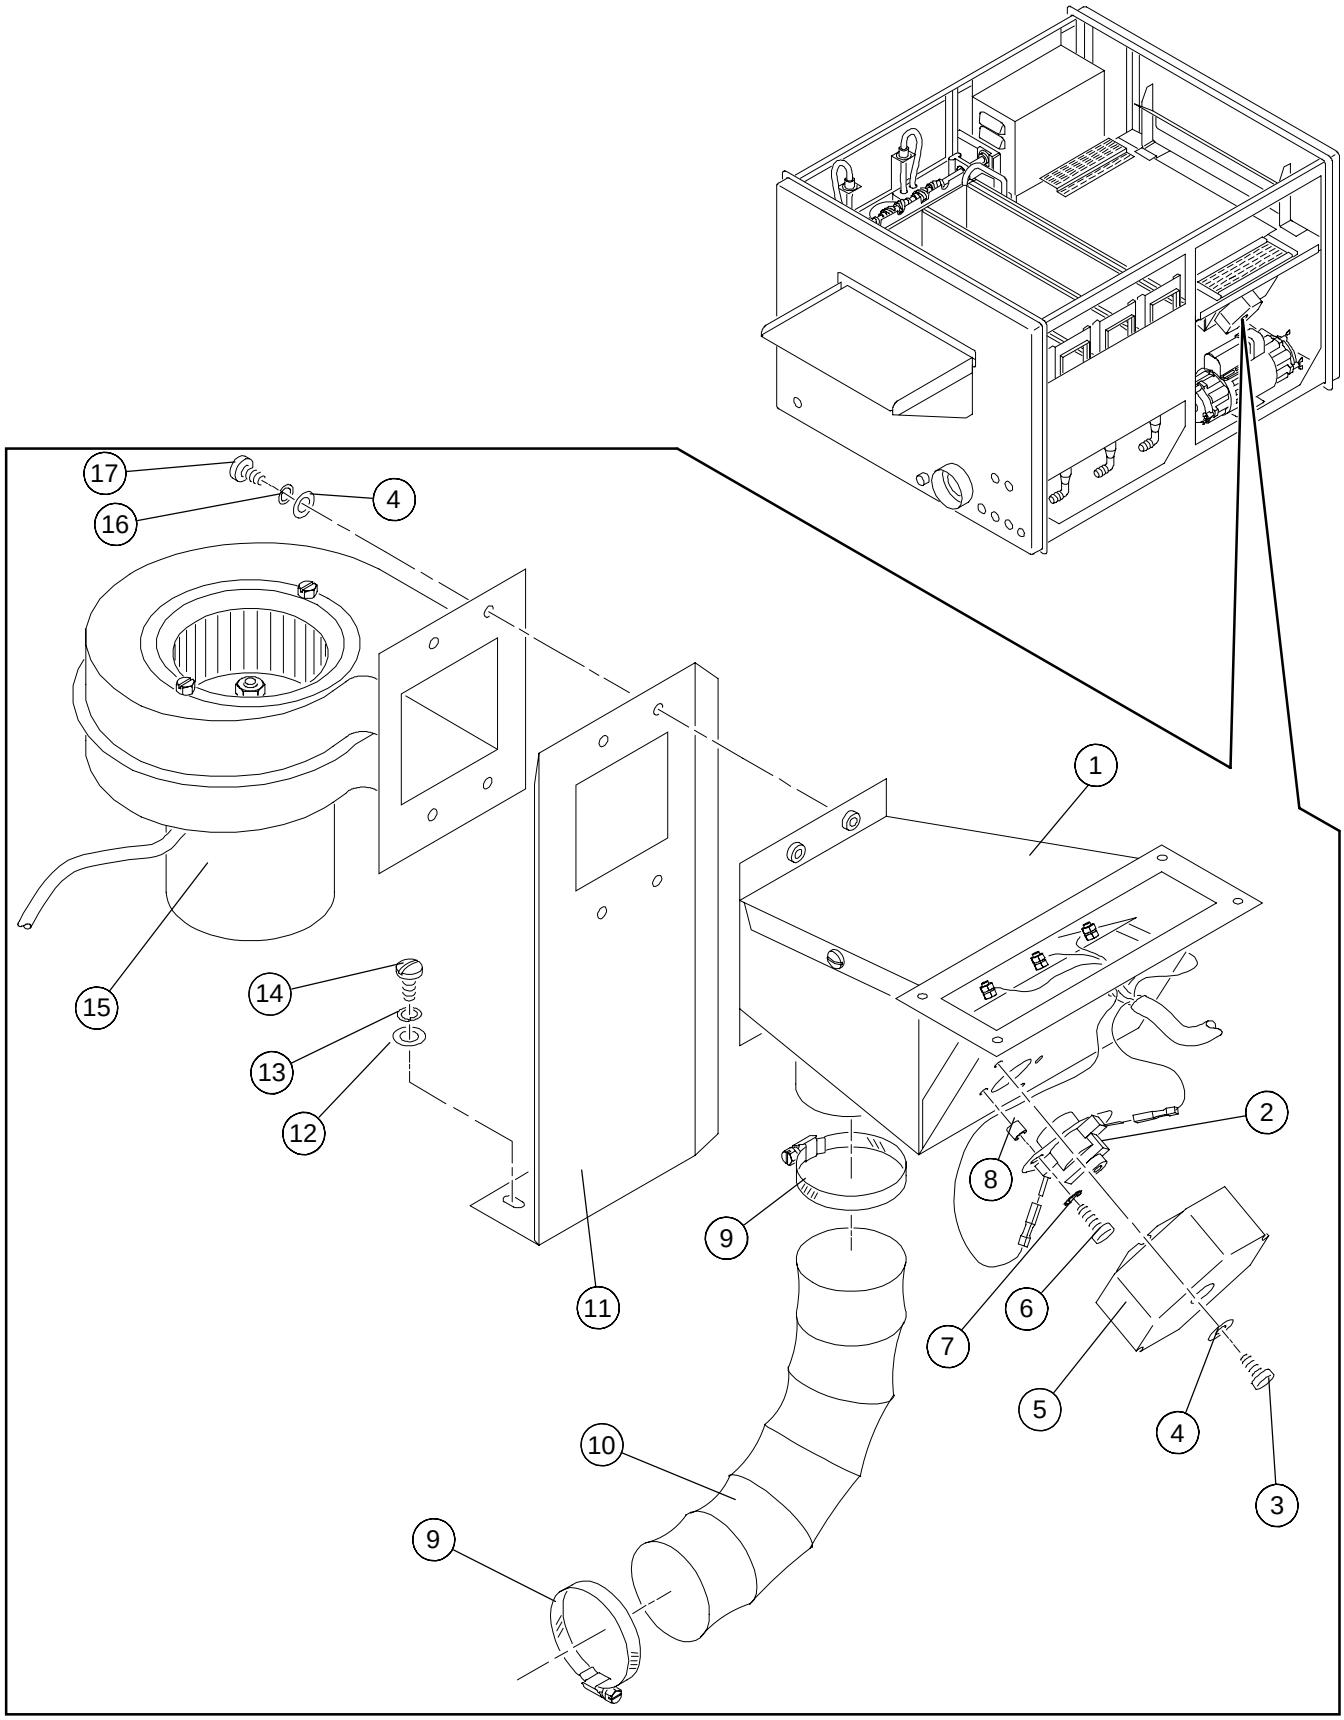

H112_0082ECA
H112_0082EA

Figure 5–1

Item	Part No.	Description	Qty.	Notes
1	484689	Heater Element Assembly - M35A-M Processor	1	##120 volts ##
	651892	Heater Element Assembly - M35-M Processor	1	##220 volts ##
2	594795	Overtemperature - Dryer Thermostat, safety	1	
3	852888	Screw	6	
4	852611	Washer	6	
5	8B6803	Guard - Overtemperature	1	
6	852807	Screw	2	
7	433708	Washer - Lock	2	
8	456215	Spacer	2	
9	246806	Clamp	2	
10	264425	Hose - Exhaust	1	
11	779215	Bracket - Blower Mounting	1	
12	852799	Washer	6	
13	535004	Washer - Lock	6	
14	264429	Screw	2	
15	240225	Blower Assembly - M35A-M Processor	1	
	651864	Blower Assembly - M35-M Processor	1	
16	853100	Washer - Lock	1	
17	852682	Screw	4	

Section 6: Plumbing

Figure 6–1 Developer Plumbing Circulation Diagram

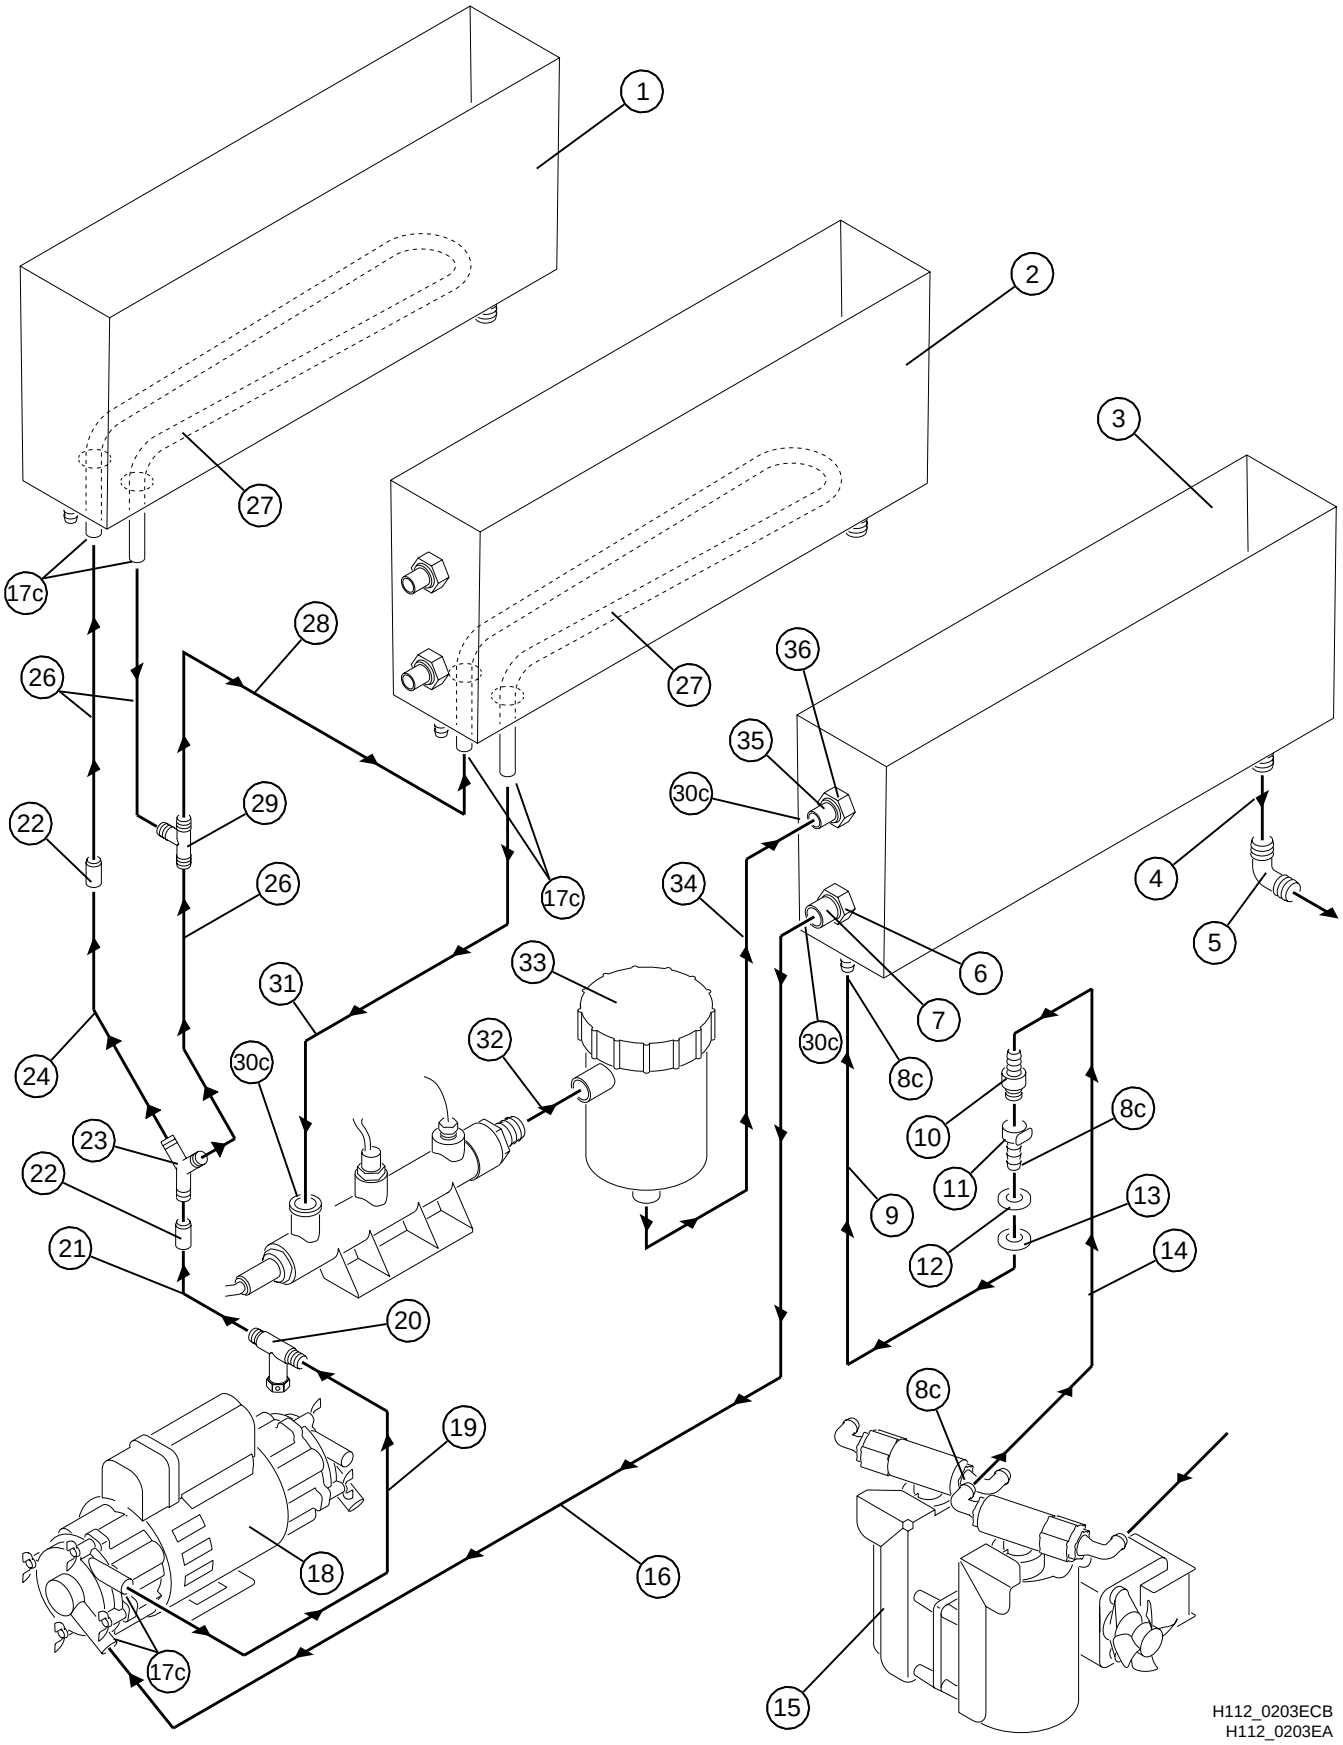

Figure 6–1

Item	Part No.	Description	Qty.	Notes
1	287000	Tank - Wash	1	See Page 6–4.
2	779003	Tank - Fixer	1	See Page 6–4.
3	779002	Tank - Developer	1	
4	489788	Tube	1	
5	579383	Elbow	1	
6	990417	Nut	2	
7	990416	Fitting - Large	1	
8c	246800	Clamp	2	
9	240002	Tube	1	
10	943700	Insert - Quick Release, male	1	
	240058	Tie - Red	1	
11	990401	Fitting - Quick Release, female	1	
12	594535	Gasket	1	
13	594534	Washer	1	
14	240004	Tube	1	
15	240227	Replenishment Pump Assembly - M35A-M Processor	1	
	651861	Replenishment Pump Assembly - M35-M Processor	1	
16	287736	Tube	1	
17c	246801	Clamp - Small	15	
18	990403	Recirculation Pump Assembly - M35A-M Processor	1	
	990402	Recirculation Pump Assembly - M35-M Processor	1	
19	1C7323	Hose	1	
20	464937	Connector - Tee	1	
	779509	Thermistor	1	
	1C7911	Bushing	1	
	1C7912	Fitting	2	
21	1C7324	Tube	1	From the Recirculation Pump.
22	539151	Orifice - 0.250 ID	1	
23	477011	Connector - Y	4	
24	479815	Tube - Elbow, 45-degree	1	
26	527068	Tube	3	
27	287053	Exchanger - Heat	2	
28	488190	Tube	1	
29	180281	Connector - Tee	1	
30c	246808	Clamp - Large	5	
31	287735	Tube	1	
32	914568	Tube	1	From the Filter to the Thermowell.
33	536827	Filter Assembly	1	See Page 8–4.
34	5B6301	Tube	1	From the Filter to Developer Tank.
35	5B6300	Fitting - D, Recirculation	1	
	581241	Gasket	2	

Figure 6–2 Fixer and Wash Plumbing Circulation Diagram

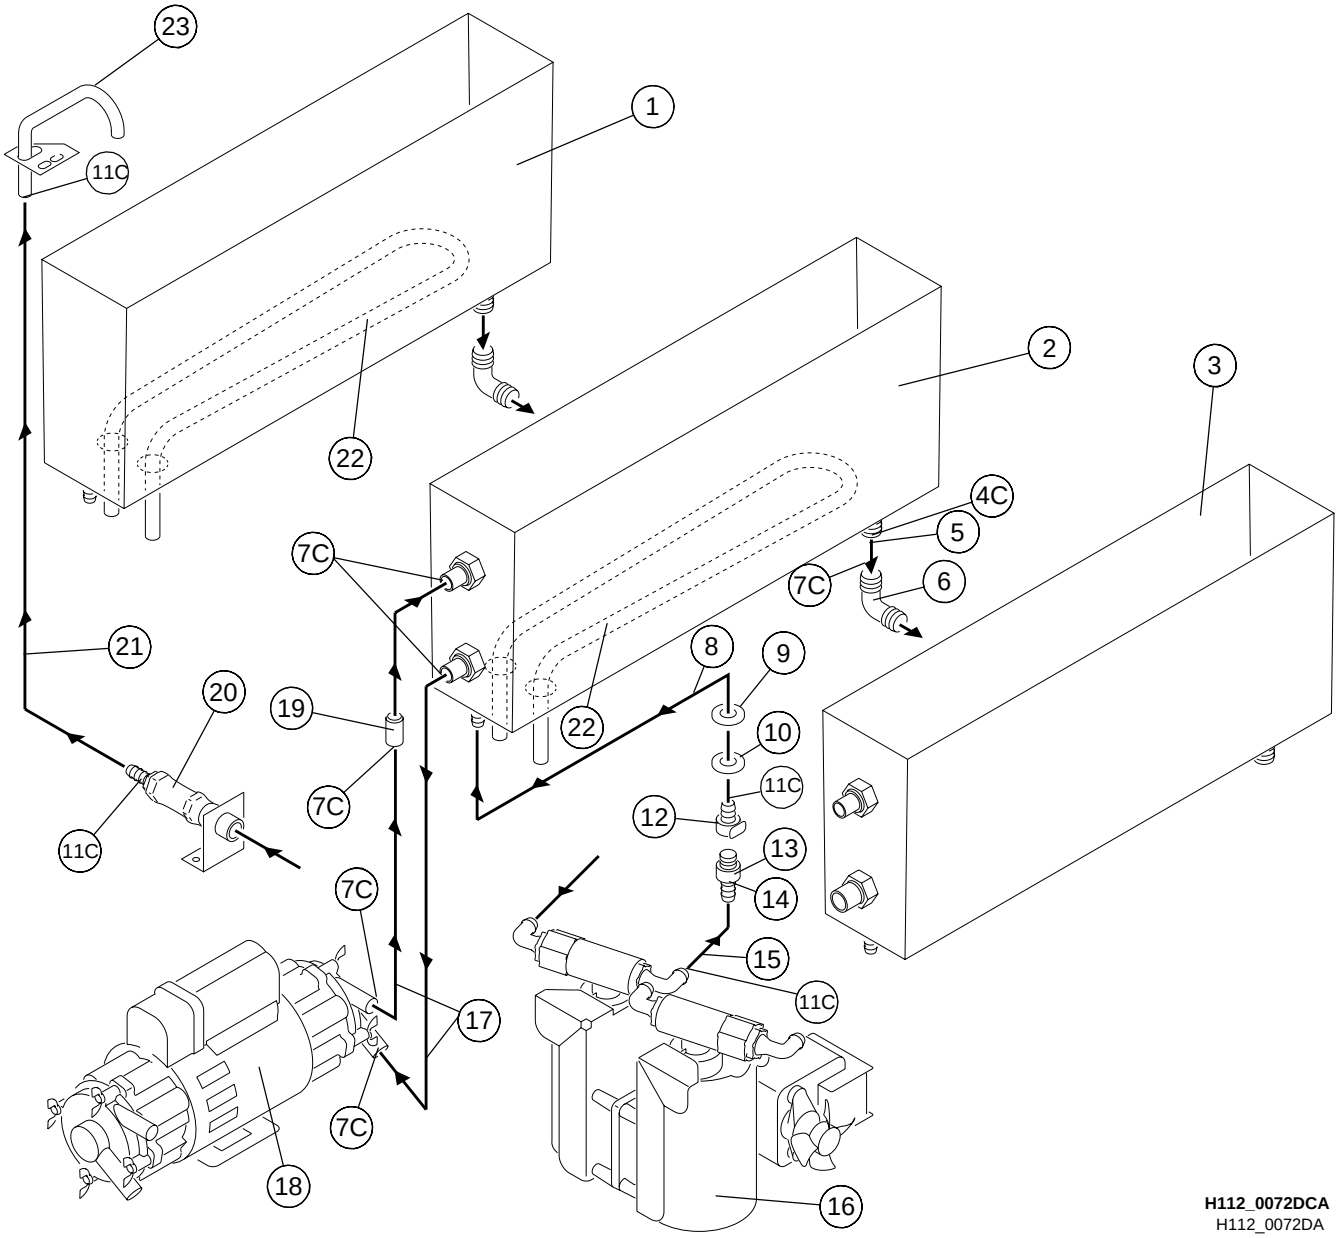

Figure 6–2

Item	Part No.	Description	Qty.	Notes
1	287000	Tank - Wash	1	
2	779003	Tank - Fixer	1	
3	779002	Tank - Developer	1	See Page 6–2.
4c	246808	Clamp - Large	1	
5	489788	Tube	1	
6	579383	Elbow	2	
7c	246801	Clamp - Small	15	
8	240003	Tube	1	
9	594534	Washer	1	
10	594535	Gasket	1	
11c	246800	Clamp	2	
12	990401	Fitting - Quick Release, female	1	
13	943700	Insert - Quick Release, male	1	
14	240059	Tie - Blue	1	
15	240005	Tube	1	
16	240227	Replenishment Pump Assembly - M35A-M Processor	1	
	651861	Replenishment Pump Assembly - M35-M Processor	1	
17	287733	Tube	2	
18	990403	Recirculation Pump Assembly - M35A-M Processor	1	
	990402	Recirculation Pump Assembly - M35-M Processor	1	
19	539152	Orifice - 0.209 ID	1	
20	261590	Water Inlet Assembly	1	
	261650	Kit - Flow Control Valve	1	Includes these 5 items:
	185101	Nipple	1	
	287730	Bracket - Water Inlet	1	
	472477	Control - Flow	1	
	556104	Adapter	1	
	551400	Elbow	1	
21	471393	Tube	1	
22	287053	Exchanger - Heat	2	
23	779214	Tube and Tab Assembly	1	
	5B6302	Kit - Tubing	1	Includes Part No. 240002, 240003, 240004, 240005, 287733 (2), 287735, 287736, 471393, 489788 (3), 911847, 5B6301, & 914568.

Figure 6–3 Developer Thermowell Assembly

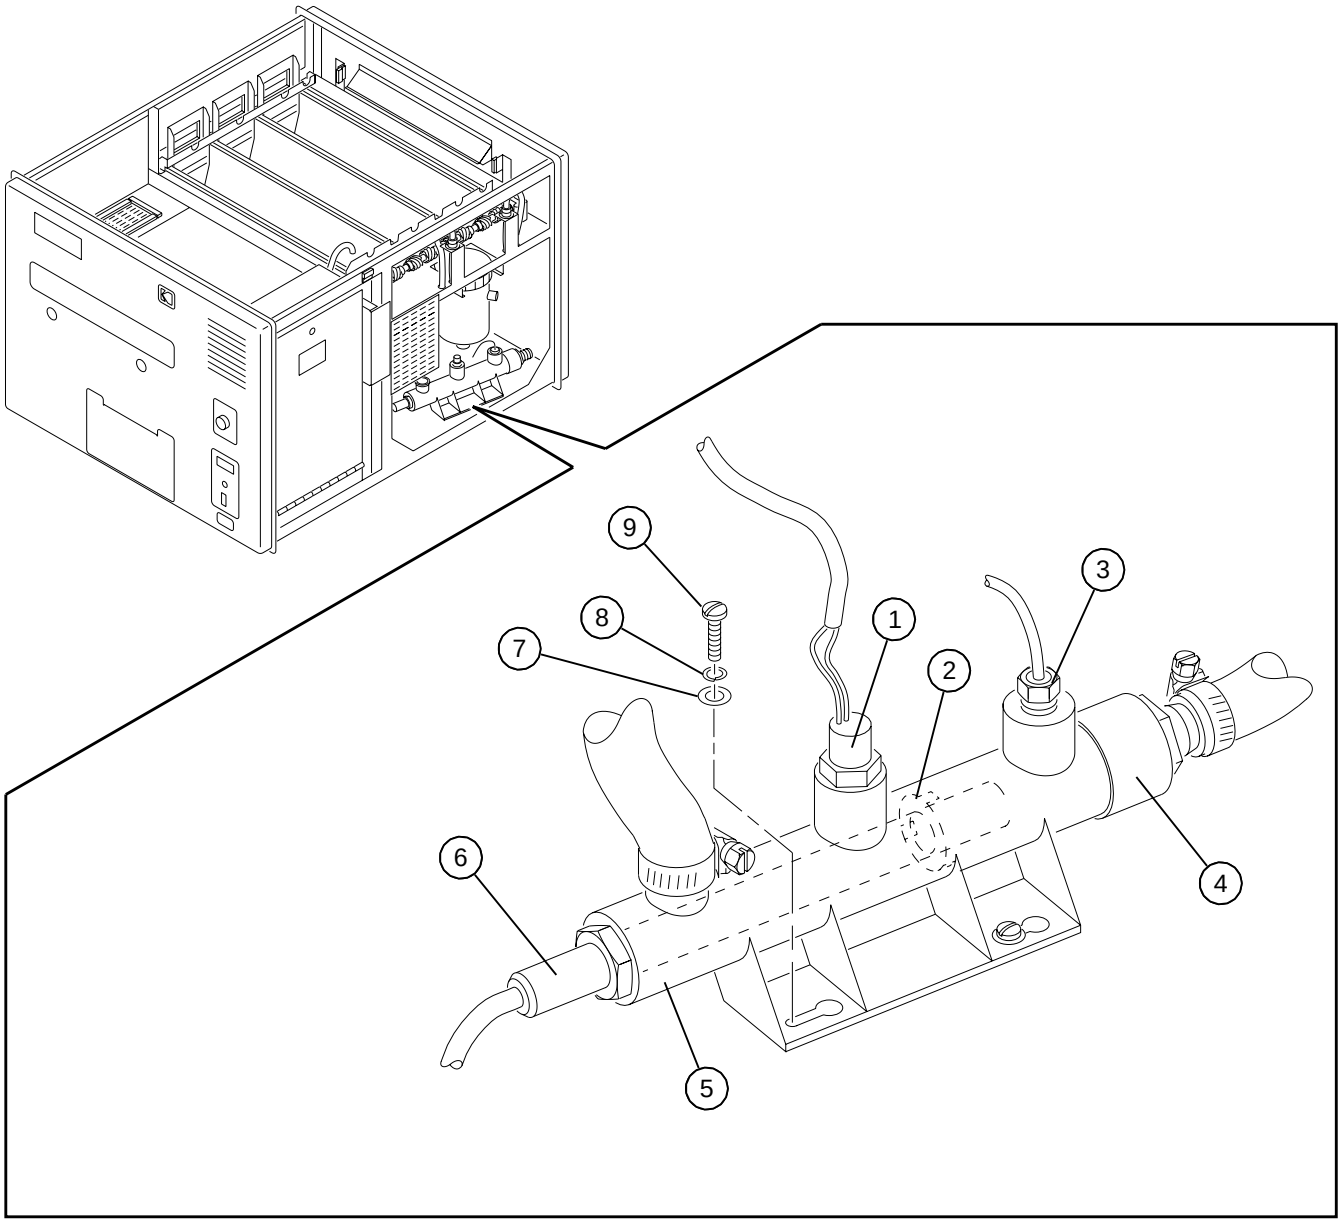

H112_0155DCA
H112_0155DA

Figure 6–3

Item	Part No.	Description	Qty.	Notes
1	651868	Thermostat - Overtemperature	1	
2	607793	Locator - Heater	1	
3	651869	Thermistor	1	
4	532033	Adapter	1	
5	8B7080	Header - Thermowell	1	
6	485399	Heater - M35A-M Processor	1	120 volts
	651862	Heater - M35-M Processor	1	220 volts
7	852799	Washer	2	
8	535004	Washer - Lock	2	
9	187235	Screw	2	

Figure 6–4 Heat Exchangers

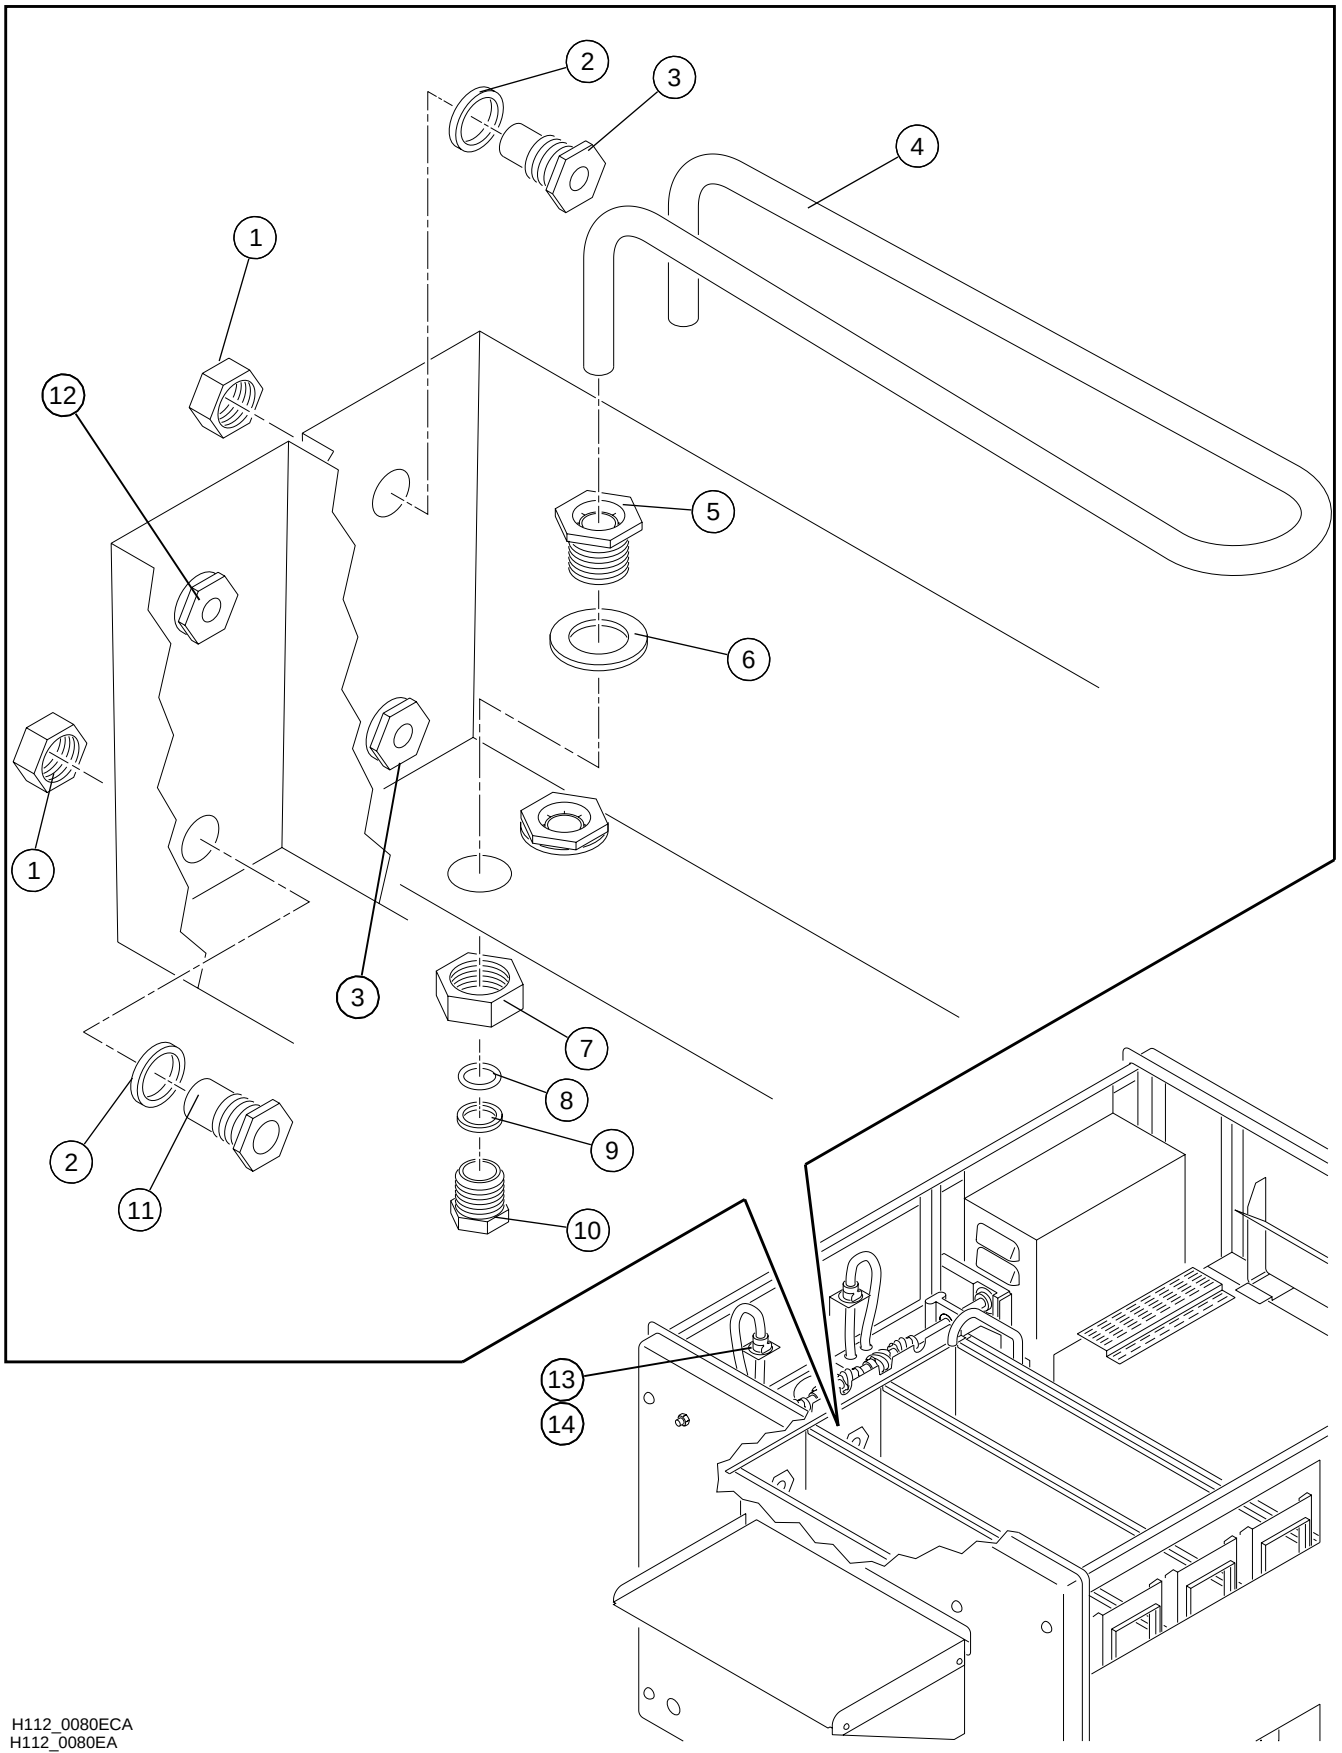

Figure 6–4

Item	Part No.	Description	Qty.
1	990417	Nut	4
2	581241	Gasket	4
3	990415	Fitting - Small	2
4	287053	Exchanger - Heat	2
5	990400	Fitting	4
6	492260	Seal	4
7	990419	Nut	4
8	532378	Seal	4
9	532379	Washer	4
10	990418	Nut - Gland	4
11	990416	Fitting - Large	1
12	5B6300	Fitting - D, Recirculation	1
13	990401	Fitting - Quick Release, female	2
14	943700	Insert - Quick Release, male	2

Figure 6–5 Recirculation Pump

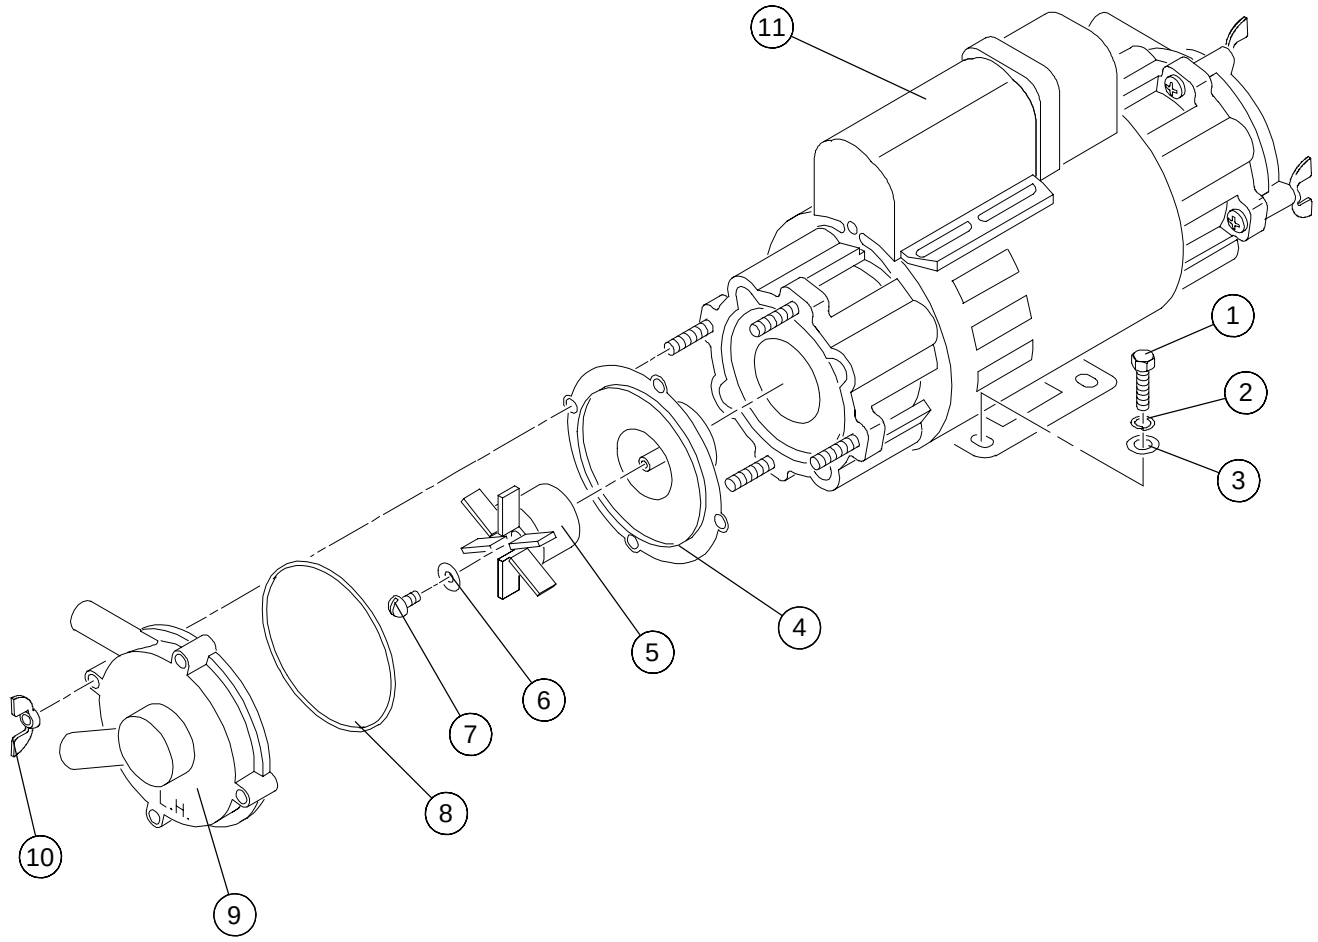

H112_0083DCA
H112_0083DA

Figure 6–5

Item	Part No.	Description	Qty.	Notes
	418701	Housing and Impeller Assembly	2	Includes items 4 - 7.
	990403	Recirculation Pump Assembly - M35A-M Processor	1	120 volts; includes all the items below.
	990402	Recirculation Pump Assembly - M35-M Processor	1	220 volts; includes all the items below.
	469403	Pad - Motor	1	Not shown.
1	264429	Screw	4	
2	535004	Washer - Lock	4	
3	852799	Washer	4	
4	418700	Housing	2	
5	474362	Impeller	2	
6	493505	Washer	2	
7	852946	Screw	2	
8	463363	O-Ring	2	
9	472606	Housing - R.H.	1	Developer.
	472605	Housing - L.H.	1	Fixer.
10	144097	Nut - Wing	8	
11	603538	Capacitor	1	
	651865	Cable Assembly	1	Not shown.

Figure 6–6 Replenishment Pump

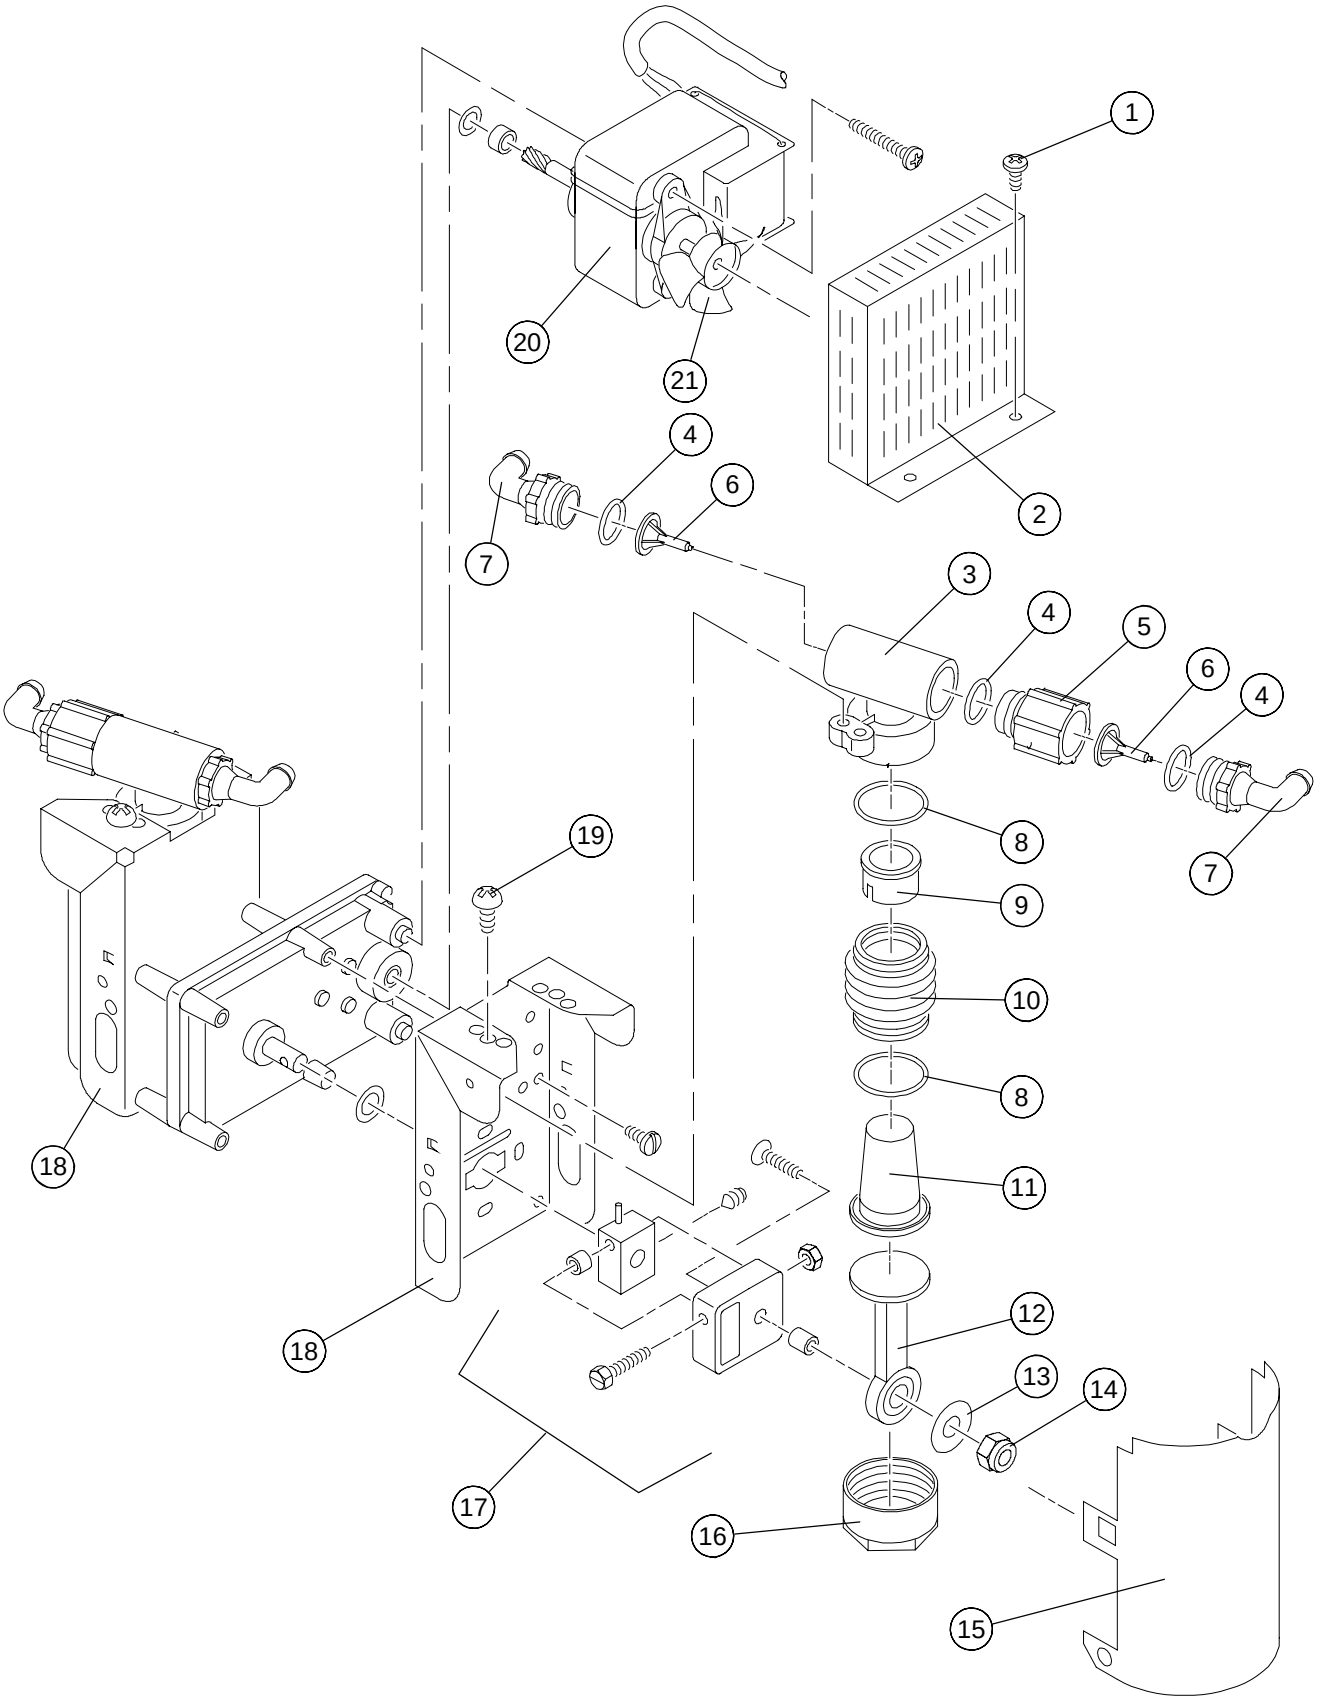

Figure 6–6

Item	Part No.	Description	Qty.	Notes
	240227	Replenishment Pump Assembly - M35A-M Processor	1	120 volts; includes all the items below.
	651861	Replenishment Pump Assembly - M35-M Processor	1	220 volts; includes all the items below.
1	852683	Screw	2	Includes a Lock Washer, Part No. 535004, and a Washer, Part No. 852799.
2	484668	Guard - Fan	1	
3	532007	Body - Valve	1	
4	520388	O-Ring	2	
5	480978	Adapter - Pump Intake	1	
6	609817	Valve - Poppet	2	
7	520390	Elbow	2	
8	535639	O-Ring	2	
9	418739	Guide - Cup	1	
10	532008	Bellows - Pump	1	
11	594838	Cone	1	
12	594837	Rod - Connecting, and bearing	1	
13	520394	Washer	1	
14	480130	Nut	1	
15	520397	Cover - Splash	1	
16	246001	Nut - Coupling	1	
17	963316	Crank Assembly	1	
18	532390	Bracket	2	
19	963317	Screw	2	
20	474881	Motor Assembly - M35A-M Processor	1	120 volts, 50/60 Hz
	963315	Motor Assembly - M35-M Processor	1	220 volts, 50/60 Hz
21	520381	Fan	1	

Figure 6–7 Weirs

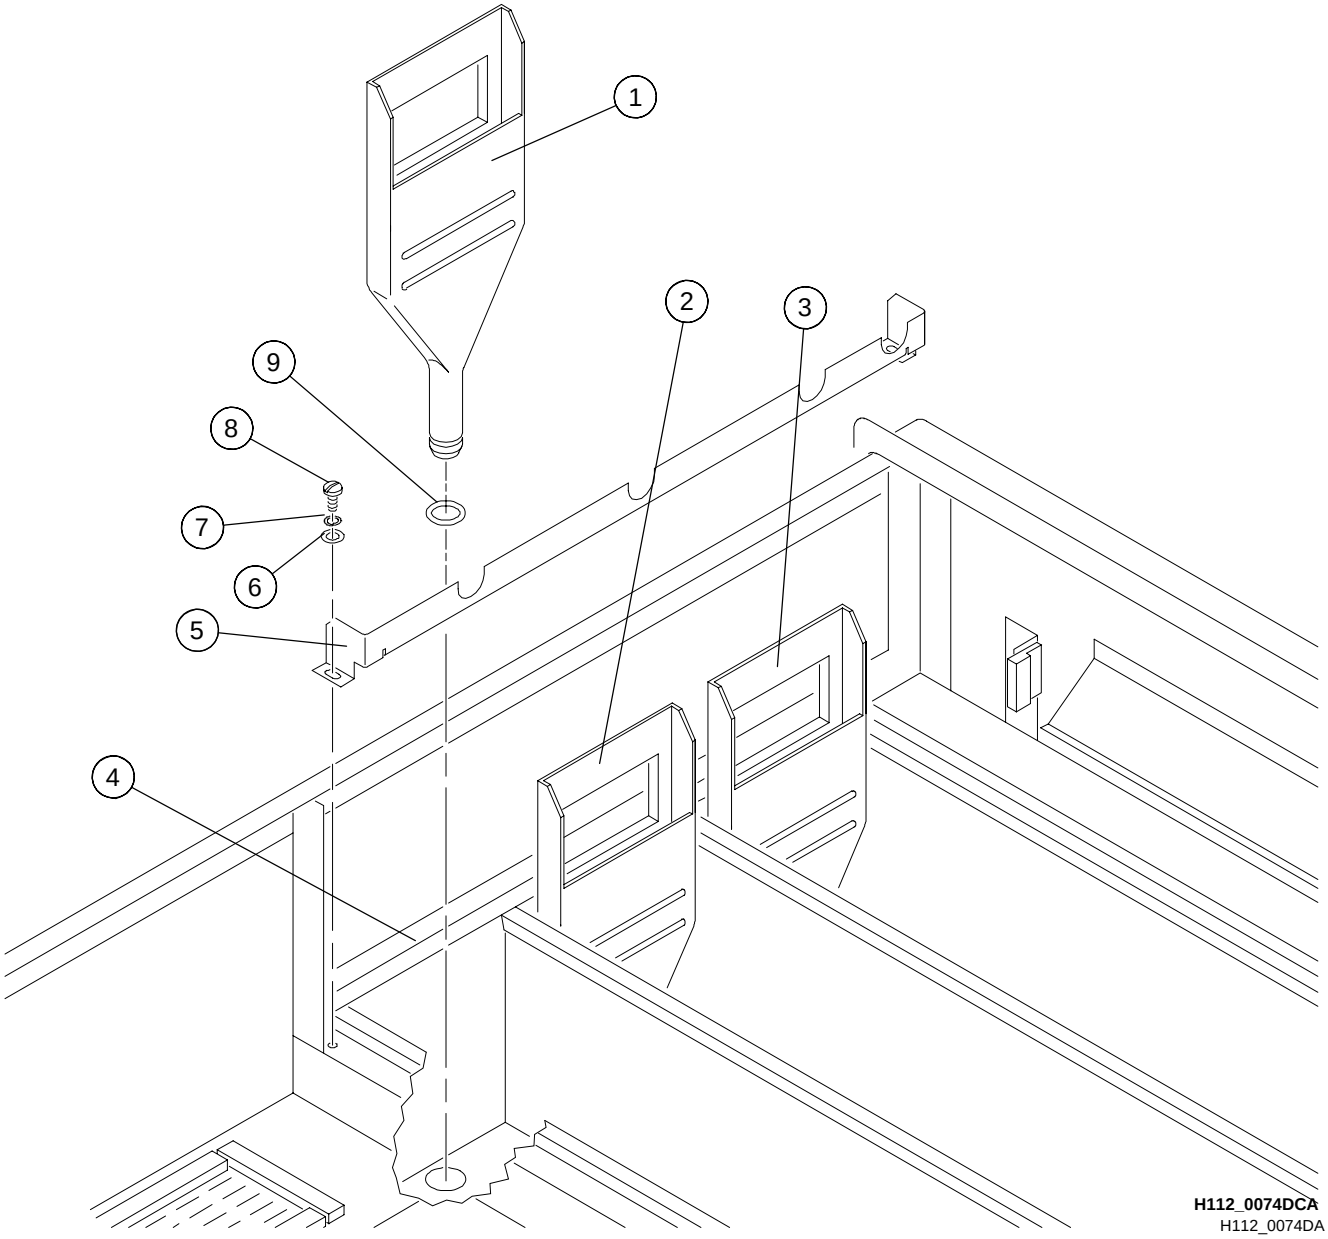

Figure 6–7

Item	Part No.	Description	Qty.	Notes
1	488151	Weir - Beige	1	Wash
2	489736	Weir - Blue	1	Fixer
3	489735	Weir - Red	1	Developer
4	554780	Seal - Tank	2	
5	779216	Support - Rack	1	
6	852799	Washer	2	
7	535004	Washer - Lock	2	
8	852683	Screw	2	
9	539138	O-Ring	3	

Section 7: Electrical

Figure 7–1 Switches, Safelight Receptacle, and CB3

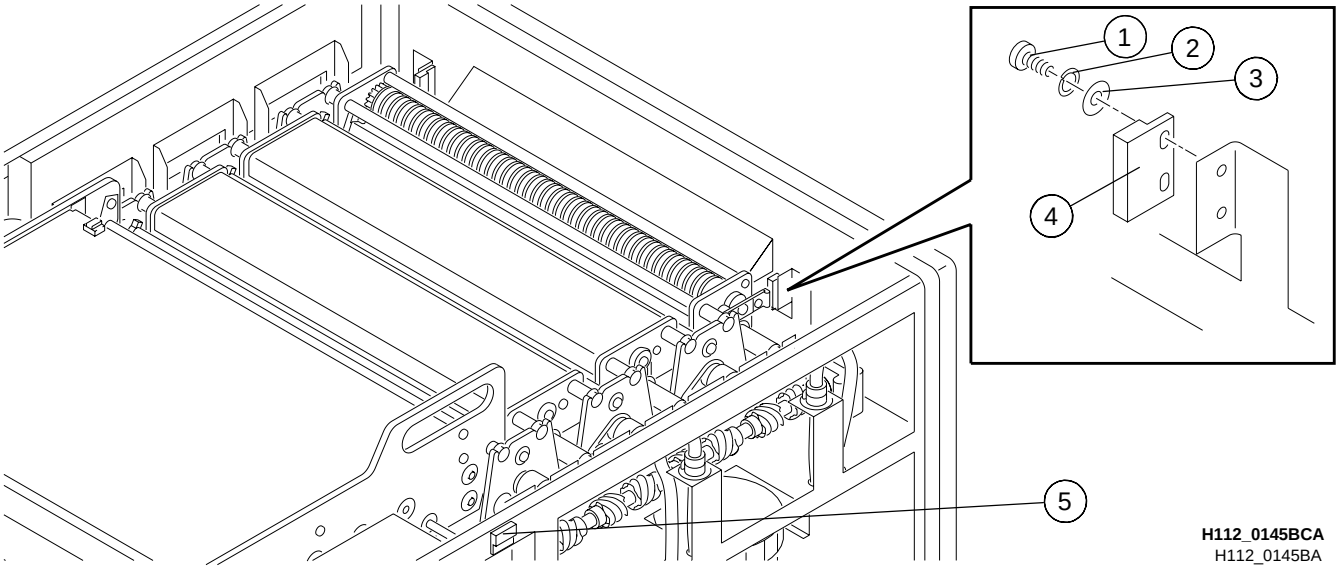

H112_0145BCA
H112_0145BA

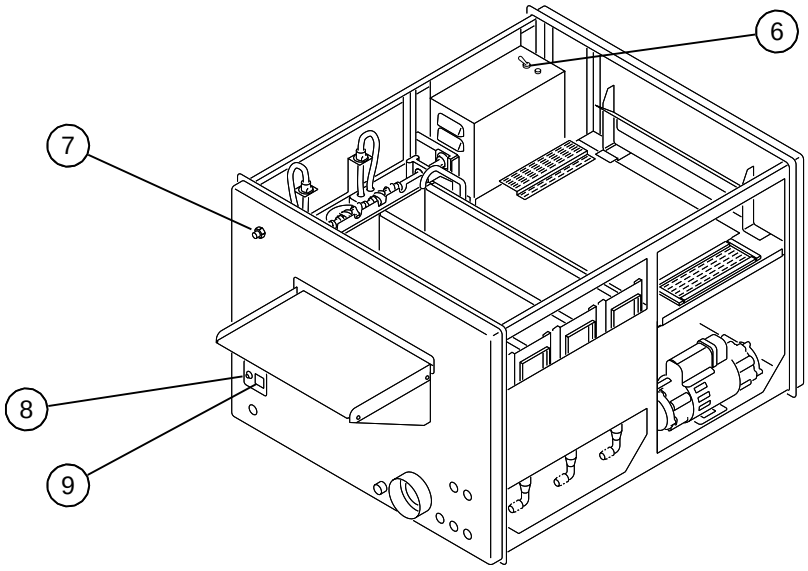

H112_0166BCD
H112_0166BA

Figure 7–1

Item	Part No.	Description	Qty.	Notes
1	165626	Screw	6	
2	853096	Washer - Lock	6	
3	852831	Washer	6	
4	240514	Switch - Film Detector	2	
	182915	Tie - Wire	2	##Not shown.##
5	240513	Switch - Interlock	1	##Includes 2 each of items 1 - 3.##
	914565	Plate - Nut	2	##Not shown.##
6	779513	Switch - STD/EXT	1	
7	651860	Switch - Run/Standby	1	
8	579424	Circuit Breaker - CB3	1	##M35A-M Processor only.##
9	264339	Receptacle - Safelight	1	##M35A-M Processor only.##
	594466	Jack - Miniloader	1	##M35-M Processor only.##

Figure 7–2 Electrical Box

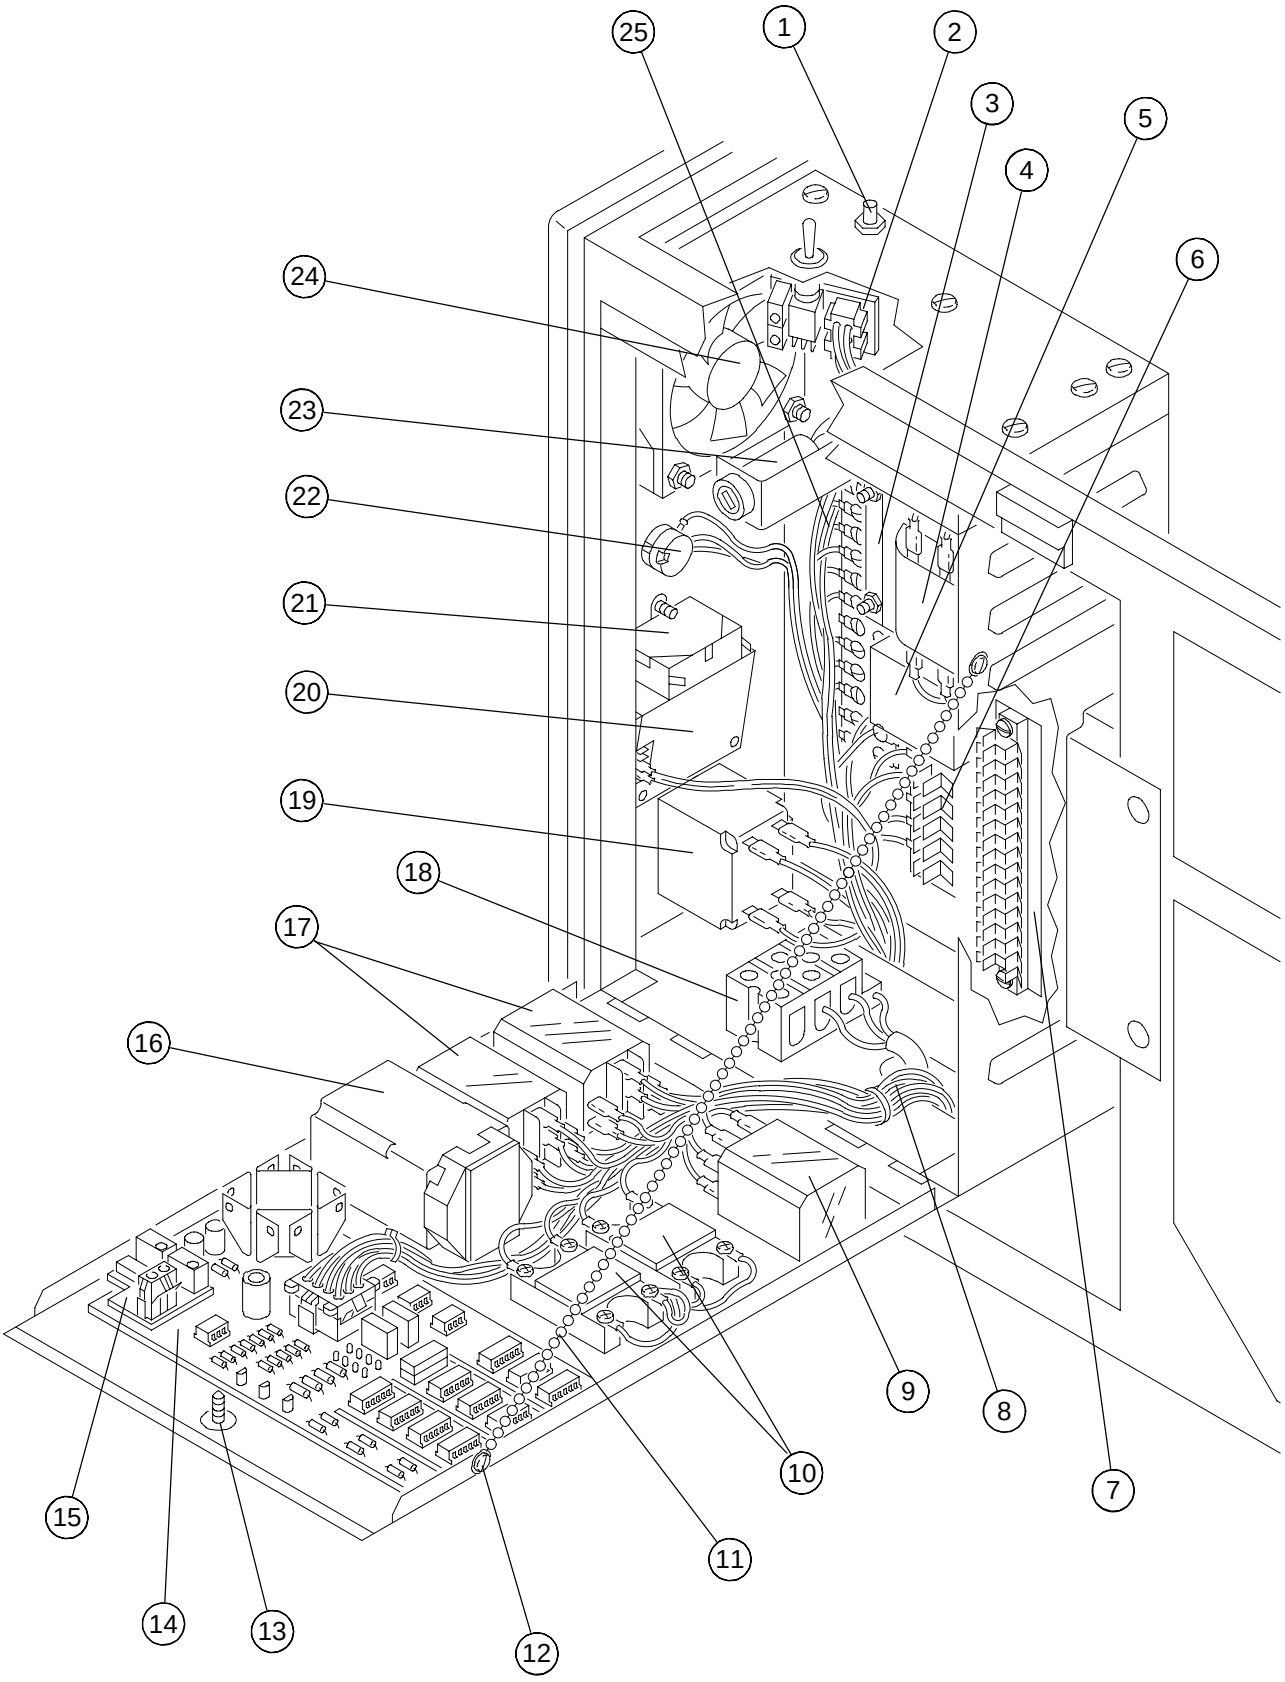

Figure 7–2

Item	Part No.	Description	Qty.	Notes
1	696088	Circuit Breaker - CB2	1	##4.0 Amp. M35A-M Processor only.##
2	914271	200 Circuit Board	1	
3	187296	Block - Terminal	1	##TB2.##
4	779510	Transformer	1	##T1.##
5	779504	Speed Control - Motor	4	##A1.##
6	485766	Block - Terminal	1	##TB3.##
7	594752	Block - Terminal	1	##TB4.##
8	779516	Main Harness Assembly	1	
9	779506	Relay	1	##K1.##
	779526	Filter - QUENCHARC	2	
	779527	Diode	1	
10	7B8547	Relay - Solid State	2	##U1 [amp] U2.##
11	914471	Chain	1	
12	852835	Screw	2	
	168424	Washer - Lock	2	
13	532040	Screw - Cover	1	
	460626	Washer	1	
14	914272	100 Circuit Board	1	
15	914270	300 Circuit Board	1	
16	419779	Kit - Replenishment Pump Timer	1	Includes Cables and Socket.
	419780	Timer - Replenishment Pump	1	
17	562334	Relay	2	##K2 and K3.##
18	480206	Block - Terminal	1	##TB1.##
19	914441	Circuit Breaker - CB1	1	
20	748516	Thermometer - Digital	1	##M1. Includes the following 3 items. ##
	968818	Bezel	1	
	968819	Mask	1	
	968823	EMI Shield	1	
21	779501	Capacitor	1	##C1.##
22	779524	Potentiometer Assembly - Dryer Temperature	1	
23	476330	Holder - Fuse	1	
	176049	Fuse - 4 Amp	1	##M35A-M Processor only.##
	473141	Fuse - 2 Amp	1	##M35-M Processor only.##
24	438869	Fan	1	
25	779520	Cable - Drive Motor	1	
	779521	Cable - ED Tach	1	
	651851	Filter - EMI	1	##Not shown. M35-M Processor only. ##
	598808	Lug - Ground	1	##E1. Not shown.##
	651853	Buzzer	1	##Not shown.##
	484691	ESD Jack Assembly	1	##Not shown.##
	651875	Switch - Run/Standby	1	##S1. Not shown.##

Section 8: Miscellaneous

Figure 8–1 Miscellaneous Parts

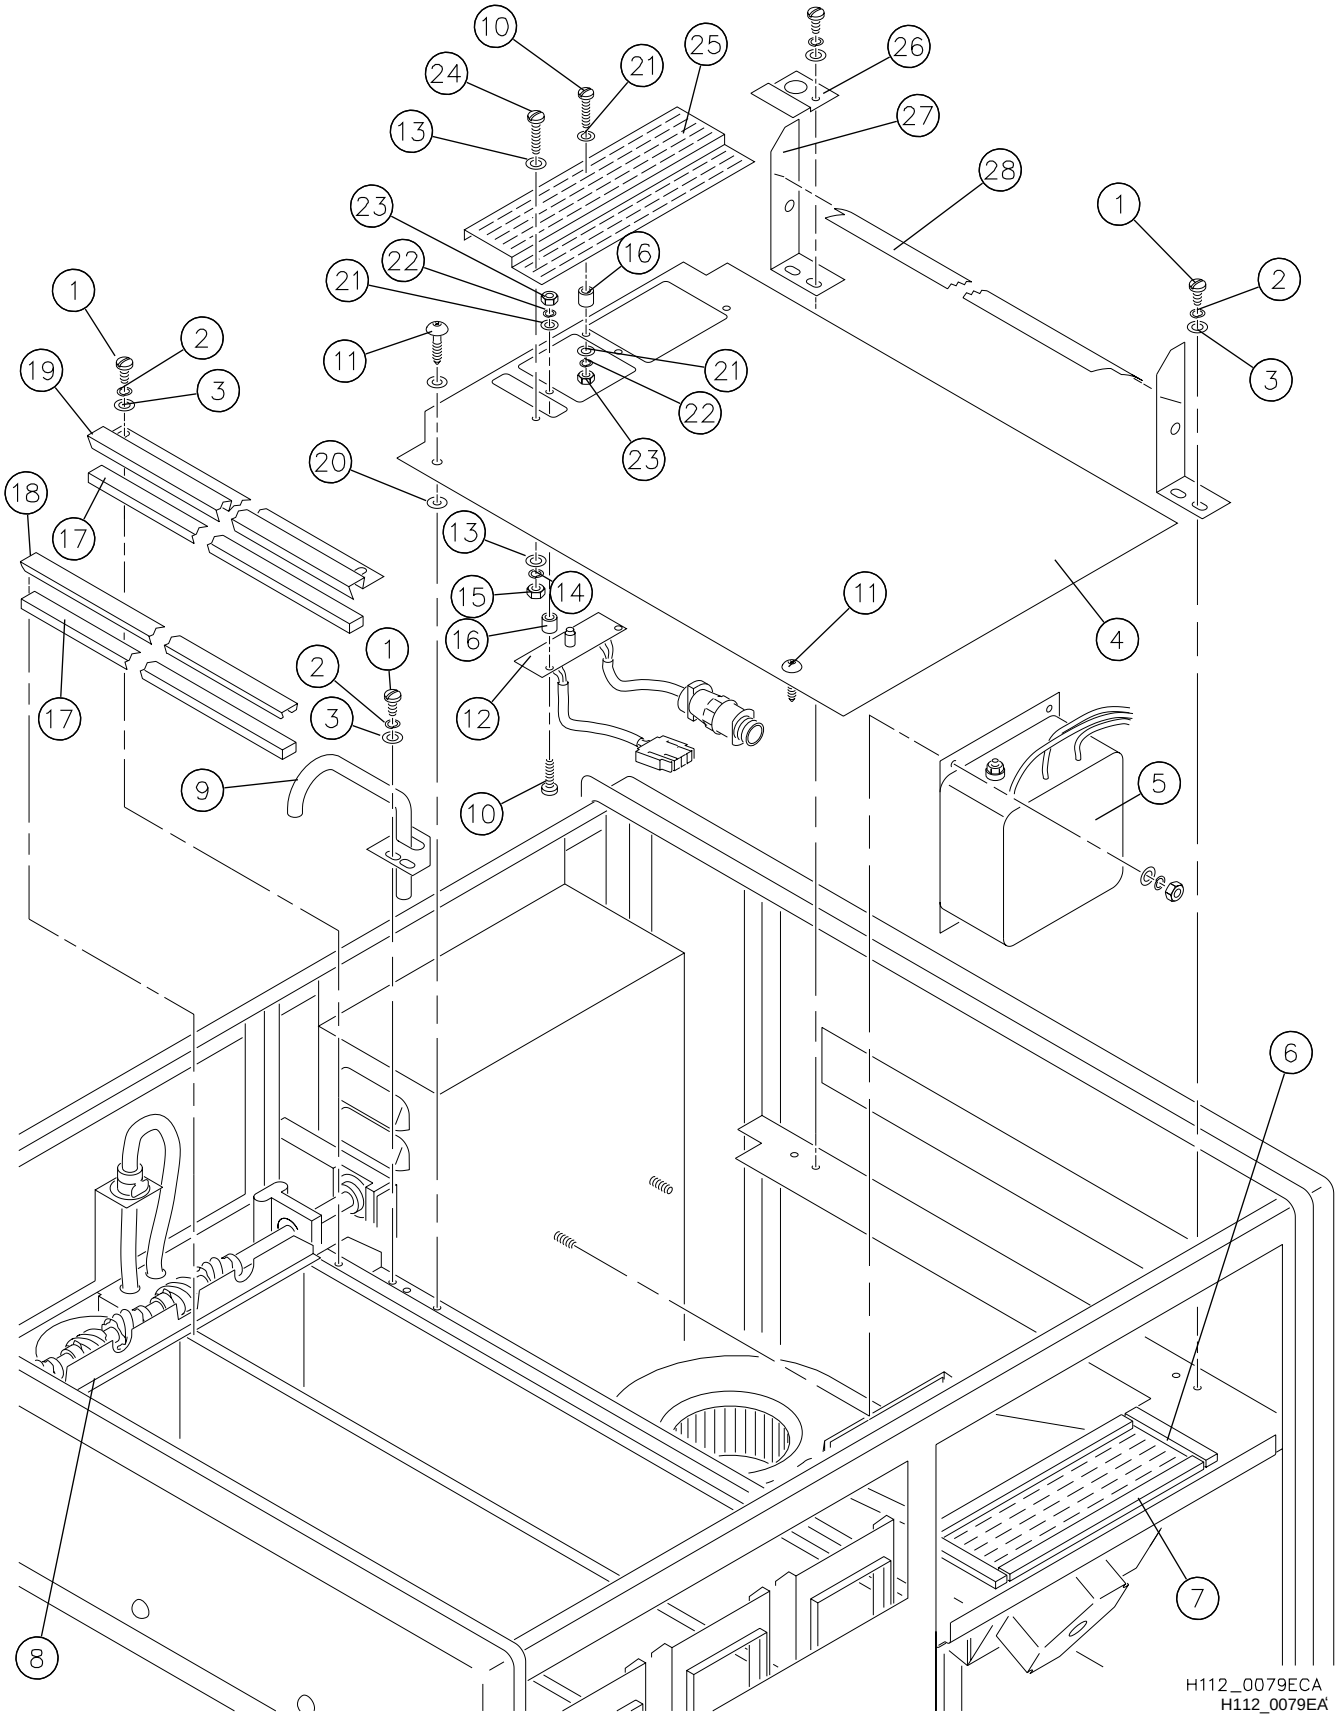

Figure 8–1

Item	Part No.	Description	Qty.	Notes
1	852683	Screw	8	
2	535004	Washer - Lock	8	
3	852799	Washer	8	
4	485391	Cover - Receiving End	1	
5	651851	Filter - EMI	1	##M35-M Processor only; 220 volts.##
6	287741	Foam	2	
7	287731	Foam	2	
8	554780	Seal - Tank	2	
9	779214	Tube and Tab Assembly	1	
10	180126	Screw	2	
11	261180	Screw - Captive, and washer	2	
12	696174	800 Circuit Board and Cable Assembly	1	
13	852611	Washer	5	
14	853100	Washer - Lock	3	
15	853080	Nut	3	
16	183643	Spacer	3	
17	287683	Seal - Tank Separator	4	
18	1C7316	Clip	2	
19	1C7317	Clip - Rack End	2	
20	499753	Retainer	2	
21	575822	Washer	2	
22	187283	Washer - Lock	2	
23	852618	Nut	2	
24	852807	Screw	2	
25	484690	Guard - Circuit Board	1	
26	914375	Clamp	1	
27	651890	Support - Bin	2	
28	287682	Guide - Exit	1	

Figure 8–2 Accessories

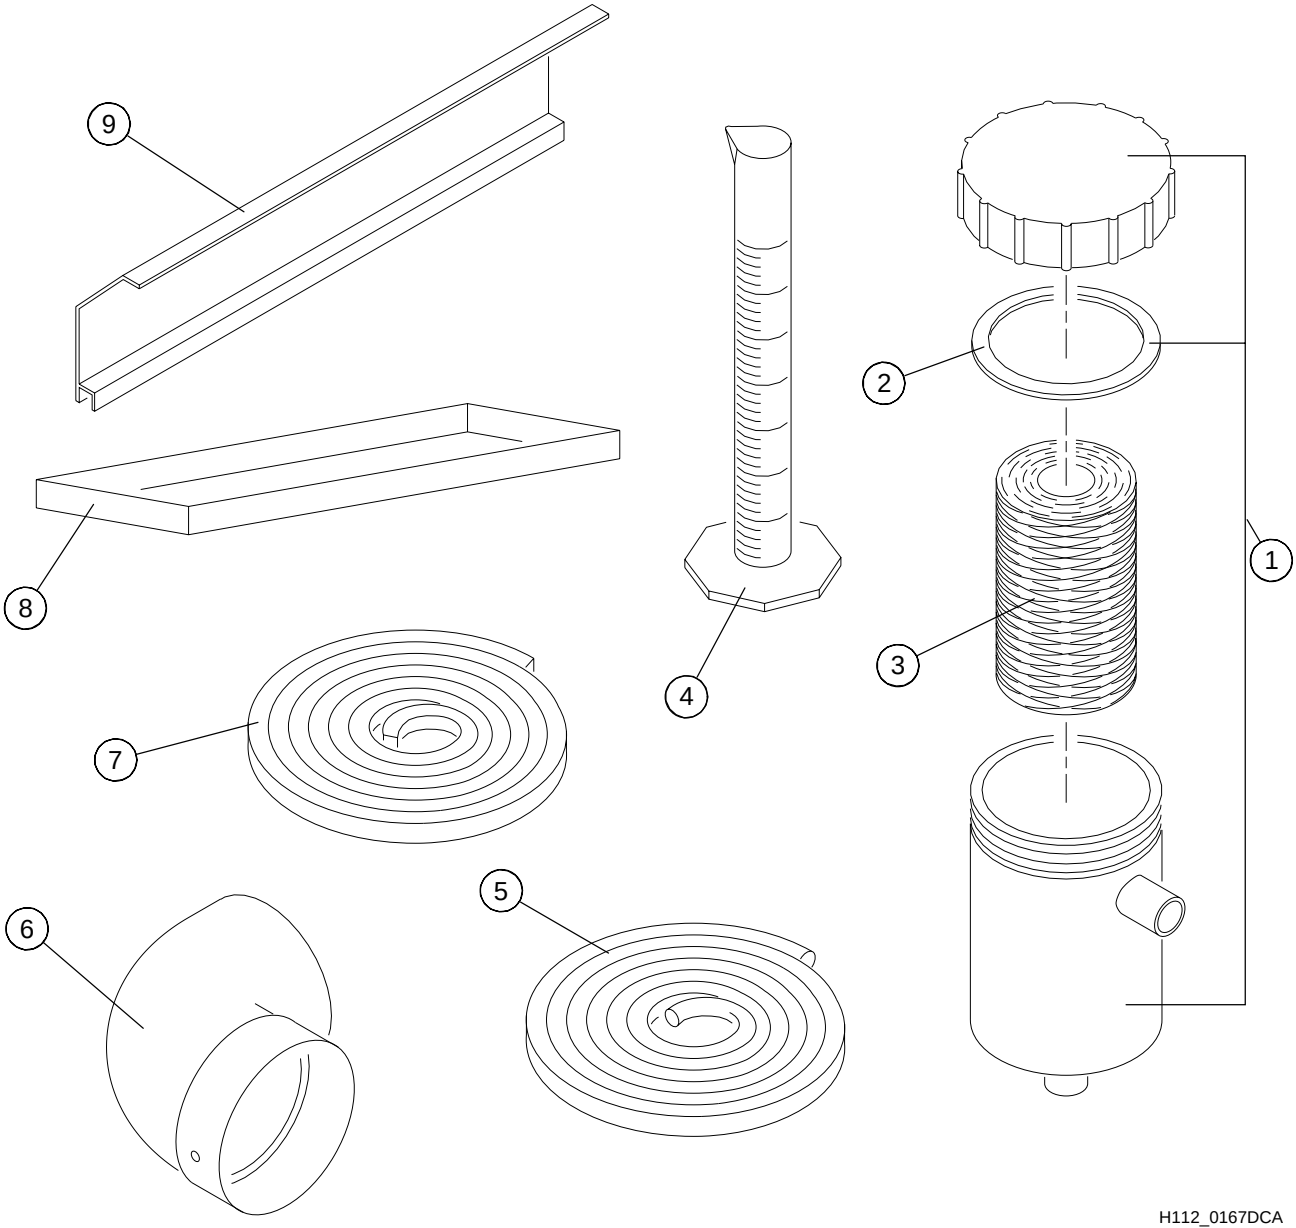

Figure 8–2

Item	Part No.	Description	Qty.	Notes
1	536827	Filter Assembly	1	##Includes item 2. ##
2	473118	Seal - Filter	1	
3	562790	Cartridge - Filter	1	
4	479821	Cylinder - Graduated	2	
5	240494	Tubing - Bulk		##Prepack.##
	760477	Tubing - Bulk, 3/4-in. ID		##Order by the foot.##
	760476	Tubing - Bulk, 1/2-in. ID		##Order by the foot.##
	452990	Tubing - Bulk, 3/8-in. ID		##Order by the foot.##
6	240733	Elbow - Exhaust	1	
7	650939	Gasket	1	
8	287681	Tray - Drip	1	
9	287684	Guard - Splash	1	
		KODAK M35/M43 X-OMAT Mounting Stand	1	##CAT No. 150 0537, not shown.##

Figure 8–3 120 Power Cord, Wall Receptacle , and Lighttight Feed Tray

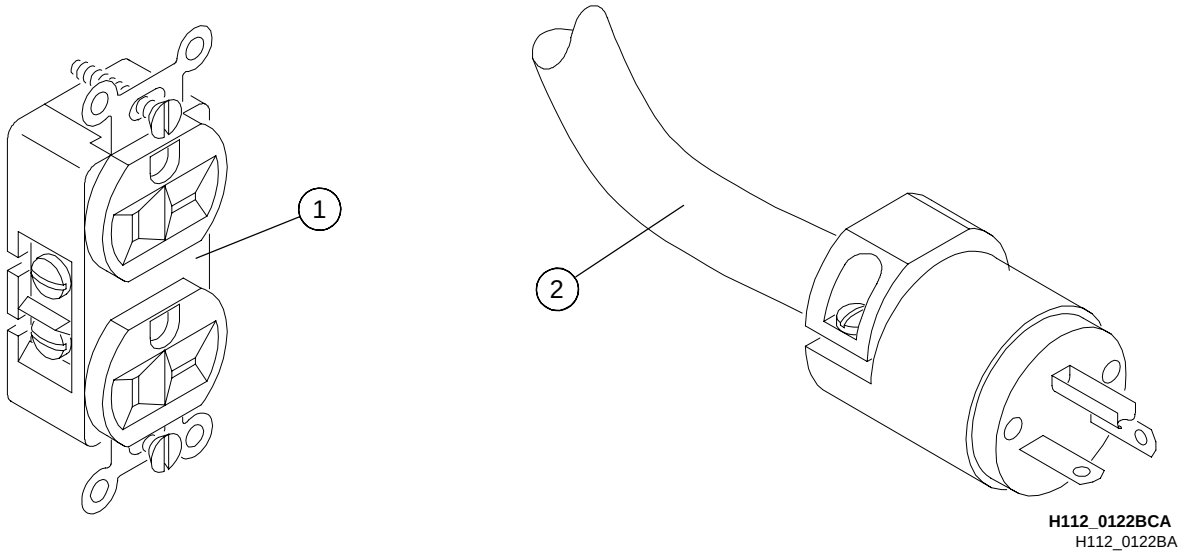

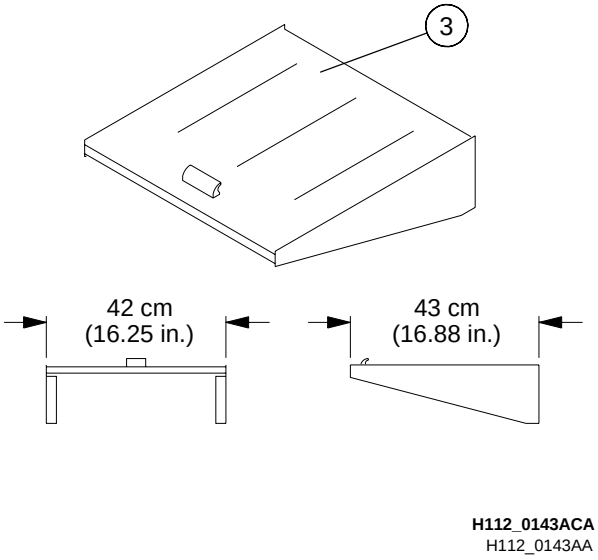

Figure 8–3

Item	Part No.	Description	Qty.	Notes
1	419787	Receptacle - Wall	1	##For M35A-M Processor only. ##
2	240226	Power Cord Assembly	1	##For the M35A-M Processor. The M35-M Processor does not come with a power cord.##
3	246558	KODAK M35/M35A X-OMAT Lighttight Feed Tray	1	##Does not allow the processing of 2 sheets of 18 x 24 cm film side by side. ##

Figure 8–4 Replenishment Tank Kits

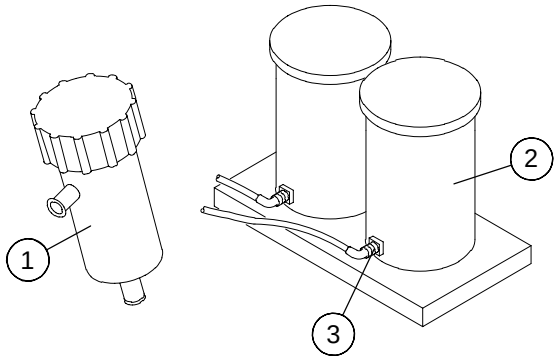

H112_0010ACB
H112_0010AC

Figure 8–4

Item	Part No.	Description	Qty.	Notes
1	472261	Strainer Assembly	2	
2		KODAK Developer Replenisher Tank Kit	1	##CAT No. 151 1740 for 14-gallon tanks CAT No. 102 2987 for 30-gallon tanks ##
		KODAK Fixer Replenisher Tank Kit	1	##CAT No. 151 1765 for 14-gallon tanks CAT No. 102 2961 for 30-gallon tanks ##
		KODAK Developer-Fixer Replenisher Tank Set, Model M7	1	##CAT No. 150 0537 for 8-gallon tanks ##
3	492578	Fitting	1	##CAT No. 154 4154 ##
	459681	Adapter	1	

Figure 8–5 Seismic Bracket

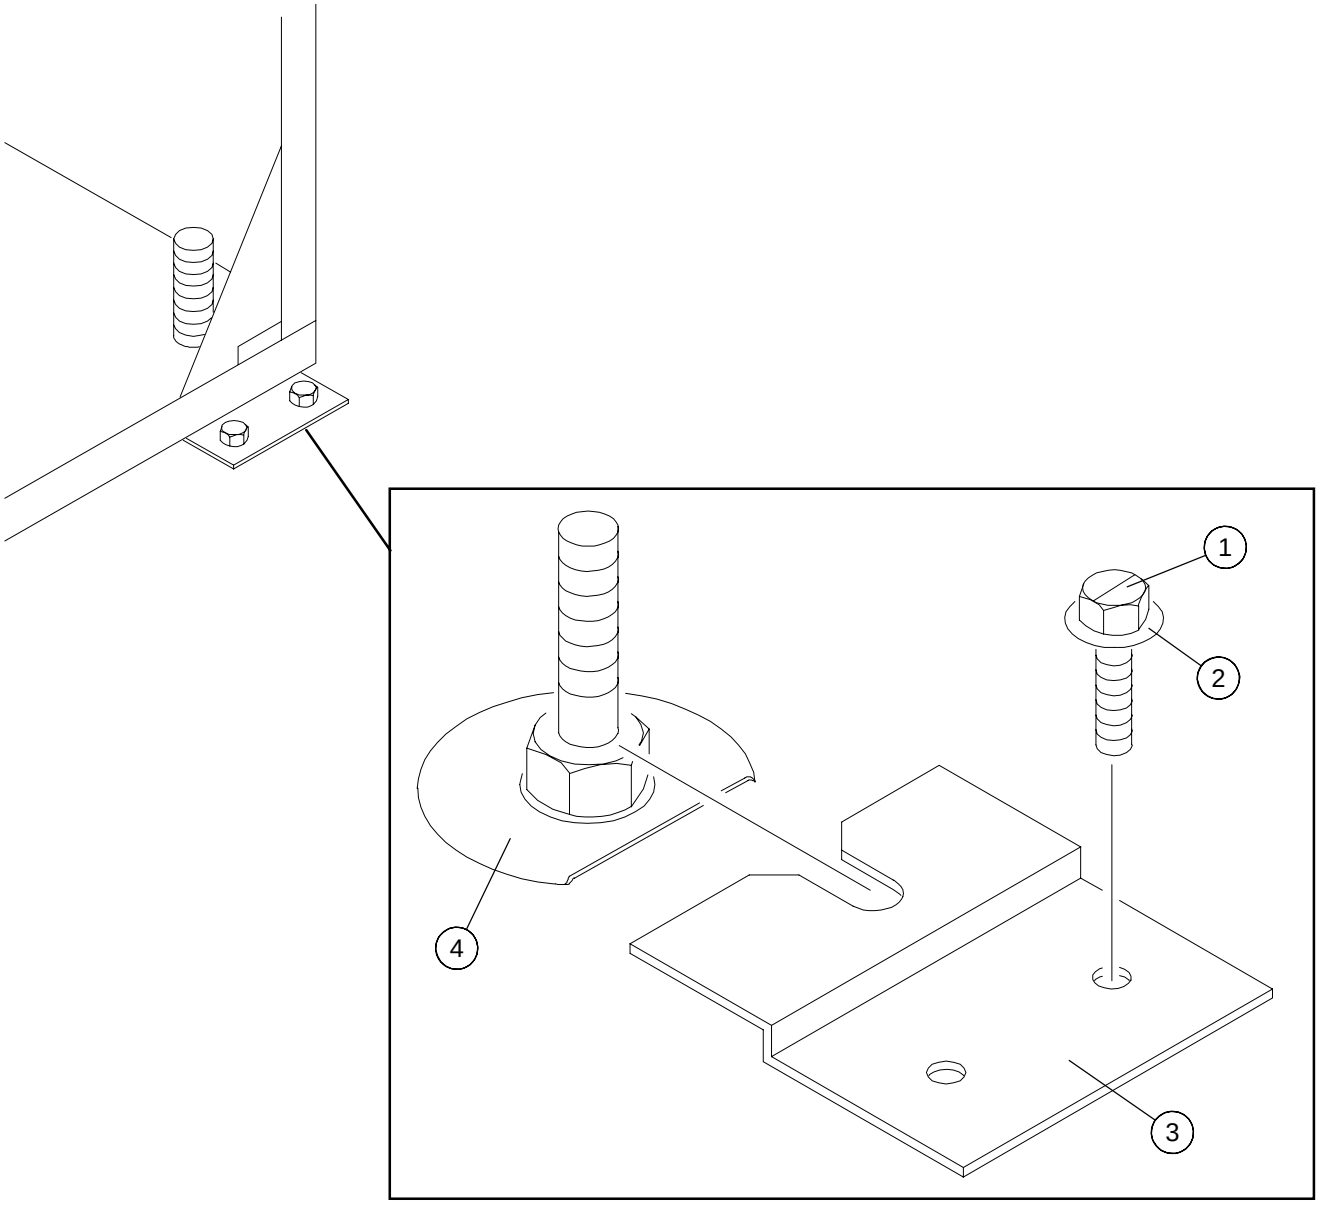

H108_0193DCB
H108_0193DA

Figure 8–5

Item	Part No.	Description	Qty.	Notes
	261413	Seismic Kit	1	##Includes the following items. ##
1	188623	Bolt - Stainless Steel	8	
	261929	Anchor	8	##Not shown.##
2	173824	Washer - Stainless Steel	8	
3	240104	Bracket	4	
4	261898	Plate - Floor	4	

Section 9: Numerical Parts Index

Numerical Index

Part No.	Description	Figure No.
144097	Nut - Wing	6-5
165626	Screw	7-1
165627	Washer	1-1, 3-1, 3-2
166856	Screw	3-16
168424	Washer - Lock	7-2
173824	Washer - Stainless Steel	8-5
175381	Pin	3-9
176049	Fuse - 4 Amp	7-2
178145	Washer - Lock	3-16
180126	Screw	8-1
180281	Connector - Tee	6-1
182391	O-Ring	3-15
182915	Tie - Wire	7-1
183624	Screw	3-7, 3-8, 3-9, 3-10, 3-11, 3-12, 3-13
183643	Spacer	8-1
183851	O-Ring	3-15
185101	Nipple	6-2
187235	Screw	6-3
187283	Washer - Lock	3-1, 3-2, 8-1
187296	Block - Terminal	7-2
188623	Bolt - Stainless Steel	8-5
188807	Screw	4-1
190596	Screw	3-12, 3-13
1C4504	Strip - Light Lock	1-2
1C4506	Feed Shelf Assembly	1-1
1C4507	Protector	1-1
1C7120	Smooth Guide Shoe Kit - M35	3-7, 3-12
1C7315	Developer Rack Assembly	1-2, 3-7, 3-10
1C7316	Clip	8-1
1C7317	Clip - Rack End	8-1
1C7323	Hose	6-1
1C7324	Tube	6-1
1C7554	Roller	3-10, 3-11
1C7555	Roller	3-10, 3-11
1C7556	Roller	3-10, 3-11
1C7557	Roller - Knurled	3-11
1C7558	Roller	3-12, 3-13
1C7630	Sideplate - Turnaround, drive side	3-12, 3-13
1C7631	Sideplate - Turnaround, nondrive	3-12, 3-13
1C7632	Plate - Double Lock Mounting	3-12
1C7633	Roller	3-7
1C7635	Shoe - Guide, adjustable	3-12, 3-13
1C7636	Roller	3-7, 3-8
1C7640	Roller	3-12

Numerical Index

Part No.	Description	Figure No.
1C7911	Bushing	6-1
1C7912	Fitting	6-1
1C7988	Plate - Locking	3-12, 3-13
240002	Tube	6-1
240003	Tube	6-2
240004	Tube	6-1
240005	Tube	6-2
240058	Tie - Red	3-7, 6-1
240059	Tie - Blue	3-8, 6-2
240060	Bearing	3-3, 3-4
240065	Spacer	3-3
240104	Bracket	8-5
240225	Blower Assembly - M35A-M Processor	5-1
240226	Power Cord Assembly	1-2, 8-3
240227	Replenishment Pump Assembly - M35A-M Processor	6-1, 6-2, 6-6
240494	Tubing - Bulk	8-2
240513	Switch - Interlock	7-1
240514	Switch - Film Detector	7-1
240733	Elbow - Exhaust	8-2
240747	Roller	3-3, 3-4
246001	Nut - Coupling	6-6
246558	KODAK M35/M35A X-OMAT Lighttight Feed Tray	8-3
246589	Sprocket - 26 Tooth	4-1
246800	Clamp	6-1, 6-2
246801	Clamp - Small	6-1, 6-2
246806	Clamp	5-1
246808	Clamp - Large	6-1, 6-2
246879	Sideplate - Detector Crossover	3-1, 3-2
246882	Roller - Detector, drive	3-1, 3-2
246883	Roller - Detector, driven	3-1, 3-2
246917	Roller	3-9
246918	Roller	3-9
261180	Screw - Captive, and washer	8-1
261181	Clip - Retaining	1-1
261182	Screw - Captive, and washer	1-2
261183	Bin - Receiving	1-2
261185	Deflector	1-2
261276	Fixer/Wash Crossover Assembly	1-2, 3-5, 3-6
261277	Wash Rack Assembly	1-2, 3-9, 3-10
261413	Seismic Kit	8-5
261590	Water Inlet Assembly	6-2
261650	Kit - Flow Control Valve	6-2
261898	Plate - Floor	8-5
261929	Anchor	8-5
264339	Receptacle - Safelight	7-1
264425	Hose - Exhaust	5-1
264429	Screw	5-1, 6-5
264432	Sideplate - Nondrive Side	3-14, 3-16

Numerical Index

Part No.	Description	Figure No.
286910	Sideplate - Nondrive	3-9, 3-10
286912	Sideplate - Drive	3-9, 3-10
287000	Tank - Wash	6-1, 6-2
287002	Rod - Tie	3-7, 3-8, 3-9, 3-12, 3-13
287003	Shaft	3-7, 3-8, 3-12, 3-13
287006	Shoe - Guide	3-13
287018	Guide Rod Assembly	3-10, 3-11
287027	Shaft	3-7, 3-8
287028	Roller	3-8
287032	Roller	3-7, 3-8
287036	Rod - Tie	3-1, 3-2, 3-3, 3-4, 3-5, 3-6
287037	Shaft	3-1, 3-2, 3-5, 3-6
287039	Shaft - Drive	3-1, 3-2
287041	Shoe - Guide	3-1, 3-2
287045	Shoe - Guide	3-3, 3-4, 3-16
287047	Shaft	3-5, 3-6
287048	Roller	3-5, 3-6
287049	Shoe - Guide	3-3, 3-4
287053	Exchanger - Heat	6-1, 6-2, 6-4
287067	Roller	3-15
287078	Roller	3-15
287079	Shaft	3-15
287081	Roller	3-15
287083	Roller	3-15
287085	Shaft	3-11, 3-15
287088	Shaft	3-15
287656	Roller	3-15
287676	Rod - Tie	3-16
287680	Cover - Evaporation	1-1
287681	Tray - Drip	8-2
287682	Guide - Exit	8-1
287683	Seal - Tank Separator	8-1
287684	Guard - Splash	8-2
287689	Rod - Tie	3-16
287691	Spacer - Sideplate, exit	3-14
287692	Spacer - Sideplate, lower entrance	3-14
287694	Spacer - Sideplate, upper entrance	3-14
287695	Cover - Dryer, bottom	3-14
287696	Cover - Dryer, top	3-14
287697	Plenum	3-14
287728	Guard - Chain	4-1
287730	Bracket - Water Inlet	6-2
287731	Foam	8-1
287733	Tube	6-2

Numerical Index

Part No.	Description	Figure No.
287735	Tube	6-1
287736	Tube	6-1
287741	Foam	8-1
333795	Developer/Fixer Crossover Assembly	1-2, 3-3, 3-4
333796	Dryer Rack Assembly	1-2, 3-14
333975	Cover - Pump Access	1-2
418700	Housing	6-5
418701	Housing and Impeller Assembly	6-5
418739	Guide - Cup	6-6
419779	Kit - Replenishment Pump Timer	7-2
419780	Timer - Replenishment Pump	7-2
419787	Receptacle - Wall	8-3
433708	Washer - Lock	5-1
438869	Fan	7-2
452044	Key	3-1, 3-3, 3-5
452990	Tubing - Bulk, 3/8-in. ID	8-2
454285	Sprocket	3-7, 3-8, 3-9
454354	Key	3-7, 3-8, 3-9
456215	Spacer	5-1
458174	Spacer	3-1, 3-5
458205	Spacer	3-7, 3-8, 3-9
458236	Spacer	3-2
458240	Chain	3-7, 3-8, 3-9
458384	Gear	3-9
459060	Stud - Air Tube	3-16
459229	Screw - Leveling	1-2
459343	Washer	3-9, 3-12, 3-13
459344	Spring	3-3, 3-4
459347	Collar	3-7, 3-8
459355	Spacer	3-7, 3-8
459548	Plate - Floor	1-2
459681	Adapter	8-4
459943	Washer - Identification	3-7
459944	Washer - Identification	3-8
459945	Washer - Identification	3-9
459946	Washer - Identification	3-3
459947	Washer - Identification	3-5
460626	Washer	7-2
463004	Spacer	3-7, 3-8, 3-12, 3-13
463100	Washer - Thrust	3-7, 3-8, 3-9, 3-10, 3-11, 3-12, 3-13
463363	O-Ring	6-5
463950	O-Ring	3-9
464937	Connector - Tee	6-1
466640	Sprocket - 17 Tooth	4-1
467843	Spring	3-7, 3-8

Numerical Index

Part No.	Description	Figure No.
468535	Adapter - Exhaust	1-1
469403	Pad - Motor	6-5
470363	Label	1-1
471393	Tube	6-2
472261	Strainer Assembly	8-4
472477	Control - Flow	6-2
472605	Housing - L.H.	6-5
472606	Housing - R.H.	6-5
472755	Nut - Tie Rod, nylon	3-2, 3-4, 3-6
472756	Nut - Tie Rod, nylon	3-1, 3-3, 3-5
473085	O-Ring	3-15
473118	Seal - Filter	8-2
473141	Fuse - 2 Amp	7-2
473220	Bushing	3-7, 3-8
473221	Plate - Keeper	3-7, 3-8
473538	Spacer	3-9
474100	Spacer	3-9
474180	Support	3-1, 3-2
474362	Impeller	6-5
474596	Bracket - Guide Shoe	3-1, 3-2, 3-3, 3-4, 3-5, 3-6, 3-12, 3-13
474645	Spring	3-12, 3-13
474777	Stud	3-7, 3-10, 3-11
474881	Motor Assembly - M35A-M Processor	6-6
476330	Holder - Fuse	7-2
477005	Sideplate	3-3, 3-4, 3-5, 3-6
477011	Connector - Y	6-1
477092	Spacer	3-7, 3-8
477093	Spacer	3-9
479815	Tube - Elbow, 45-degree	6-1
479820	Spring	3-9
479821	Cylinder - Graduated	8-2
480130	Nut	6-6
480206	Block - Terminal	7-2
480366	Fastener	3-14
480978	Adapter - Pump Intake	6-6
482222	Shaft - Drive	4-1
482262	Support	3-16
482270	Washer	3-15
482271	Washer	3-15
482272	Spacer	3-15
482273	Collar	3-15
482274	Spacer	3-15
482275	Gear	3-15
482277	Spacer	3-15
482283	Nut	3-16

Numerical Index

Part No.	Description	Figure No.
484668	Guard - Fan	6-6
484674	Tube - Air	3-16
484688	Handle	1-1
484689	Heater Element Assembly - M35A-M Processor	5-1
484690	Guard - Circuit Board	8-1
484691	ESD Jack Assembly	7-2
485291	Handle - Support	1-1
485391	Cover - Receiving End	8-1
485399	Heater - M35A-M Processor	6-3
485406	Roller	3-3, 3-4
485766	Block - Terminal	7-2
486742	Fastener - Bin	1-2
488151	Weir - Beige	6-7
488169	Spacer	4-1
488190	Tube	6-1
489726	Bolt - Hook	1-2
489727	Stud	3-15
489735	Weir - Red	6-7
489736	Weir - Blue	6-7
489788	Tube	6-1, 6-2
489997	Standoff	3-1, 3-2
490092	Bearing	3-3, 3-4
490096	Screw	3-12, 3-13
490097	Screw	3-12, 3-13
490123	Sideplate - Drive Side	3-14, 3-16
492260	Seal	6-4
492578	Fitting	8-4
493505	Washer	6-5
495710	Support	3-16
499753	Retainer	1-1, 1-2, 8-1
520381	Fan	6-6
520388	O-Ring	6-6
520390	Elbow	6-6
520394	Washer	6-6
520397	Cover - Splash	6-6
527068	Tube	6-1
532007	Body - Valve	6-6
532008	Bellows - Pump	6-6
532033	Adapter	6-3
532040	Screw - Cover	7-2
532054	Bearing	3-15
532071	Support	4-1
532165	Gear	3-15
532378	Seal	6-4
532379	Washer	6-4
532390	Bracket	6-6
534791	Spacer	3-7, 3-8

Numerical Index

Part No.	Description	Figure No.
535004	Washer - Lock	4-1, 5-1, 6-3, 6-5, 6-7, 8-1
535639	O-Ring	6-6
536827	Filter Assembly	6-1, 8-2
539138	O-Ring	6-7
539151	Orifice - 0.250 ID	6-1
539152	Orifice - 0.209 ID	6-2
543884	Pin	3-15
543891	Pin	3-15
543993	Bearing	3-15
544081	Pin	3-3
544132	Screw	3-15
544194	Screw	1-1, 3-1, 3-2
550774	Gear - Drive	3-7, 3-8, 3-9
550781	Gear - Drive, crossover	3-1, 3-3, 3-5
551400	Elbow	6-2
554780	Seal - Tank	6-7, 8-1
556104	Adapter	6-2
562334	Relay	7-2
562609	Spring	3-16
562790	Cartridge - Filter	8-2
564694	Washer	1-2
570450	Plate	4-1
571241	Bearing	3-15
575821	Screw	3-1, 3-2
575822	Washer	3-1, 3-2, 8-1
579383	Elbow	6-1, 6-2
579424	Circuit Breaker - CB3	7-1
581241	Gasket	6-1, 6-4
594466	Jack - Miniloader	7-1
594534	Washer	6-1, 6-2
594535	Gasket	6-1, 6-2
594752	Block - Terminal	7-2
594795	Overtemperature - Dryer Thermostat, safety	5-1
594837	Rod - Connecting, and bearing	6-6
594838	Cone	6-6
595425	Support Assembly	4-1
595426	Bearing	4-1
595860	Knob - Locking	1-2
597096	Spacer - Split	3-9
598808	Lug - Ground	7-2
5B6077	Roller	3-13
5B6150	Rod - Tie	3-1, 3-2
5B6163	Detector Crossover Assembly	1-2, 3-1, 3-2
5B6300	Fitting - D, Recirculation	6-1, 6-4
5B6301	Tube	6-1
5B6302	Kit - Tubing	6-1, 6-2

Numerical Index

Part No.	Description	Figure No.
5B6316	Screw	3-1, 3-2, 3-3, 3-4, 3-5, 3-6, 3-12, 3-13
5B6527	Bearing - Rocker	3-1, 3-2
5B6775	Spacer	3-12
603538	Capacitor	6-5
607793	Locator - Heater	6-3
609817	Valve - Poppet	6-6
650701	Bearing	3-5, 3-6, 3-9
650702	Bearing	3-9, 3-12, 3-13
650703	Bearing	3-1, 3-2, 3-5, 3-6
650707	Bearing	3-1, 3-2
650710	Bearing	3-7, 3-8
650733	Shim	4-1
650876	Actuator - Magnet	3-1, 3-2
650939	Gasket	8-2
651851	Filter - EMI	7-2, 8-1
651853	Buzzer	7-2
651860	Switch - Run/Standby	7-1
651861	Replenishment Pump Assembly - M35-M Processor	6-1, 6-2, 6-6
651862	Heater - M35-M Processor	6-3
651864	Blower Assembly - M35-M Processor	5-1
651865	Cable Assembly	6-5
651868	Thermostat - Overtemperature	6-3
651869	Thermistor	6-3
651875	Switch - Run/Standby	7-2
651890	Support - Bin	8-1
651892	Heater Element Assembly - M35-M Processor	5-1
696088	Circuit Breaker - CB2	7-2
696174	800 Circuit Board and Cable Assembly	8-1
719490	Kodak Corporate Symbol	1-2
748147	Roller	3-5, 3-6
748164	Turnaround Assembly - Fixer or Wash	3-13
748165	Fixer Rack Assembly	1-2, 3-8, 3-11
748516	Thermometer - Digital	1-2, 7-2
748955	Gear - Worm, left hand	4-1
748956	Gear - Worm, right hand	4-1
760476	Tubing - Bulk, 1/2-in. ID	8-2
760477	Tubing - Bulk, 3/4-in. ID	8-2
779002	Tank - Developer	6-1, 6-2
779003	Tank - Fixer	6-1, 6-2
779214	Tube and Tab Assembly	6-2, 8-1
779215	Bracket - Blower Mounting	5-1
779216	Support - Rack	6-7
779501	Capacitor	7-2
779504	Speed Control - Motor	7-2
779506	Relay	7-2

Numerical Index

Part No.	Description	Figure No.
779509	Thermistor	6-1
779510	Transformer	7-2
779513	Switch - STD/EXT	7-1
779516	Main Harness Assembly	7-2
779519	Drive Motor Assembly	4-1
779520	Cable - Drive Motor	7-2
779521	Cable - ED Tach	7-2
779524	Potentiometer Assembly - Dryer Temperature	1-2, 7-2
779526	Filter - QUENCHARC	7-2
779527	Diode	7-2
7B8229	Screw - Captive, and washer	1-1
7B8547	Relay - Solid State	7-2
834692	Knob - Temperature Control, with pointer	1-2
852558	Setscrew	4-1
852611	Washer	1-2, 3-1, 3-2, 3-3, 3-4, 3-5, 3-6, 3-7, 3-8, 3-9, 3-12, 3-15, 3-16, 5-1, 8-1
852618	Nut	8-1
852620	Nut	1-1
852621	Nut	4-1
852623	Nut - Hook	1-2
852682	Screw	1-1, 1-2, 3-1, 3-2, 3-3, 3-5, 3-8, 3-12, 3-13, 5-1
852683	Screw	4-1, 6-6, 6-7, 8-1
852799	Washer	1-1, 4-1, 5-1, 6-3, 6-5, 6-7, 8-1
852805	Screw	1-1
852807	Screw	3-1, 3-2, 3-7, 3-8, 3-9, 3-12, 3-13, 5-1, 8-1
852831	Washer	7-1
852835	Screw	7-2
852871	Screw	3-16
852888	Screw	5-1
852889	Setscrew	3-7, 3-8
852941	Screw	3-1, 3-2, 3-4, 3-5, 3-6
852946	Screw	6-5
852972	Screw	3-4, 3-6, 3-7, 3-9, 3-10, 3-11, 3-12, 3-14, 3-16
853000	Pin	4-1
853011	Washer	4-1
853080	Nut	3-12, 8-1
853086	Washer - Lock	1-1

Numerical Index

Part No.	Description	Figure No.
853087	Washer - Lock	3-1, 3-2, 3-3, 3-4, 3-5, 3-6, 3-7, 3-8, 3-9, 3-12, 3-15, 3-16
853096	Washer - Lock	1-1, 3-1, 3-2, 7-1
853100	Washer - Lock	1-1, 1-2, 5-1, 8-1
853136	Nut	4-1
853165	Screw	4-1
8B6581	Roller	3-10
8B6803	Guard - Overtemperature	5-1
8B7080	Header - Thermowell	6-3
8B7305	Turnaround Adjustment Tool	3-7, 3-12
911804	Roller	3-7
911809	Sideplate - Drive	3-7, 3-8, 3-10, 3-11
911845	Sideplate - Nondrive	3-7, 3-8, 3-10, 3-11
911849	Chain - Drive	4-1
914260	Exit Panel	1-2
914261	Cover Assembly	1-1
914263	Side Panel	1-1, 1-2
914265	Turnaround Assembly - Developer	3-12
914270	300 Circuit Board	7-2
914271	200 Circuit Board	7-2
914272	100 Circuit Board	7-2
914375	Clamp	8-1
914441	Circuit Breaker - CB1	1-2, 7-2
914471	Chain	7-2
914565	Plate - Nut	7-1
914568	Tube	6-1
943700	Insert - Quick Release, male	6-1, 6-2, 6-4
963312	Magnet	1-1
963315	Motor Assembly - M35-M Processor	6-6
963316	Crank Assembly	6-6
963317	Screw	6-6
968818	Bezel	1-2, 7-2
968819	Mask	1-2, 7-2
968823	EMI Shield	1-2, 7-2
990305	Shoe - Guide	3-5, 3-6
990308	Shoe - Guide	3-5, 3-6
990400	Fitting	6-4
990401	Fitting - Quick Release, female	6-1, 6-2, 6-4
990402	Recirculation Pump Assembly - M35-M Processor	6-1, 6-2, 6-5
990403	Recirculation Pump Assembly - M35A-M Processor	6-1, 6-2, 6-5
990415	Fitting - Small	6-4
990416	Fitting - Large	6-1, 6-4
990417	Nut	6-1, 6-4

Numerical Index

Part No.	Description	Figure No.
990418	Nut - Gland	6-4
990419	Nut	6-4
990421	Panel - Feed End	1-1

Section 10: Alphabetical Parts Index

Alphabetical Index

Part No.	Description	Figure No.
914272	100 Circuit Board	7-2
914271	200 Circuit Board	7-2
914270	300 Circuit Board	7-2
696174	800 Circuit Board and Cable Assembly	8-1
650876	Actuator - Magnet	3-1, 3-2
459681	Adapter	8-4
532033	Adapter	6-3
556104	Adapter	6-2
468535	Adapter - Exhaust	1-1
480978	Adapter - Pump Intake	6-6
261929	Anchor	8-5
240060	Bearing	3-3, 3-4
490092	Bearing	3-3, 3-4
532054	Bearing	3-15
543993	Bearing	3-15
571241	Bearing	3-15
595426	Bearing	4-1
650701	Bearing	3-5, 3-6, 3-9
650702	Bearing	3-9, 3-12, 3-13
650703	Bearing	3-1, 3-2, 3-5, 3-6
650707	Bearing	3-1, 3-2
650710	Bearing	3-7, 3-8
5B6527	Bearing - Rocker	3-1, 3-2
532008	Bellows - Pump	6-6
968818	Bezel	1-2, 7-2
261183	Bin - Receiving	1-2
187296	Block - Terminal	7-2
480206	Block - Terminal	7-2
485766	Block - Terminal	7-2
594752	Block - Terminal	7-2
651864	Blower Assembly - M35-M Processor	5-1
240225	Blower Assembly - M35A-M Processor	5-1
532007	Body - Valve	6-6
489726	Bolt - Hook	1-2
188623	Bolt - Stainless Steel	8-5
240104	Bracket	8-5
532390	Bracket	6-6
779215	Bracket - Blower Mounting	5-1
474596	Bracket - Guide Shoe	3-1, 3-2, 3-3, 3-4, 3-5, 3-6, 3-12, 3-13
287730	Bracket - Water Inlet	6-2
1C7911	Bushing	6-1
473220	Bushing	3-7, 3-8
651853	Buzzer	7-2

Alphabetical Index

Part No.	Description	Figure No.
779520	Cable - Drive Motor	7-2
779521	Cable - ED Tach	7-2
651865	Cable Assembly	6-5
603538	Capacitor	6-5
779501	Capacitor	7-2
562790	Cartridge - Filter	8-2
458240	Chain	3-7, 3-8, 3-9
914471	Chain	7-2
911849	Chain - Drive	4-1
914441	Circuit Breaker - CB1	1-2, 7-2
696088	Circuit Breaker - CB2	7-2
579424	Circuit Breaker - CB3	7-1
246800	Clamp	6-1, 6-2
246806	Clamp	5-1
914375	Clamp	8-1
246808	Clamp - Large	6-1, 6-2
246801	Clamp - Small	6-1, 6-2
1C7316	Clip	8-1
261181	Clip - Retaining	1-1
1C7317	Clip - Rack End	8-1
459347	Collar	3-7, 3-8
482273	Collar	3-15
594838	Cone	6-6
180281	Connector - Tee	6-1
464937	Connector - Tee	6-1
477011	Connector - Y	6-1
472477	Control - Flow	6-2
287695	Cover - Dryer, bottom	3-14
287696	Cover - Dryer, top	3-14
287680	Cover - Evaporation	1-1
333975	Cover - Pump Access	1-2
485391	Cover - Receiving End	8-1
520397	Cover - Splash	6-6
914261	Cover Assembly	1-1
963316	Crank Assembly	6-6
479821	Cylinder - Graduated	8-2
261185	Deflector	1-2
5B6163	Detector Crossover Assembly	1-2, 3-1, 3-2
1C7315	Developer Rack Assembly	1-2, 3-7, 3-10
333795	Developer/Fixer Crossover Assembly	1-2, 3-3, 3-4
779527	Diode	7-2
779519	Drive Motor Assembly	4-1
333796	Dryer Rack Assembly	1-2, 3-14
968823	EMI Shield	1-2, 7-2
484691	ESD Jack Assembly	7-2
520390	Elbow	6-6
551400	Elbow	6-2
579383	Elbow	6-1, 6-2

Alphabetical Index

Part No.	Description	Figure No.
240733	Elbow - Exhaust	8-2
287053	Exchanger - Heat	6-1, 6-2, 6-4
914260	Exit Panel	1-2
438869	Fan	7-2
520381	Fan	6-6
480366	Fastener	3-14
486742	Fastener - Bin	1-2
1C4506	Feed Shelf Assembly	1-1
651851	Filter - EMI	7-2, 8-1
779526	Filter - QUENCHARC	7-2
536827	Filter Assembly	6-1, 8-2
1C7912	Fitting	6-1
492578	Fitting	8-4
990400	Fitting	6-4
5B6300	Fitting - D, Recirculation	6-1, 6-4
990416	Fitting - Large	6-1, 6-4
990401	Fitting - Quick Release, female	6-1, 6-2, 6-4
990415	Fitting - Small	6-4
748165	Fixer Rack Assembly	1-2, 3-8, 3-11
261276	Fixer/Wash Crossover Assembly	1-2, 3-5, 3-6
287731	Foam	8-1
287741	Foam	8-1
473141	Fuse - 2 Amp	7-2
176049	Fuse - 4 Amp	7-2
581241	Gasket	6-1, 6-4
594535	Gasket	6-1, 6-2
650939	Gasket	8-2
458384	Gear	3-9
482275	Gear	3-15
532165	Gear	3-15
550774	Gear - Drive	3-7, 3-8, 3-9
550781	Gear - Drive, crossover	3-1, 3-3, 3-5
748955	Gear - Worm, left hand	4-1
748956	Gear - Worm, right hand	4-1
287728	Guard - Chain	4-1
484690	Guard - Circuit Board	8-1
484668	Guard - Fan	6-6
8B6803	Guard - Overtemperature	5-1
287684	Guard - Splash	8-2
418739	Guide - Cup	6-6
287682	Guide - Exit	8-1
287018	Guide Rod Assembly	3-10, 3-11
484688	Handle	1-1
485291	Handle - Support	1-1
8B7080	Header - Thermowell	6-3
651862	Heater - M35-M Processor	6-3
485399	Heater - M35A-M Processor	6-3
651892	Heater Element Assembly - M35-M Processor	5-1

Alphabetical Index

Part No.	Description	Figure No.
484689	Heater Element Assembly - M35A-M Processor	5-1
476330	Holder - Fuse	7-2
1C7323	Hose	6-1
264425	Hose - Exhaust	5-1
418700	Housing	6-5
472605	Housing - L.H.	6-5
472606	Housing - R.H.	6-5
418701	Housing and Impeller Assembly	6-5
474362	Impeller	6-5
943700	Insert - Quick Release, male	6-1, 6-2, 6-4
594466	Jack - Miniloader	7-1
452044	Key	3-1, 3-3, 3-5
454354	Key	3-7, 3-8, 3-9
261650	Kit - Flow Control Valve	6-2
419779	Kit - Replenishment Pump Timer	7-2
5B6302	Kit - Tubing	6-1, 6-2
595860	Knob - Locking	1-2
834692	Knob - Temperature Control, with pointer	1-2
719490	Kodak Corporate Symbol	1-2
246558	KODAK M35/M35A X-OMAT Lighttight Feed Tray	8-3
470363	Label	1-1
607793	Locator - Heater	6-3
598808	Lug - Ground	7-2
963312	Magnet	1-1
779516	Main Harness Assembly	7-2
968819	Mask	1-2, 7-2
963315	Motor Assembly - M35-M Processor	6-6
474881	Motor Assembly - M35A-M Processor	6-6
185101	Nipple	6-2
480130	Nut	6-6
482283	Nut	3-16
852618	Nut	8-1
852620	Nut	1-1
852621	Nut	4-1
853080	Nut	3-12, 8-1
853136	Nut	4-1
990417	Nut	6-1, 6-4
990419	Nut	6-4
246001	Nut - Coupling	6-6
990418	Nut - Gland	6-4
852623	Nut - Hook	1-2
472755	Nut - Tie Rod, nylon	3-2, 3-4, 3-6
472756	Nut - Tie Rod, nylon	3-1, 3-3, 3-5
144097	Nut - Wing	6-5
182391	O-Ring	3-15
183851	O-Ring	3-15
463363	O-Ring	6-5
463950	O-Ring	3-9

Alphabetical Index

Part No.	Description	Figure No.
473085	O-Ring	3-15
520388	O-Ring	6-6
535639	O-Ring	6-6
539138	O-Ring	6-7
539152	Orifice - 0.209 ID	6-2
539151	Orifice - 0.250 ID	6-1
594795	Overtemperature - Dryer Thermostat, safety	5-1
469403	Pad - Motor	6-5
990421	Panel - Feed End	1-1
175381	Pin	3-9
543884	Pin	3-15
543891	Pin	3-15
544081	Pin	3-3
853000	Pin	4-1
570450	Plate	4-1
1C7632	Plate - Double Lock Mounting	3-12
261898	Plate - Floor	8-5
459548	Plate - Floor	1-2
473221	Plate - Keeper	3-7, 3-8
1C7988	Plate - Locking	3-12, 3-13
914565	Plate - Nut	7-1
287697	Plenum	3-14
779524	Potentiometer Assembly - Dryer Temperature	1-2, 7-2
240226	Power Cord Assembly	1-2, 8-3
1C4507	Protector	1-1
264339	Receptacle - Safelight	7-1
419787	Receptacle - Wall	8-3
990402	Recirculation Pump Assembly - M35-M Processor	6-1, 6-2, 6-5
990403	Recirculation Pump Assembly - M35A-M Processor	6-1, 6-2, 6-5
562334	Relay	7-2
779506	Relay	7-2
7B8547	Relay - Solid State	7-2
651861	Replenishment Pump Assembly - M35-M Processor	6-1, 6-2, 6-6
240227	Replenishment Pump Assembly - M35A-M Processor	6-1, 6-2, 6-6
499753	Retainer	1-1, 1-2, 8-1
594837	Rod - Connecting, and bearing	6-6
287002	Rod - Tie	3-7, 3-8, 3-9, 3-12, 3-13
287036	Rod - Tie	3-1, 3-2, 3-3, 3-4, 3-5, 3-6
287676	Rod - Tie	3-16
287689	Rod - Tie	3-16
5B6150	Rod - Tie	3-1, 3-2
1C7554	Roller	3-10, 3-11
1C7555	Roller	3-10, 3-11
1C7556	Roller	3-10, 3-11
1C7558	Roller	3-12, 3-13
1C7633	Roller	3-7

Alphabetical Index

Part No.	Description	Figure No.
1C7636	Roller	3-7, 3-8
1C7640	Roller	3-12
240747	Roller	3-3, 3-4
246917	Roller	3-9
246918	Roller	3-9
287028	Roller	3-8
287032	Roller	3-7, 3-8
287048	Roller	3-5, 3-6
287067	Roller	3-15
287078	Roller	3-15
287081	Roller	3-15
287083	Roller	3-15
287656	Roller	3-15
485406	Roller	3-3, 3-4
5B6077	Roller	3-13
748147	Roller	3-5, 3-6
8B6581	Roller	3-10
911804	Roller	3-7
246882	Roller - Detector, drive	3-1, 3-2
246883	Roller - Detector, driven	3-1, 3-2
1C7557	Roller - Knurled	3-11
165626	Screw	7-1
166856	Screw	3-16
180126	Screw	8-1
183624	Screw	3-7, 3-8, 3-9, 3-10, 3-11, 3-12, 3-13
187235	Screw	6-3
188807	Screw	4-1
190596	Screw	3-12, 3-13
264429	Screw	5-1, 6-5
490096	Screw	3-12, 3-13
490097	Screw	3-12, 3-13
544132	Screw	3-15
544194	Screw	1-1, 3-1, 3-2
575821	Screw	3-1, 3-2
5B6316	Screw	3-1, 3-2, 3-3, 3-4, 3-5, 3-6, 3-12, 3-13
852682	Screw	1-1, 1-2, 3-1, 3-2, 3-3, 3-5, 3-8, 3-12, 3-13, 5-1
852683	Screw	4-1, 6-6, 6-7, 8-1
852805	Screw	1-1
852807	Screw	3-1, 3-2, 3-7, 3-8, 3-9, 3-12, 3-13, 5-1, 8-1
852835	Screw	7-2

Alphabetical Index

Part No.	Description	Figure No.
852871	Screw	3-16
852888	Screw	5-1
852941	Screw	3-1, 3-2, 3-4, 3-5, 3-6
852946	Screw	6-5
852972	Screw	3-4, 3-6, 3-7, 3-9, 3-10, 3-11, 3-12, 3-14, 3-16
853165	Screw	4-1
963317	Screw	6-6
261180	Screw - Captive, and washer	8-1
261182	Screw - Captive, and washer	1-2
7B8229	Screw - Captive, and washer	1-1
532040	Screw - Cover	7-2
459229	Screw - Leveling	1-2
492260	Seal	6-4
532378	Seal	6-4
473118	Seal - Filter	8-2
554780	Seal - Tank	6-7, 8-1
287683	Seal - Tank Separator	8-1
261413	Seismic Kit	8-5
852558	Setscrew	4-1
852889	Setscrew	3-7, 3-8
287003	Shaft	3-7, 3-8, 3-12, 3-13
287027	Shaft	3-7, 3-8
287037	Shaft	3-1, 3-2, 3-5, 3-6
287047	Shaft	3-5, 3-6
287079	Shaft	3-15
287085	Shaft	3-11, 3-15
287088	Shaft	3-15
287039	Shaft - Drive	3-1, 3-2
482222	Shaft - Drive	4-1
650733	Shim	4-1
287006	Shoe - Guide	3-13
287041	Shoe - Guide	3-1, 3-2
287045	Shoe - Guide	3-3, 3-4, 3-16
287049	Shoe - Guide	3-3, 3-4
990305	Shoe - Guide	3-5, 3-6
990308	Shoe - Guide	3-5, 3-6
1C7635	Shoe - Guide, adjustable	3-12, 3-13
914263	Side Panel	1-1, 1-2
477005	Sideplate	3-3, 3-4, 3-5, 3-6
246879	Sideplate - Detector Crossover	3-1, 3-2
286912	Sideplate - Drive	3-9, 3-10
911809	Sideplate - Drive	3-7, 3-8, 3-10, 3-11

Alphabetical Index

Part No.	Description	Figure No.
490123	Sideplate - Drive Side	3-14, 3-16
286910	Sideplate - Nondrive	3-9, 3-10
911845	Sideplate - Nondrive	3-7, 3-8, 3-10, 3-11
264432	Sideplate - Nondrive Side	3-14, 3-16
1C7630	Sideplate - Turnaround, drive side	3-12, 3-13
1C7631	Sideplate - Turnaround, nondrive	3-12, 3-13
1C7120	Smooth Guide Shoe Kit - M35	3-7, 3-12
183643	Spacer	8-1
240065	Spacer	3-3
456215	Spacer	5-1
458174	Spacer	3-1, 3-5
458205	Spacer	3-7, 3-8, 3-9
458236	Spacer	3-2
459355	Spacer	3-7, 3-8
463004	Spacer	3-7, 3-8, 3-12, 3-13
473538	Spacer	3-9
474100	Spacer	3-9
477092	Spacer	3-7, 3-8
477093	Spacer	3-9
482272	Spacer	3-15
482274	Spacer	3-15
482277	Spacer	3-15
488169	Spacer	4-1
534791	Spacer	3-7, 3-8
5B6775	Spacer	3-12
287691	Spacer - Sideplate, exit	3-14
287692	Spacer - Sideplate, lower entrance	3-14
287694	Spacer - Sideplate, upper entrance	3-14
597096	Spacer - Split	3-9
779504	Speed Control - Motor	7-2
459344	Spring	3-3, 3-4
467843	Spring	3-7, 3-8
474645	Spring	3-12, 3-13
479820	Spring	3-9
562609	Spring	3-16
454285	Sprocket	3-7, 3-8, 3-9
466640	Sprocket - 17 Tooth	4-1
246589	Sprocket - 26 Tooth	4-1
489997	Standoff	3-1, 3-2
472261	Strainer Assembly	8-4
1C4504	Strip - Light Lock	1-2
474777	Stud	3-7, 3-10, 3-11
489727	Stud	3-15
459060	Stud - Air Tube	3-16
474180	Support	3-1, 3-2
482262	Support	3-16

Alphabetical Index

Part No.	Description	Figure No.
495710	Support	3-16
532071	Support	4-1
651890	Support - Bin	8-1
779216	Support - Rack	6-7
595425	Support Assembly	4-1
240514	Switch - Film Detector	7-1
240513	Switch - Interlock	7-1
651860	Switch - Run/Standby	7-1
651875	Switch - Run/Standby	7-2
779513	Switch - STD/EXT	7-1
779002	Tank - Developer	6-1, 6-2
779003	Tank - Fixer	6-1, 6-2
287000	Tank - Wash	6-1, 6-2
651869	Thermistor	6-3
779509	Thermistor	6-1
748516	Thermometer - Digital	1-2, 7-2
651868	Thermostat - Overtemperature	6-3
240059	Tie - Blue	3-8, 6-2
240058	Tie - Red	3-7, 6-1
182915	Tie - Wire	7-1
419780	Timer - Replenishment Pump	7-2
779510	Transformer	7-2
287681	Tray - Drip	8-2
1C7324	Tube	6-1
240002	Tube	6-1
240003	Tube	6-2
240004	Tube	6-1
240005	Tube	6-2
287733	Tube	6-2
287735	Tube	6-1
287736	Tube	6-1
471393	Tube	6-2
488190	Tube	6-1
489788	Tube	6-1, 6-2
527068	Tube	6-1
5B6301	Tube	6-1
914568	Tube	6-1
484674	Tube - Air	3-16
479815	Tube - Elbow, 45-degree	6-1
779214	Tube and Tab Assembly	6-2, 8-1
240494	Tubing - Bulk	8-2
760476	Tubing - Bulk, 1/2-in. ID	8-2
760477	Tubing - Bulk, 3/4-in. ID	8-2
452990	Tubing - Bulk, 3/8-in. ID	8-2
8B7305	Turnaround Adjustment Tool	3-7, 3-12
914265	Turnaround Assembly - Developer	3-12
748164	Turnaround Assembly - Fixer or Wash	3-13
609817	Valve - Poppet	6-6

Alphabetical Index

Part No.	Description	Figure No.
261277	Wash Rack Assembly	1-2, 3-9, 3-10
165627	Washer	1-1, 3-1, 3-2
459343	Washer	3-9, 3-12, 3-13
460626	Washer	7-2
482270	Washer	3-15
482271	Washer	3-15
493505	Washer	6-5
520394	Washer	6-6
532379	Washer	6-4
564694	Washer	1-2
575822	Washer	3-1, 3-2, 8-1
594534	Washer	6-1, 6-2
852611	Washer	1-2, 3-1, 3-2, 3-3, 3-4, 3-5, 3-6, 3-7, 3-8, 3-9, 3-12, 3-15, 3-16, 5-1, 8-1
852799	Washer	1-1, 4-1, 5-1, 6-3, 6-5, 6-7, 8-1
852831	Washer	7-1
853011	Washer	4-1
459943	Washer - Identification	3-7
459944	Washer - Identification	3-8
459945	Washer - Identification	3-9
459946	Washer - Identification	3-3
459947	Washer - Identification	3-5
168424	Washer - Lock	7-2
187283	Washer - Lock	3-1, 3-2, 8-1
433708	Washer - Lock	5-1
535004	Washer - Lock	4-1, 5-1, 6-3, 6-5, 6-7, 8-1
853086	Washer - Lock	1-1
853087	Washer - Lock	3-1, 3-2, 3-3, 3-4, 3-5, 3-6, 3-7, 3-8, 3-9, 3-12, 3-15, 3-16
853096	Washer - Lock	1-1, 3-1, 3-2, 7-1
853100	Washer - Lock	1-1, 1-2, 5-1, 8-1
178145	Washer - Lock	3-16
173824	Washer - Stainless Steel	8-5
463100	Washer - Thrust	3-7, 3-8, 3-9, 3-10, 3-11, 3-12, 3-13
261590	Water Inlet Assembly	6-2
488151	Weir - Beige	6-7
489736	Weir - Blue	6-7
489735	Weir - Red	6-7

Section 11: Publication History

Print Date	Pub. No.	ECO No.	Affected Pages	File Name	Notes
Sept 1992	981902	4014-318	All	3133pl_a.txt	First printing in CAPS. Called PCN 1 and combined M35-M and M35A-M Parts Lists into one publication and the information updated.
Sept 1996	981902	-	All	ip3133_1_a.book(.1 through .11)	Revised to reflect the new size Feed Shelf and to update other illustrations and part numbers. Converted to FrameBuilder.

Kodak and *X-Omat* are trademarks.

ip313311.fm

Printed In USA

Health Imaging

EASTMAN KODAK COMPANY ● ROCHESTER, N.Y. 14650